





BCS Gain vs T_{omm}

14 HAM A SS1

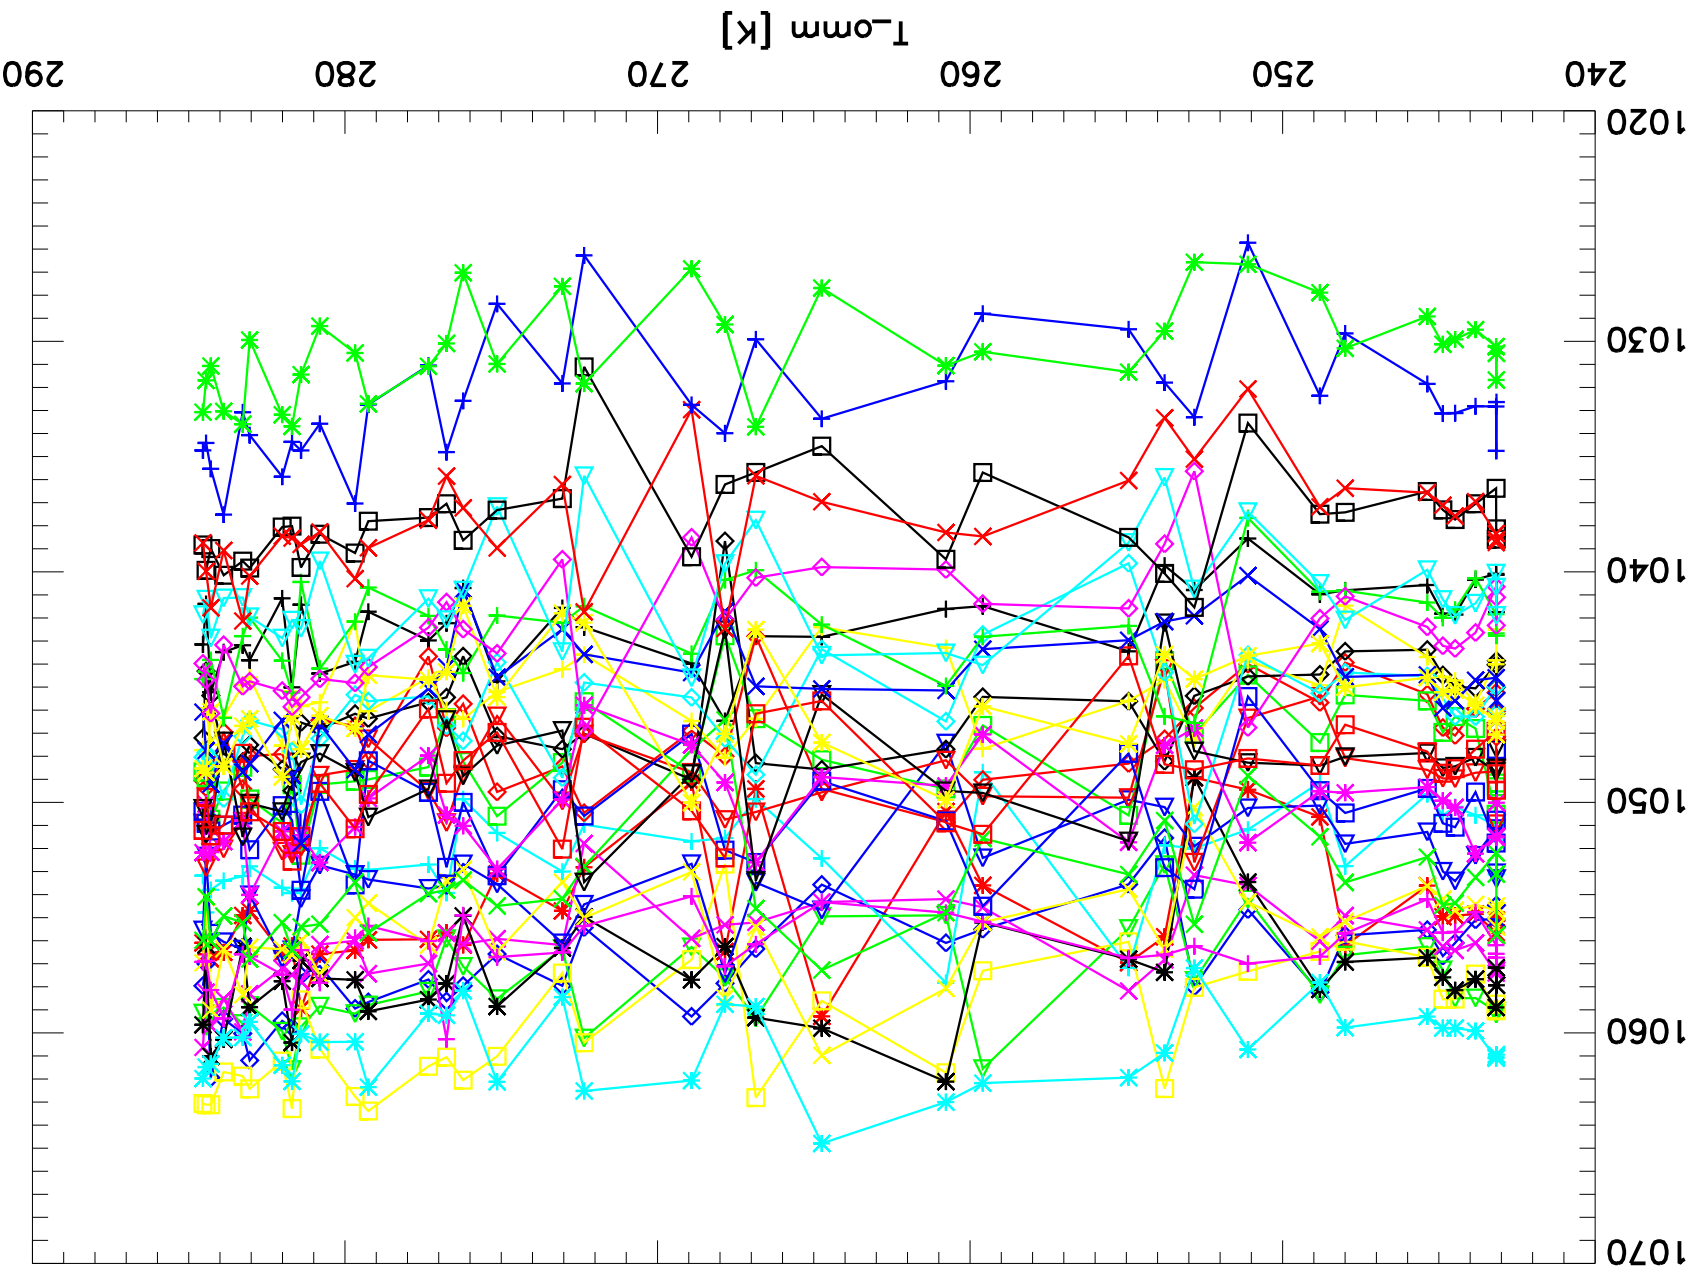


BCS Gain vs T_omm

14 HAM A SS2

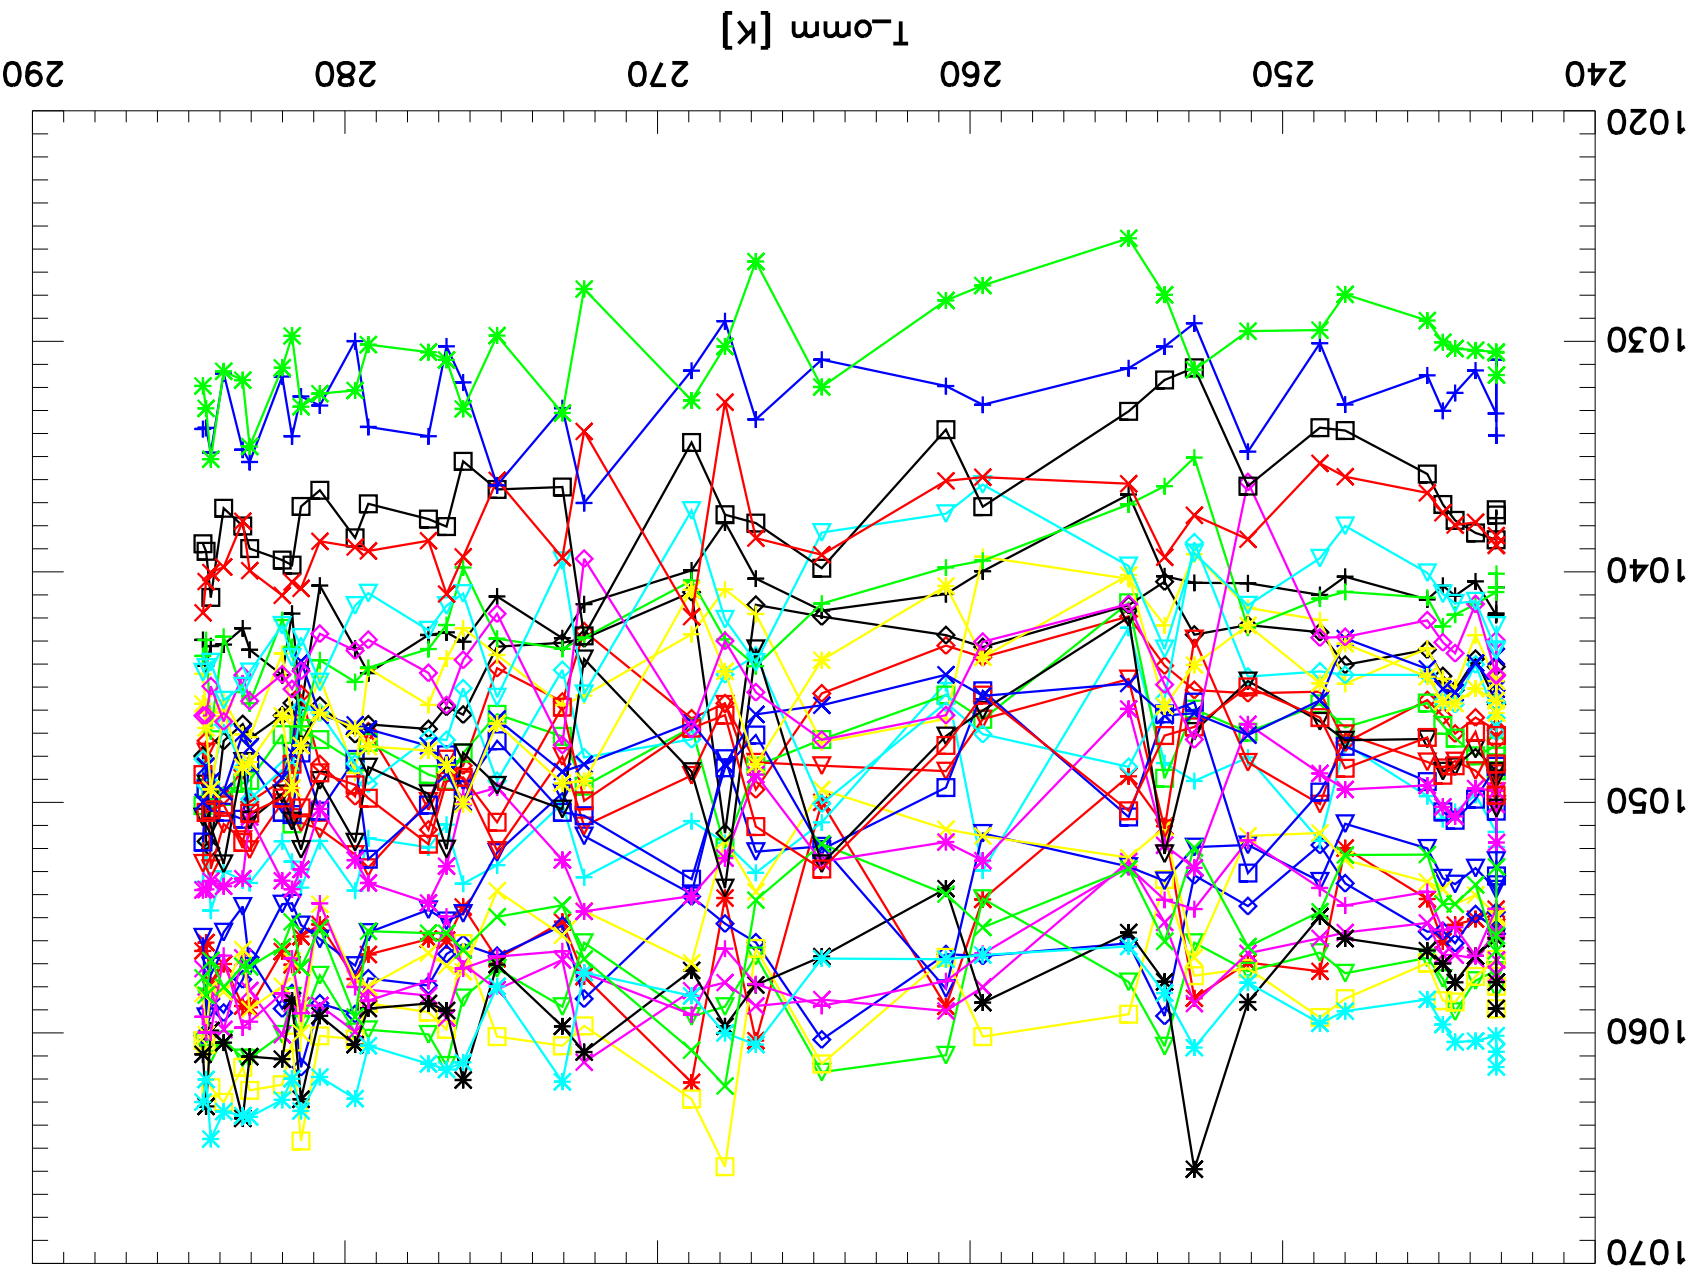



BCS Gain vs T_omm

14 HAM B SS1

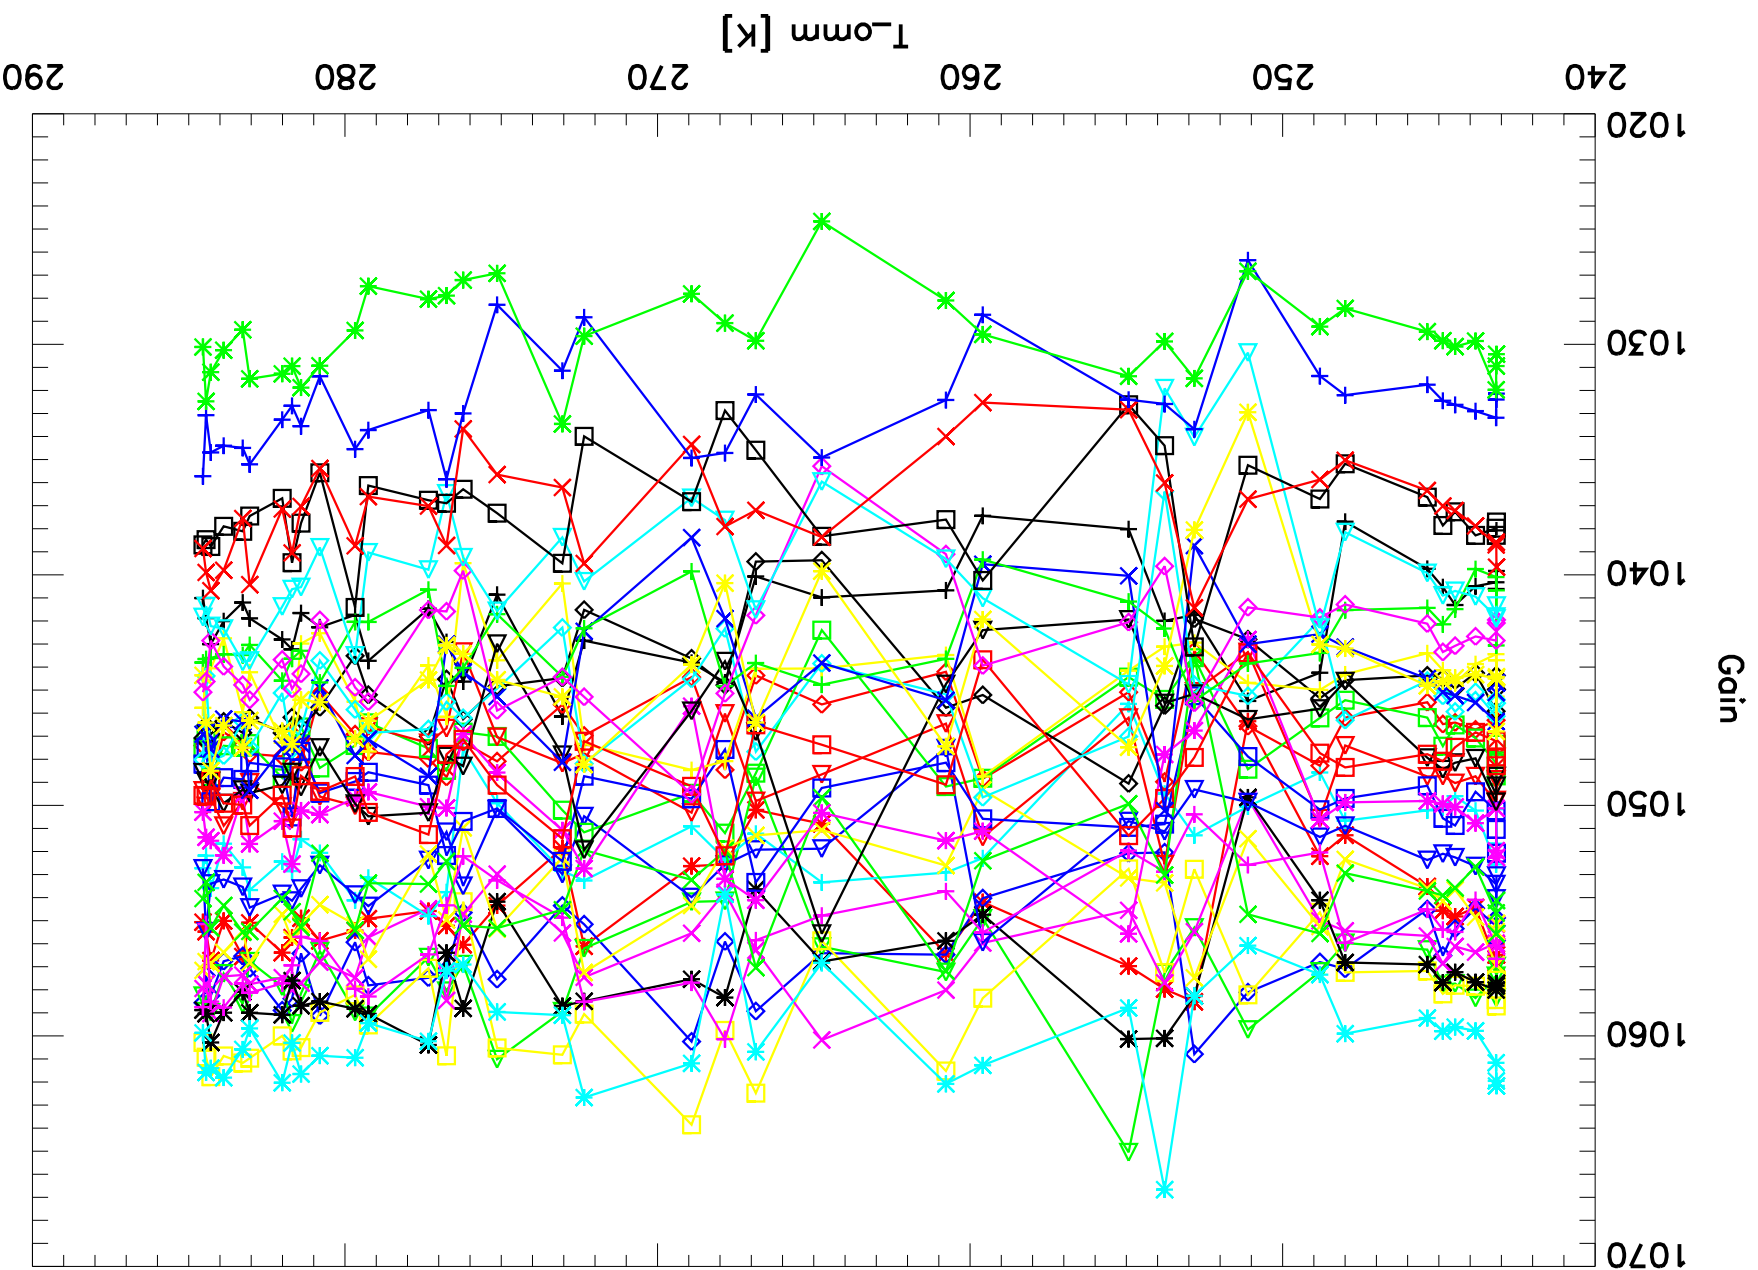


BCS Gain vs T_{omm}

14 HAM B SS2

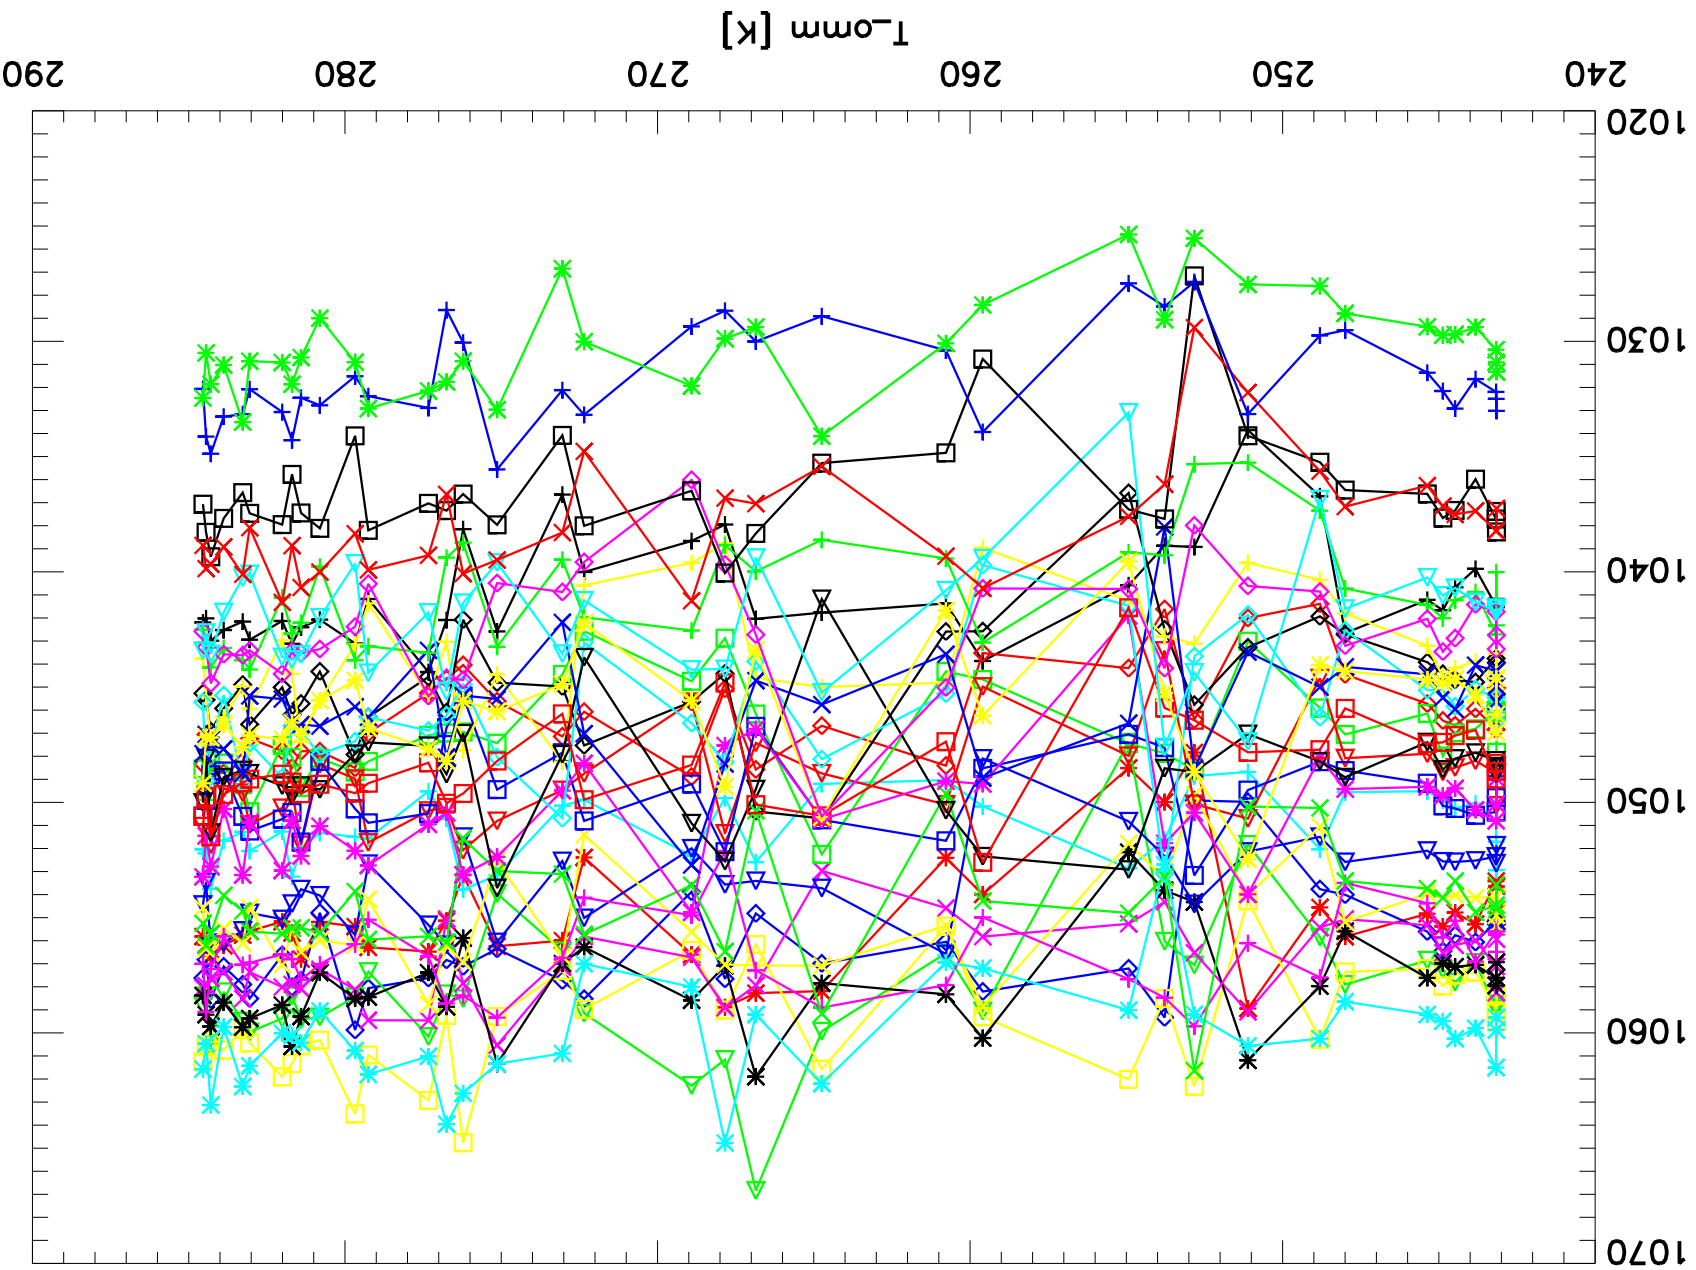



BCS Gain vs T_{omm}

15 HAM A SS1

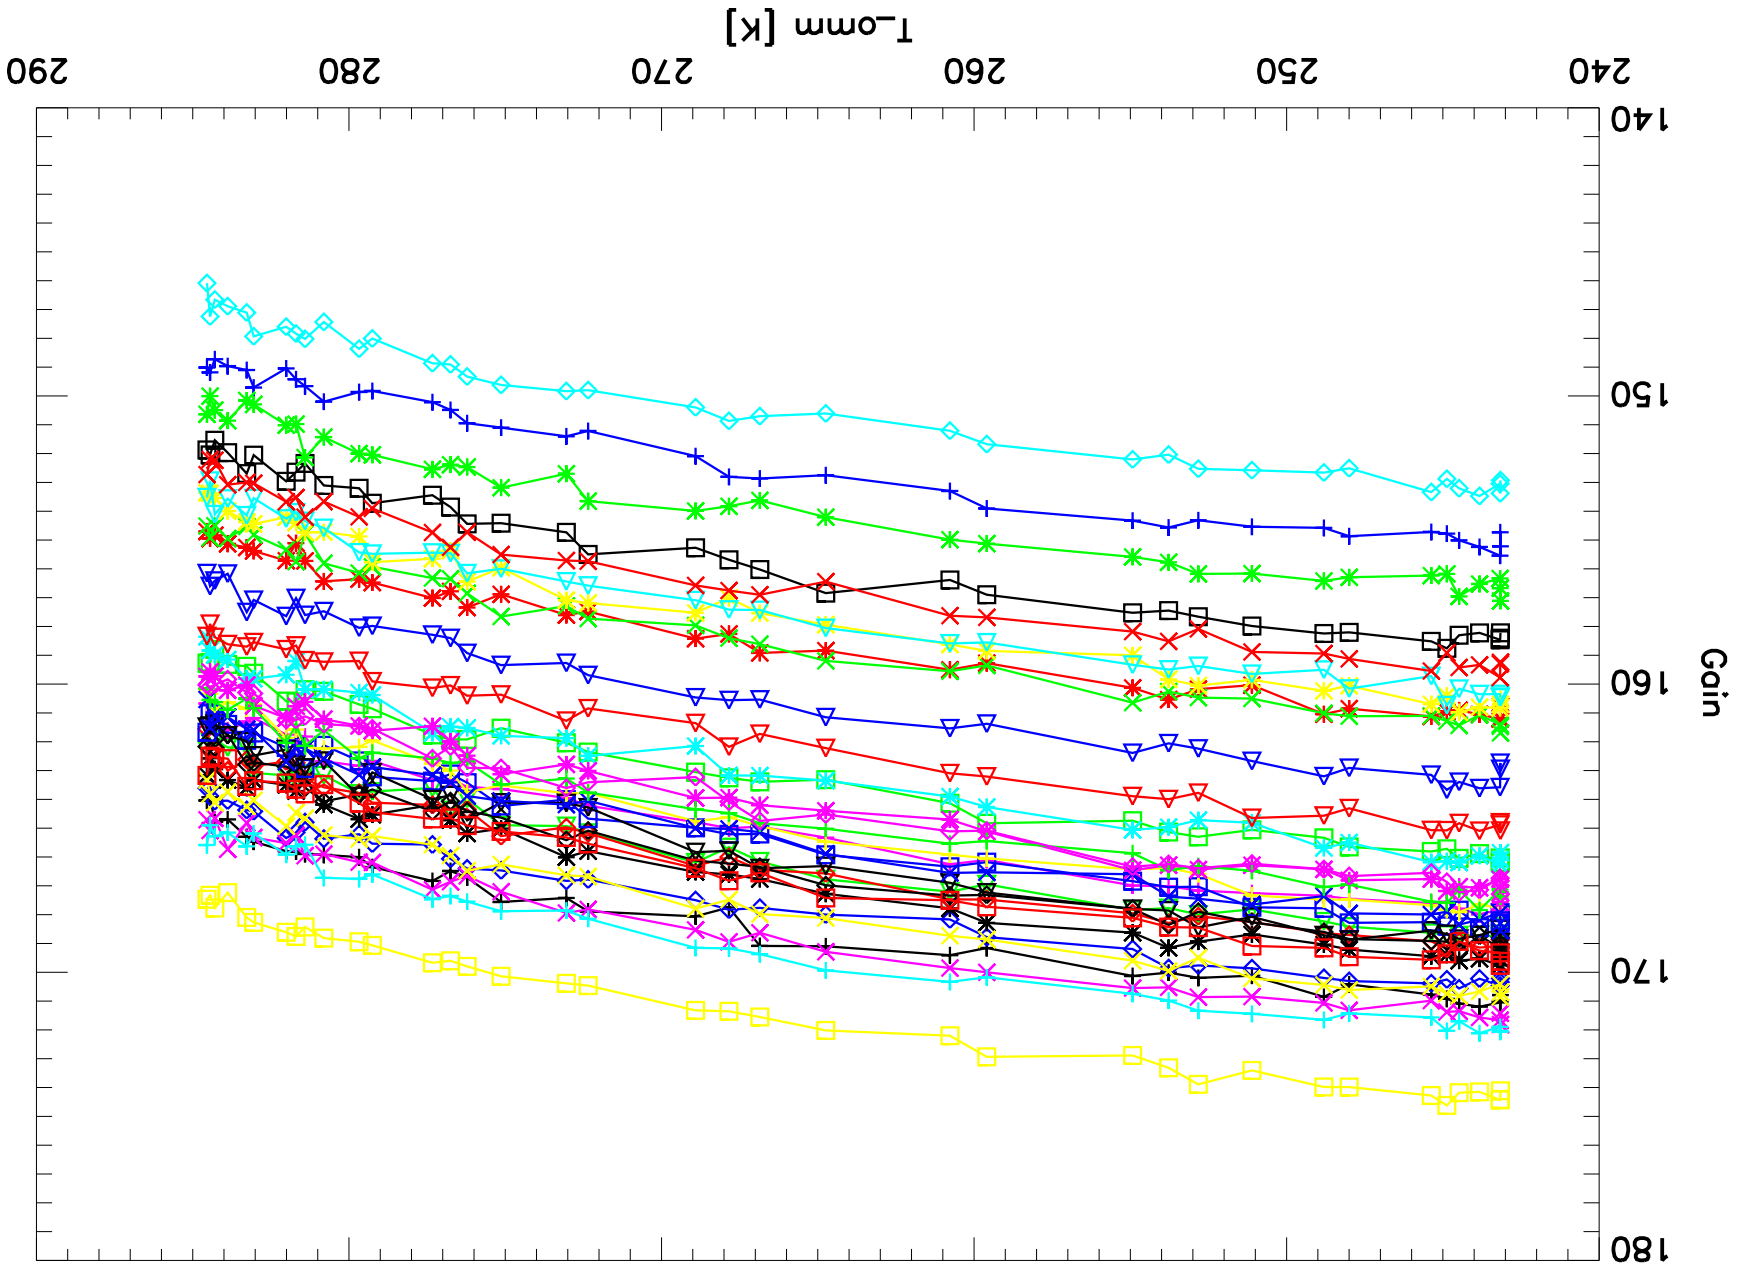


BCS Gain vs T_{0mm}

15 HAM A SS2

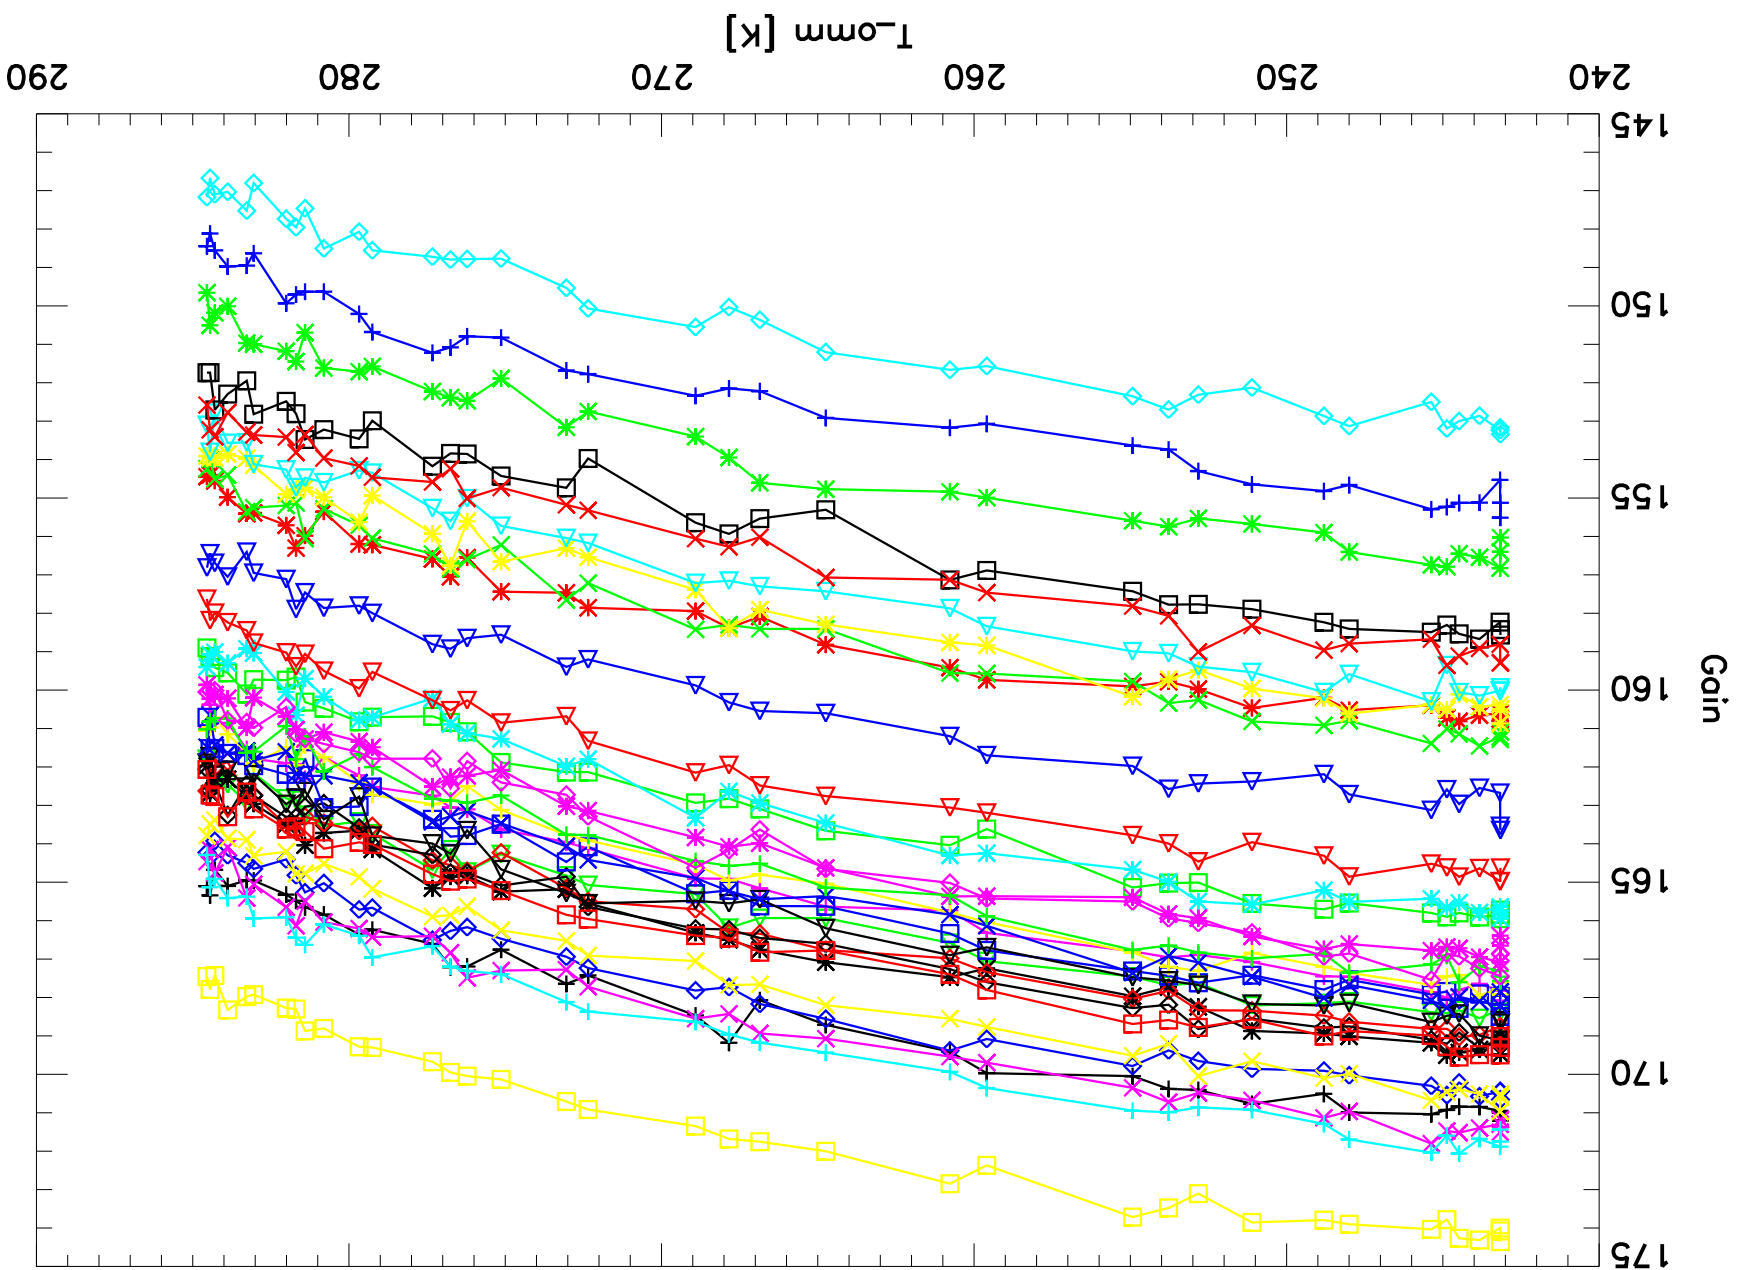


BCS Gain vs T_{0mm}


IS HAM B SS1

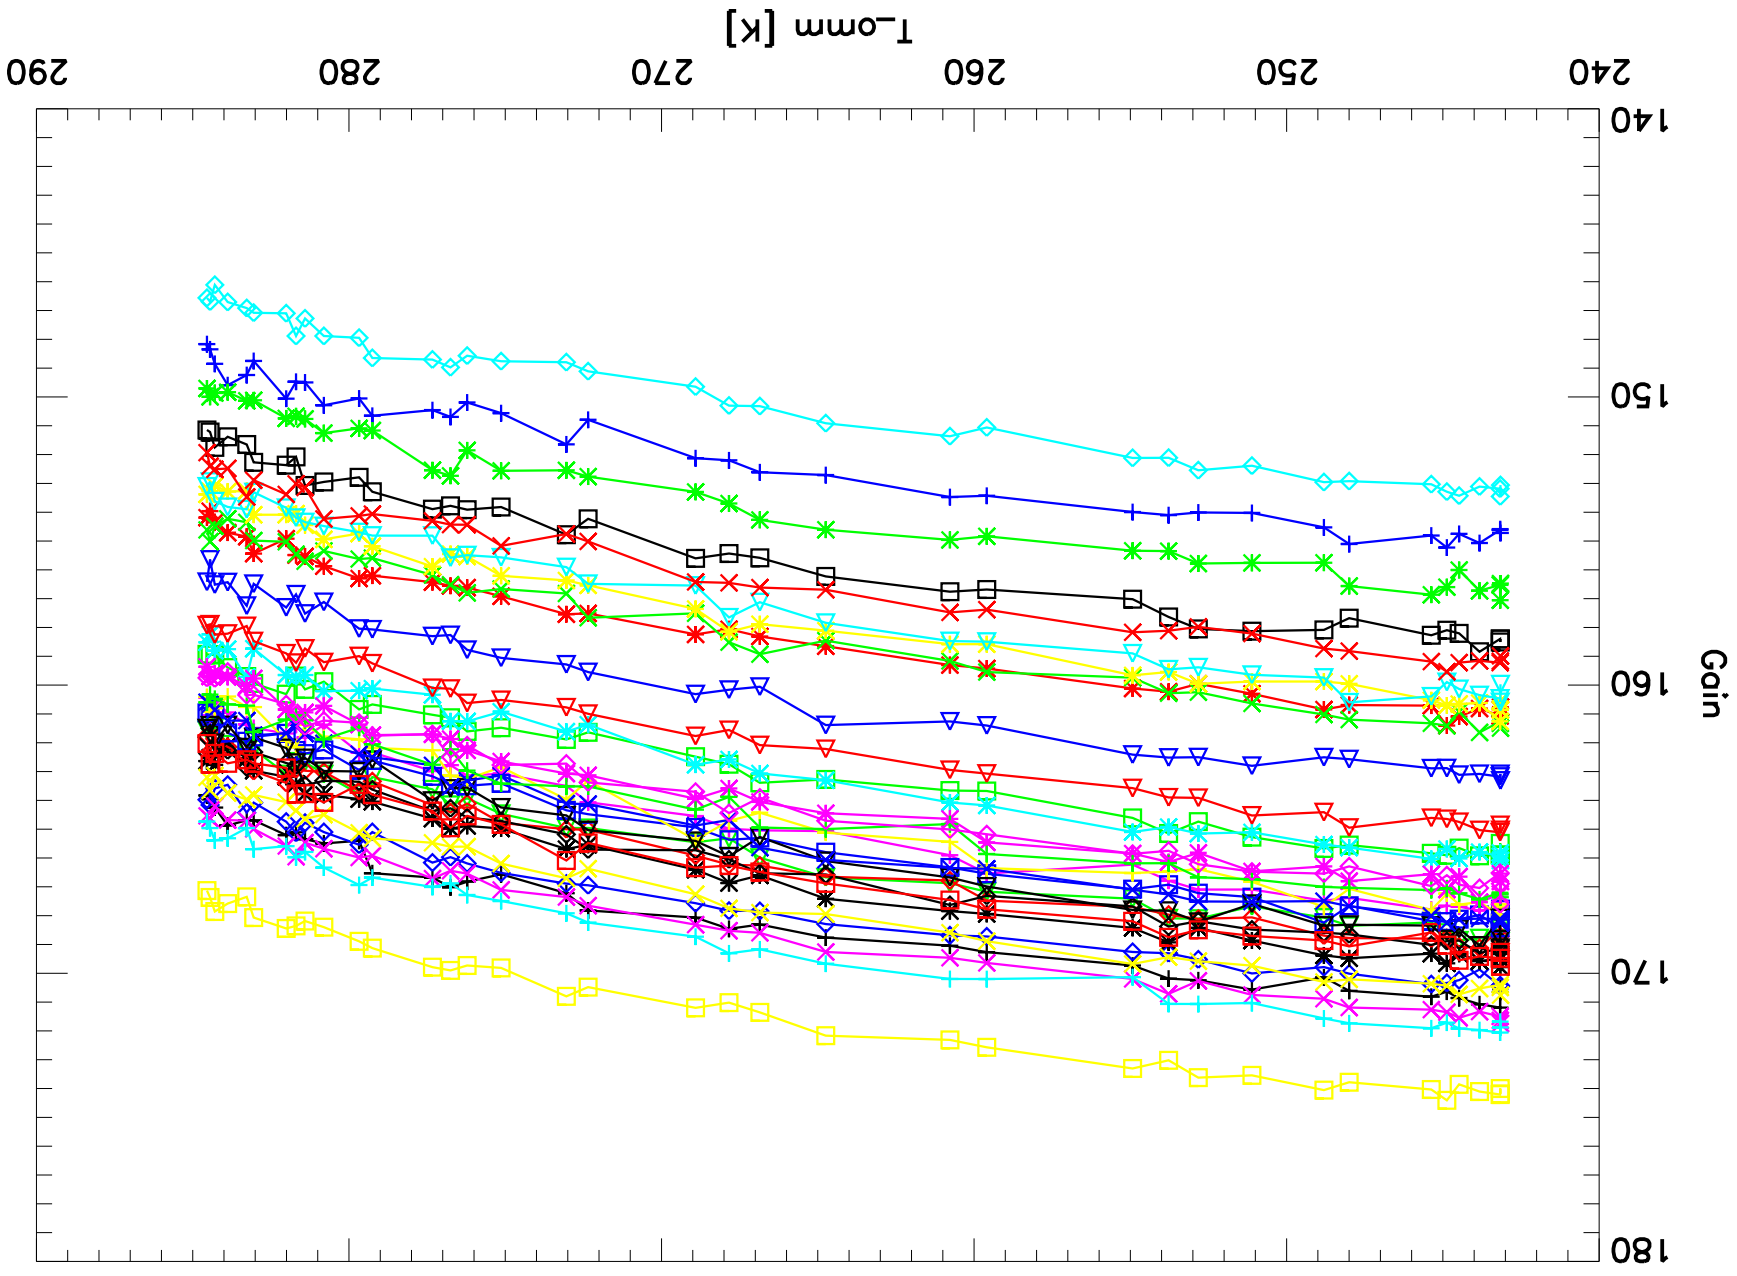



BCS Gain vs T_{0mm}


15 HAM B SS2

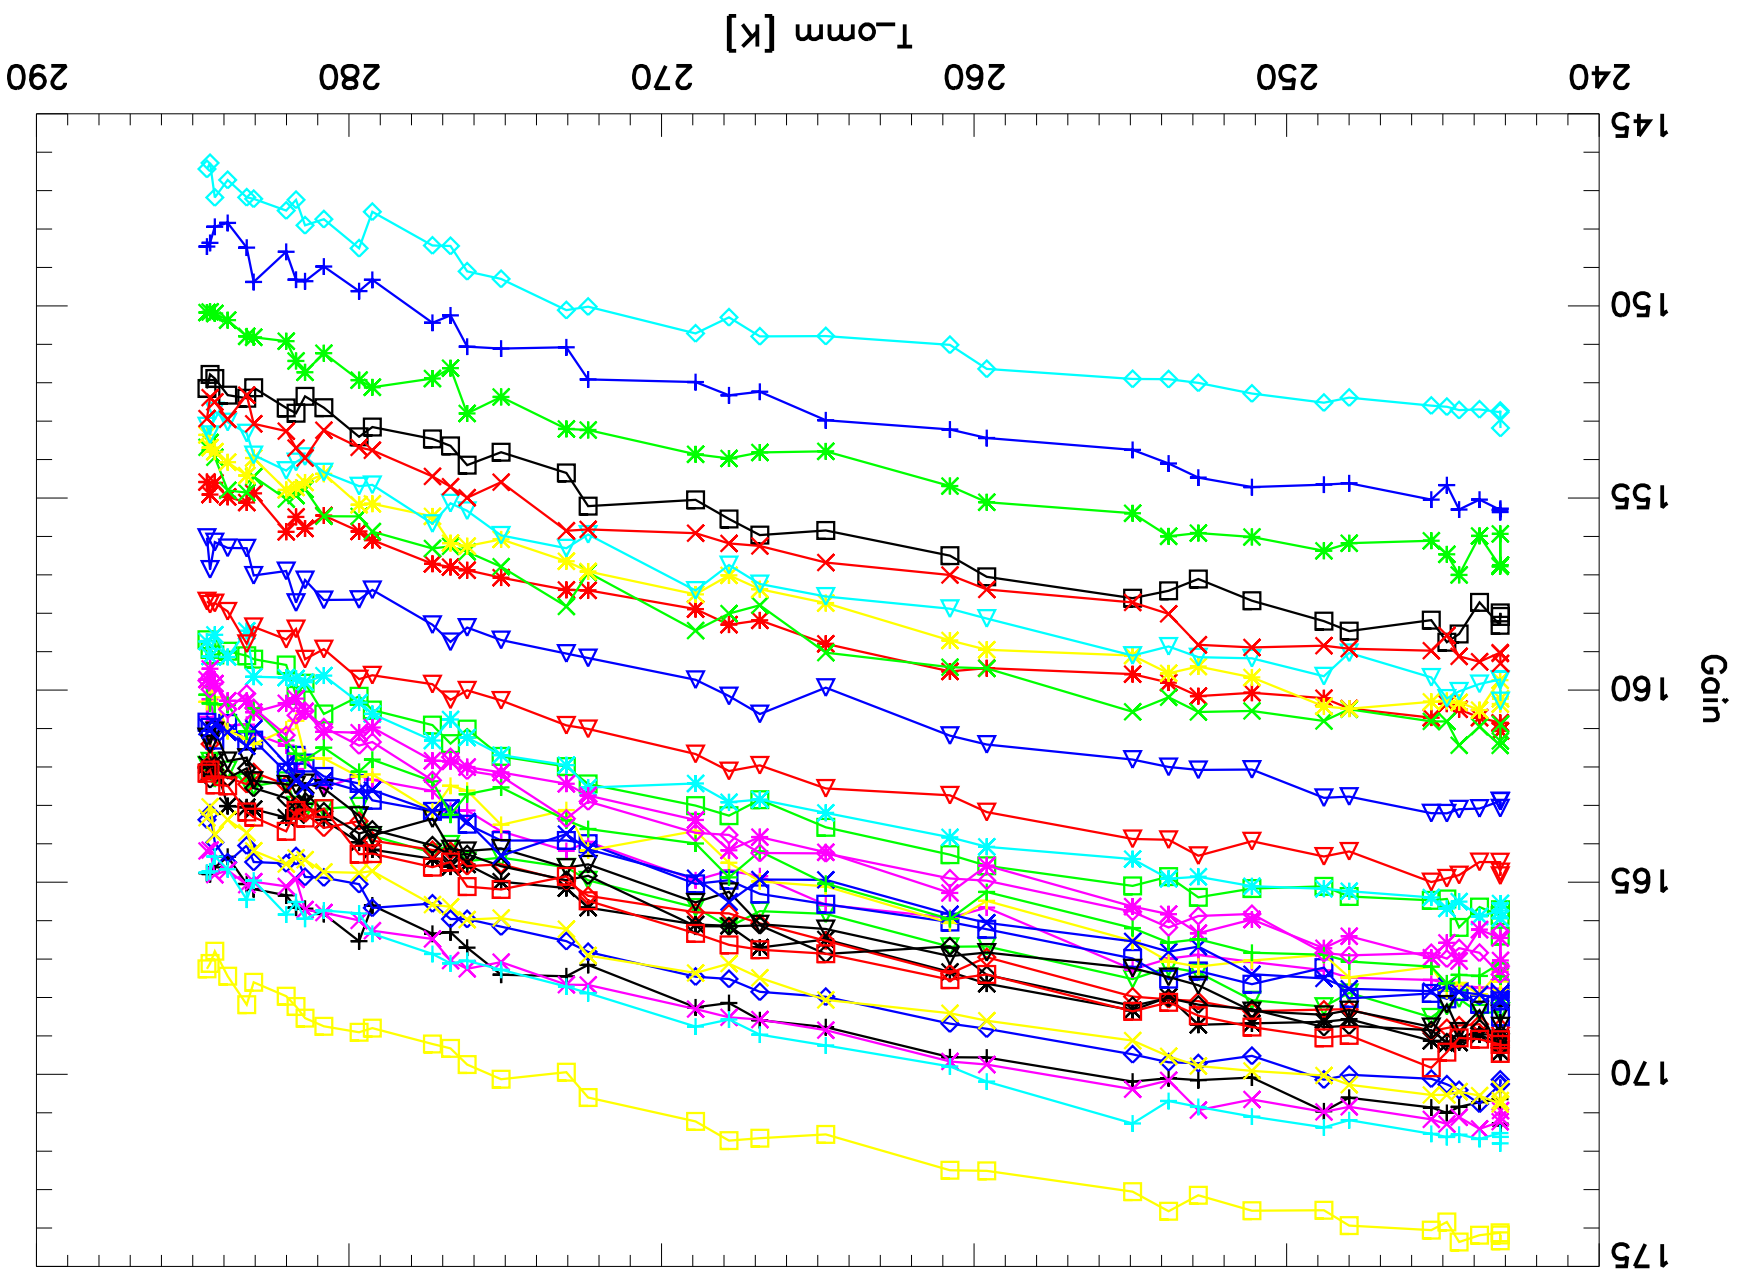


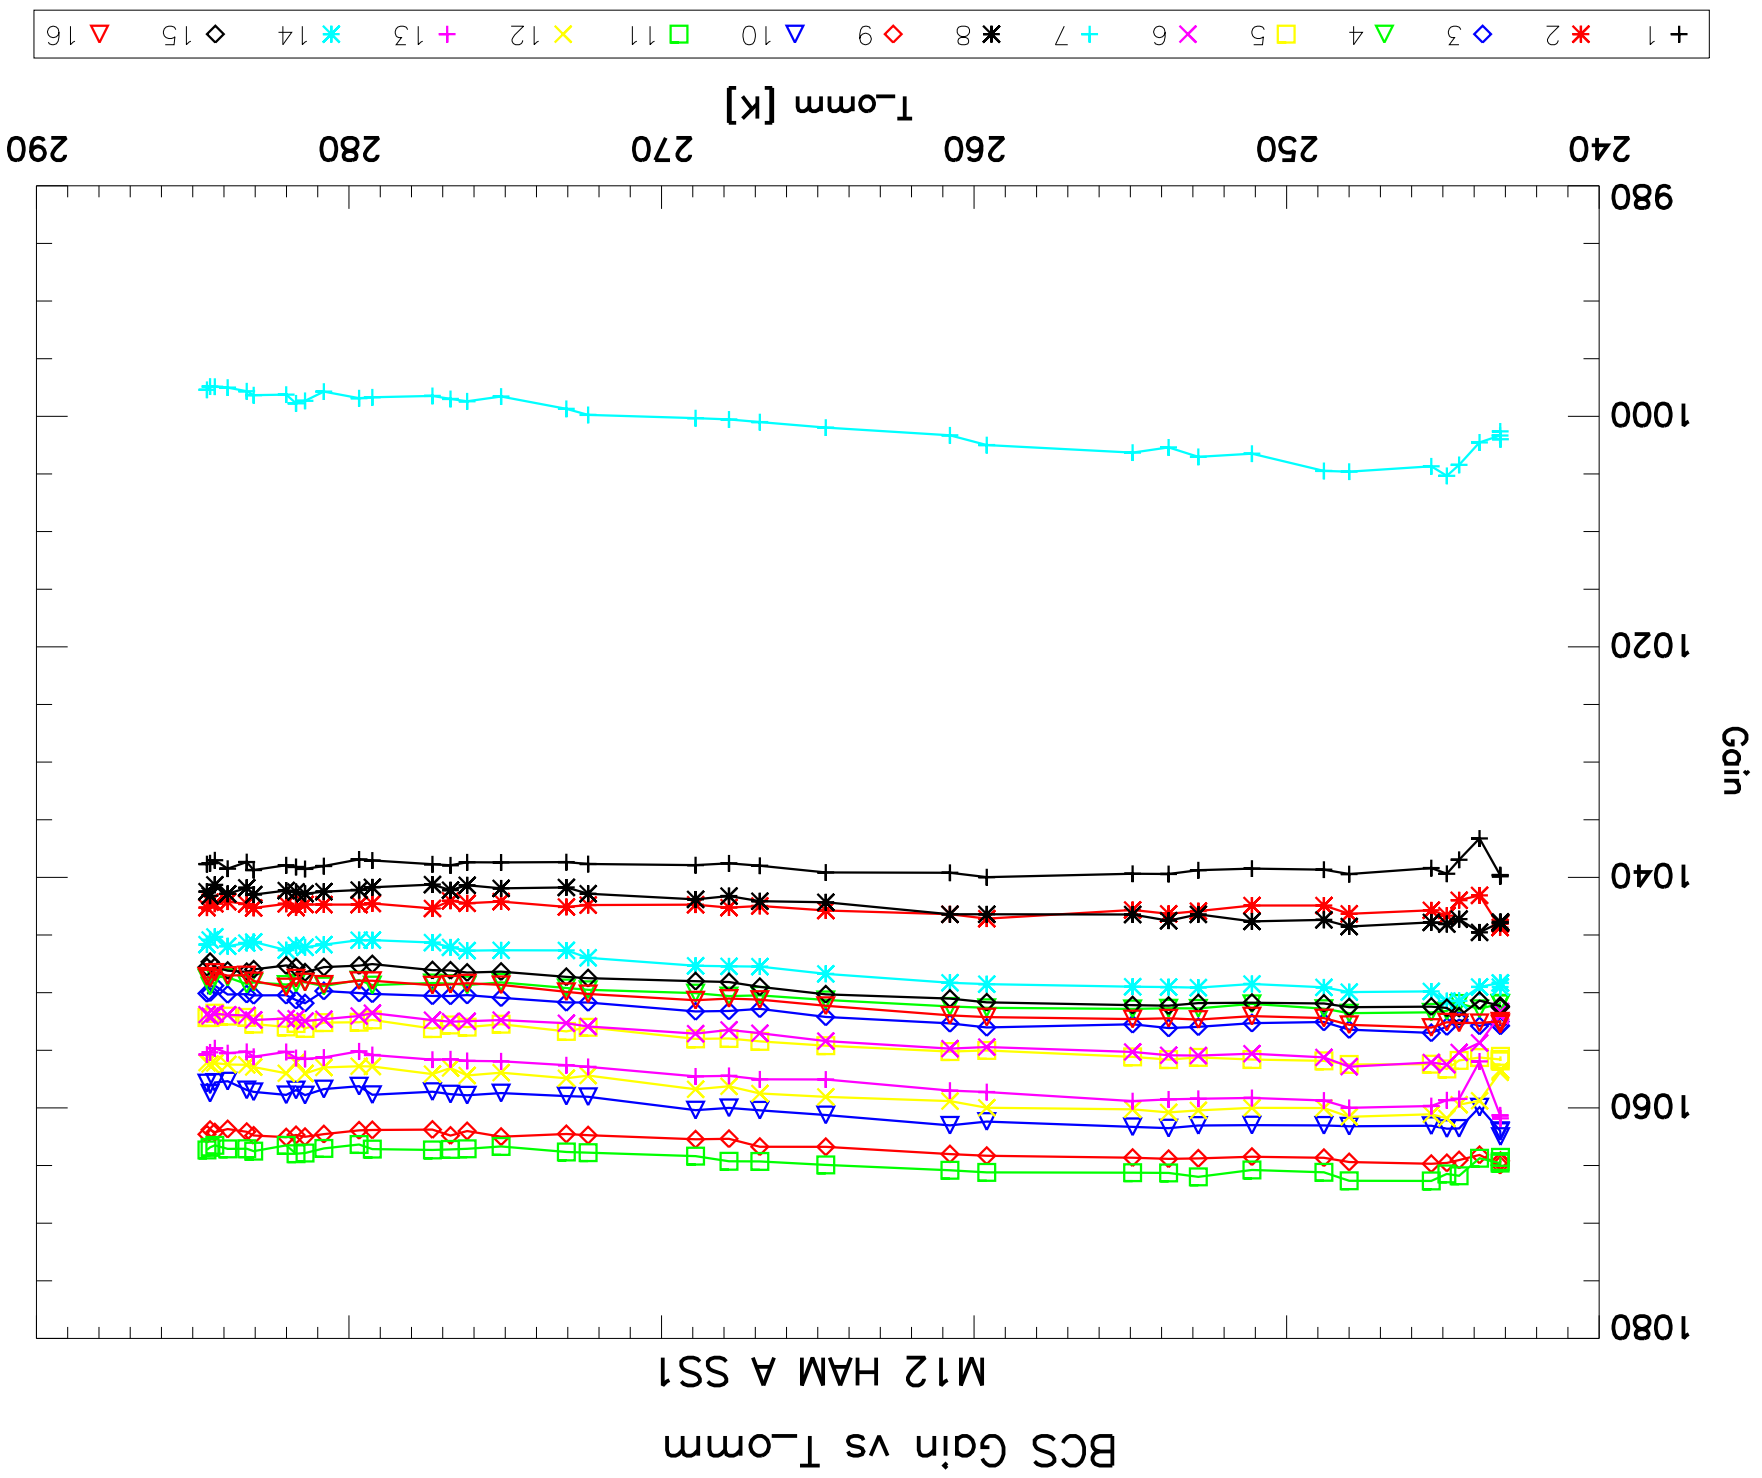


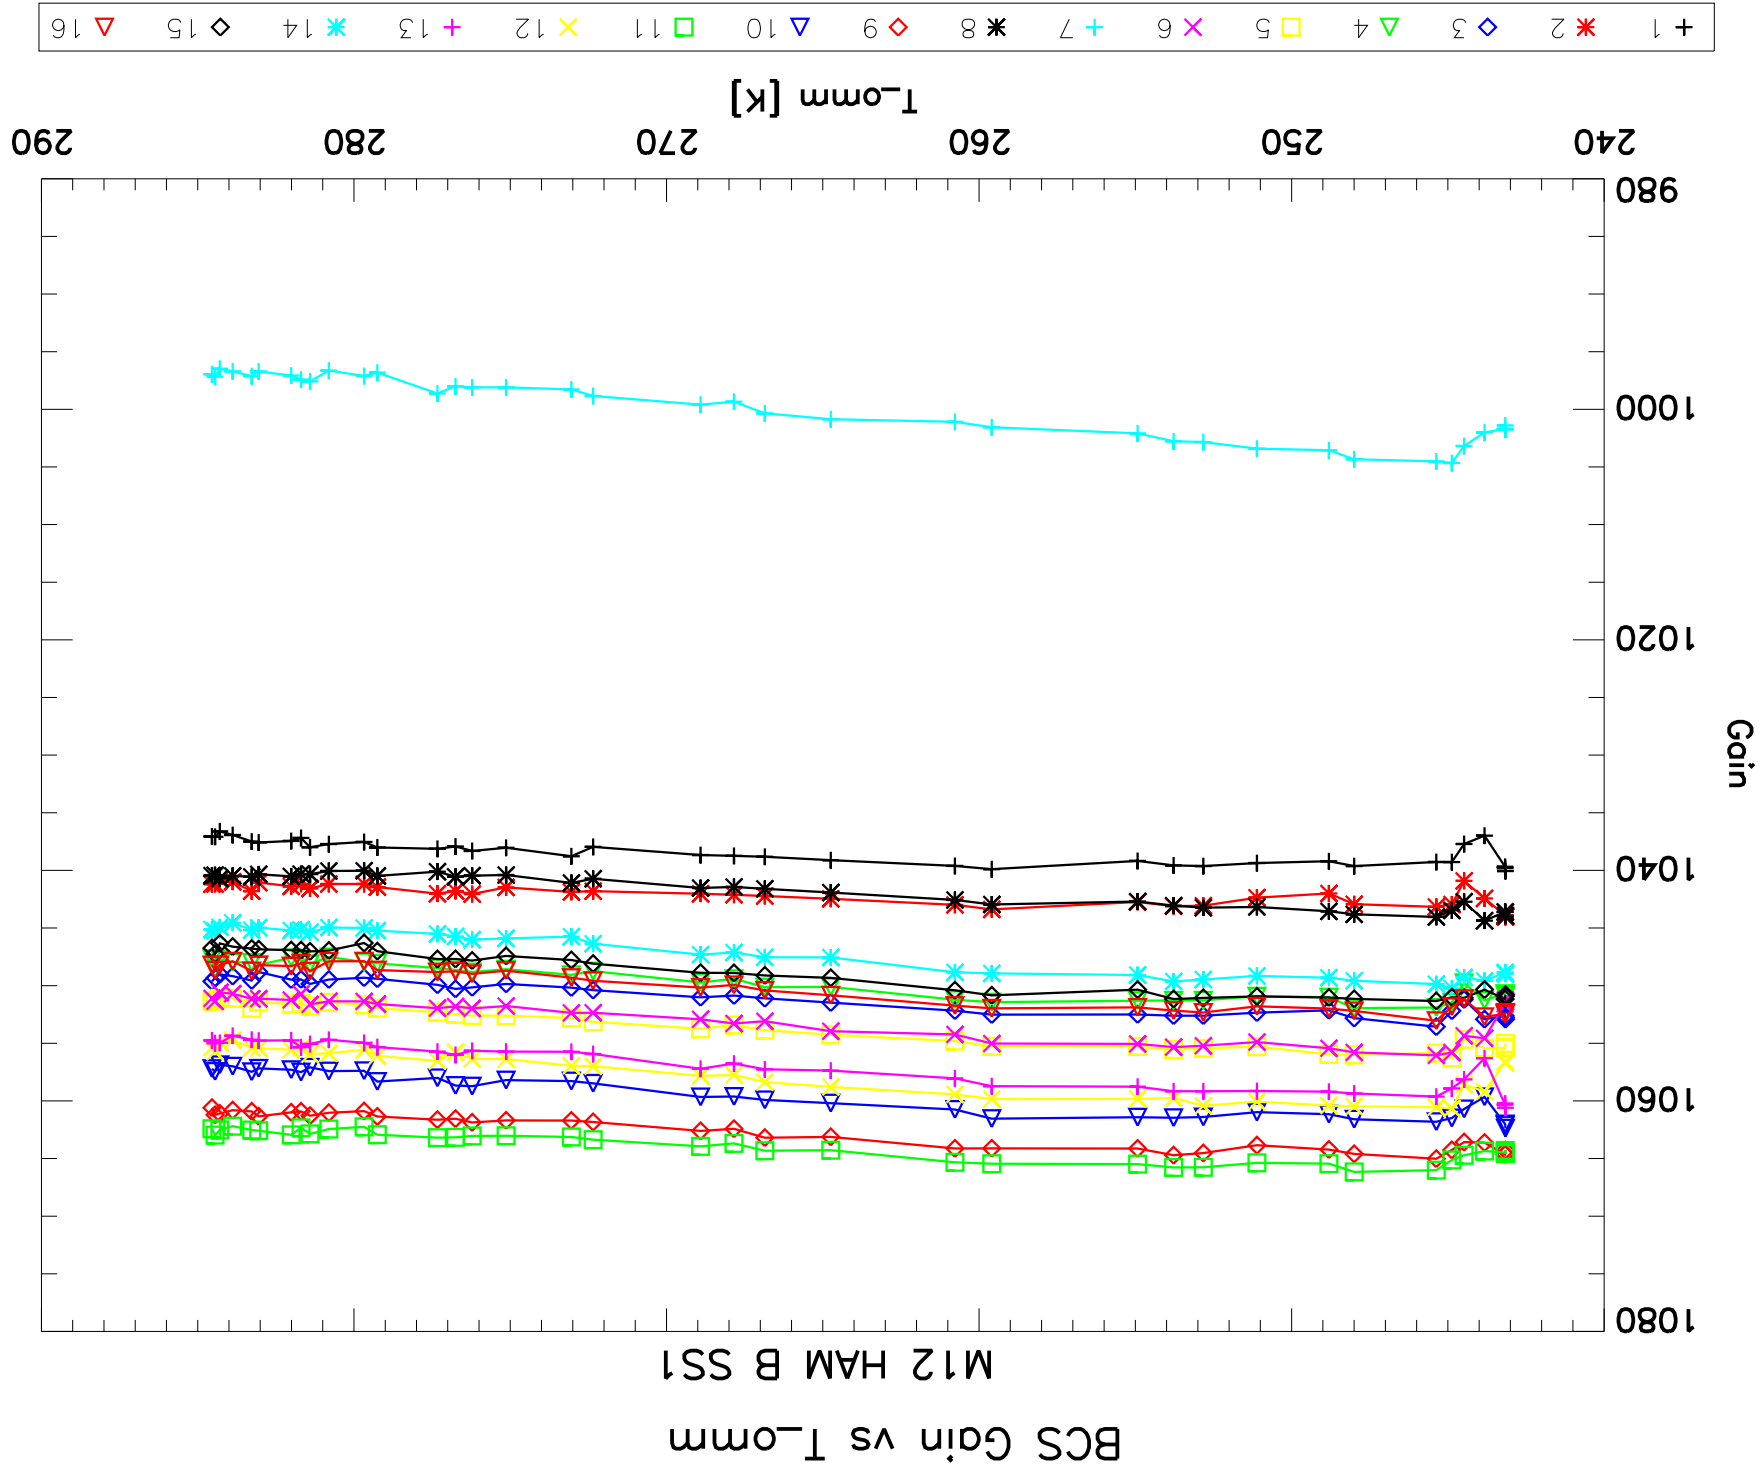


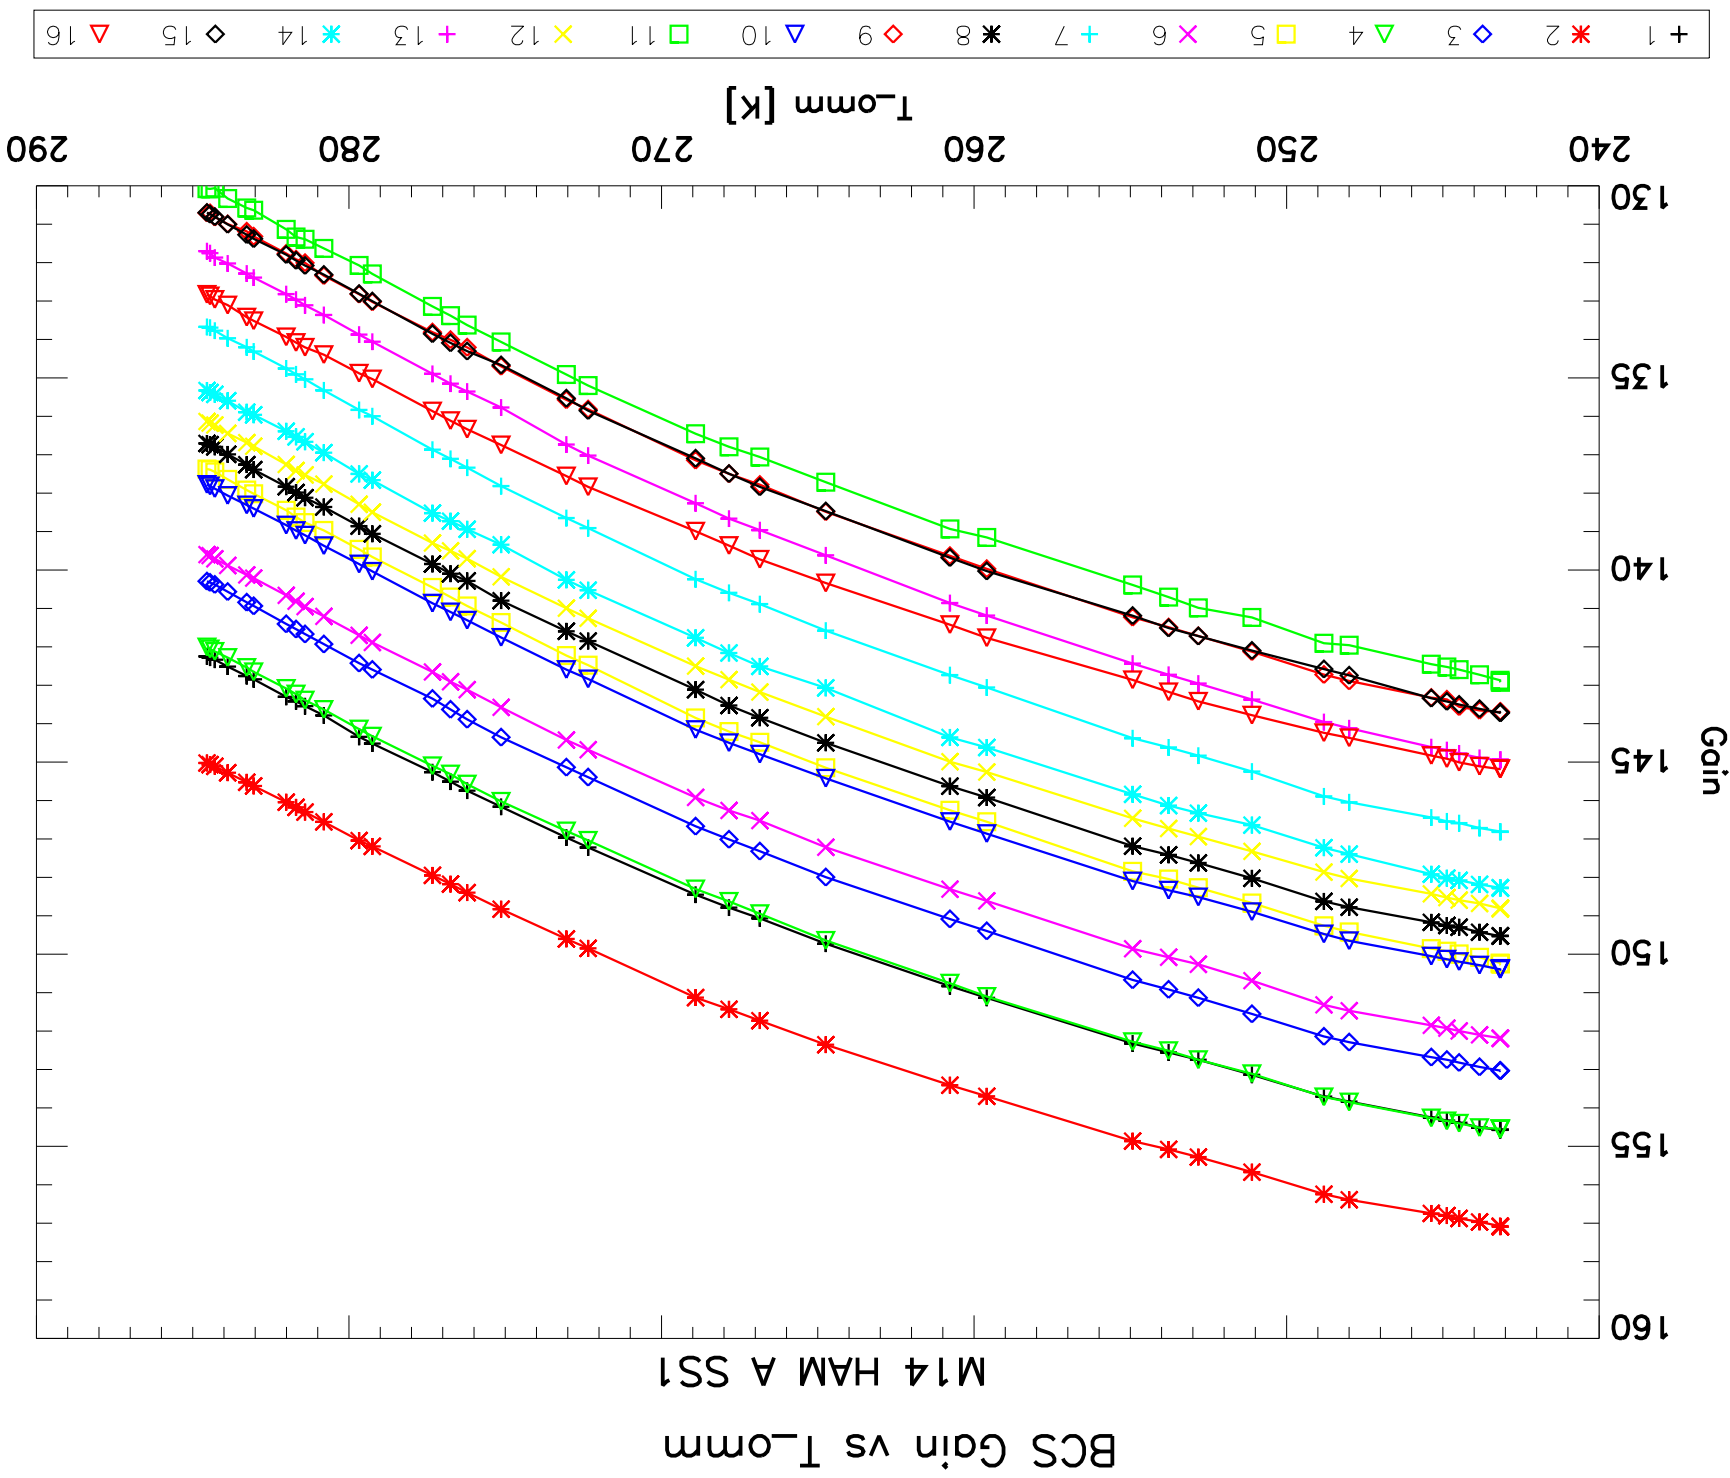


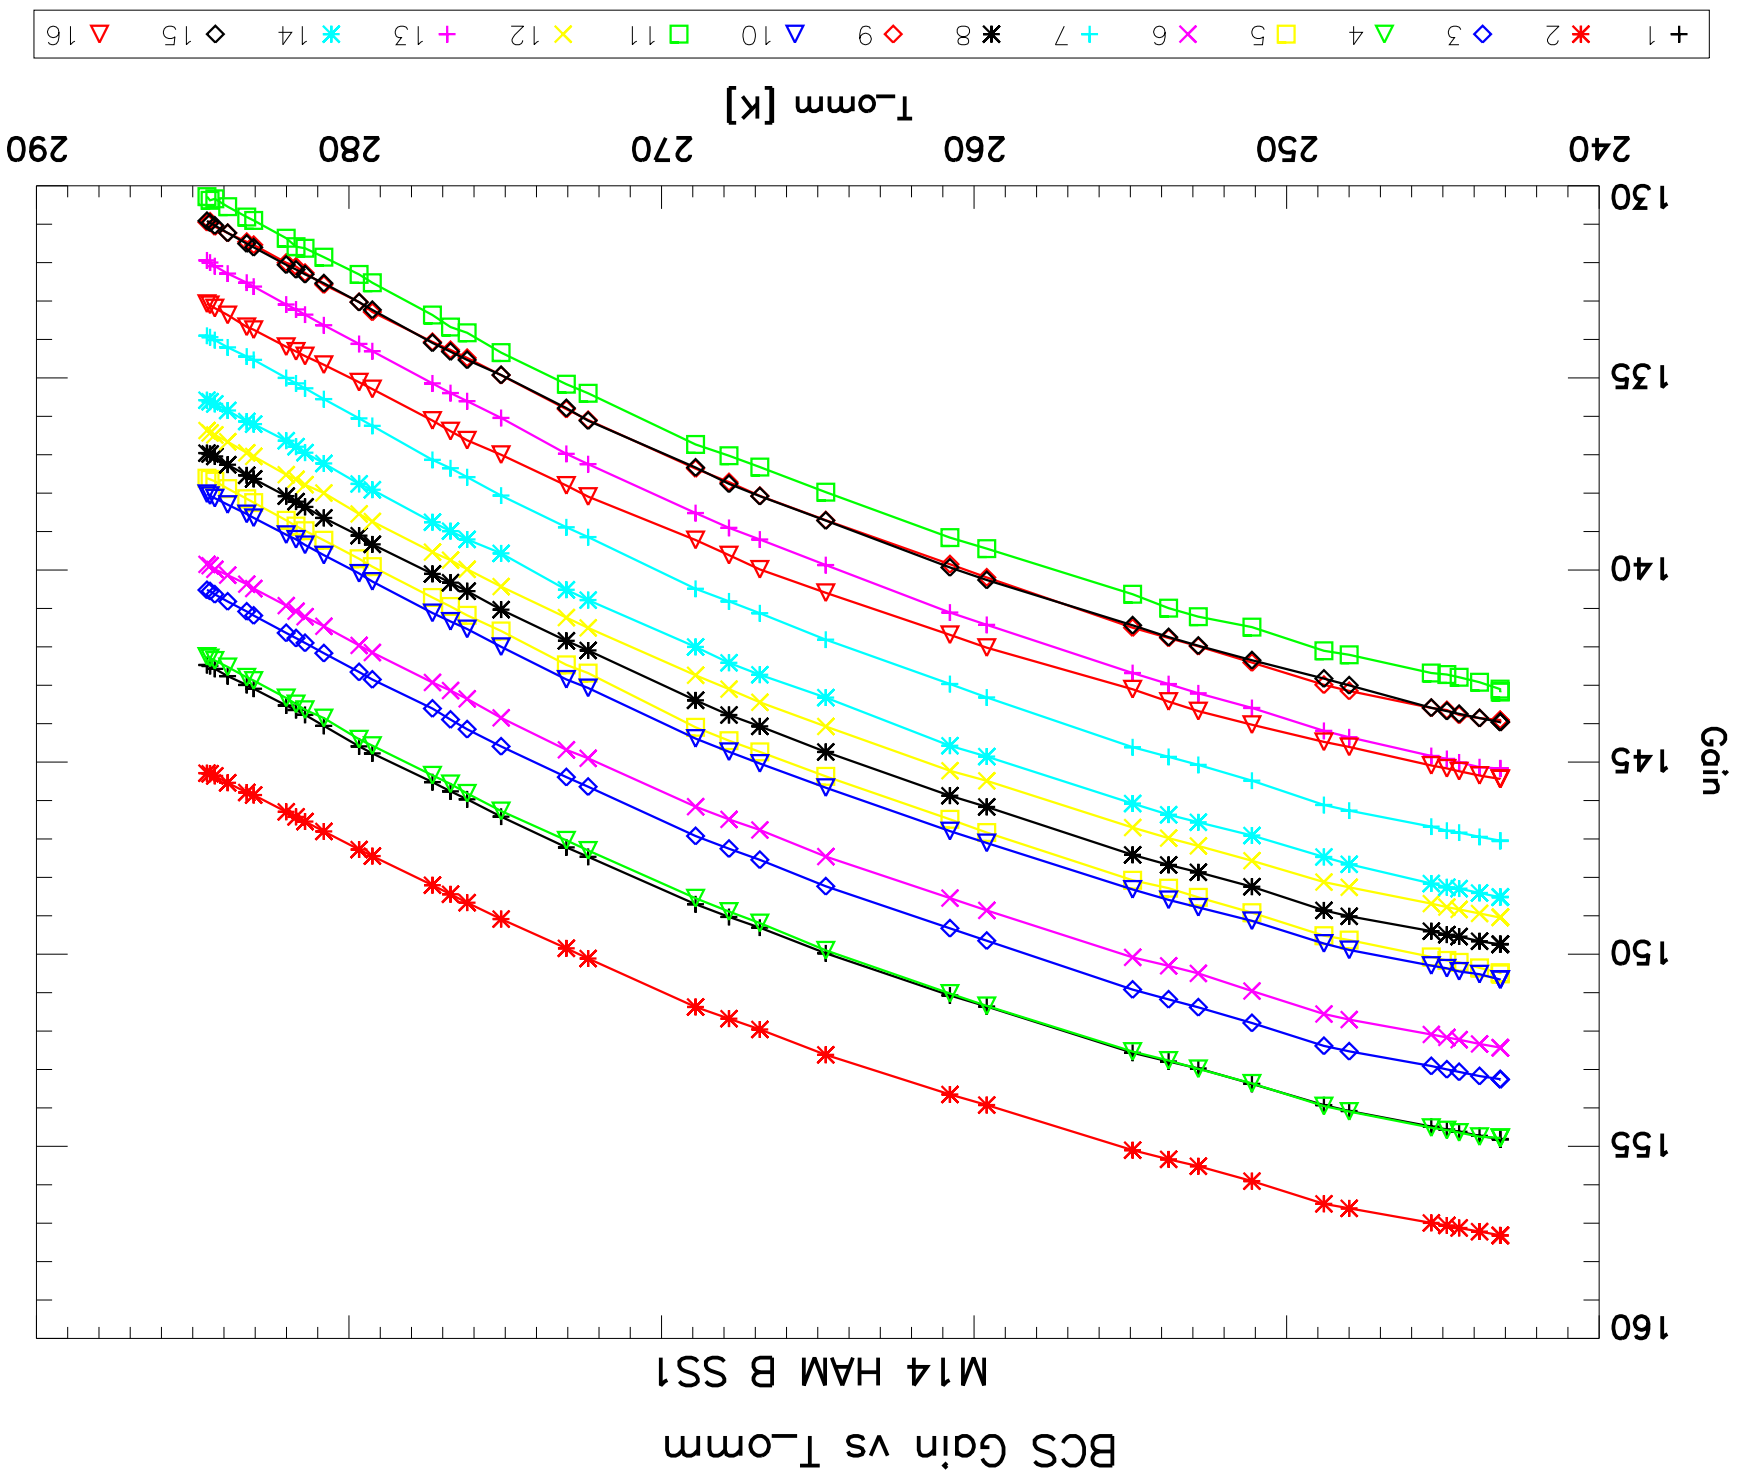

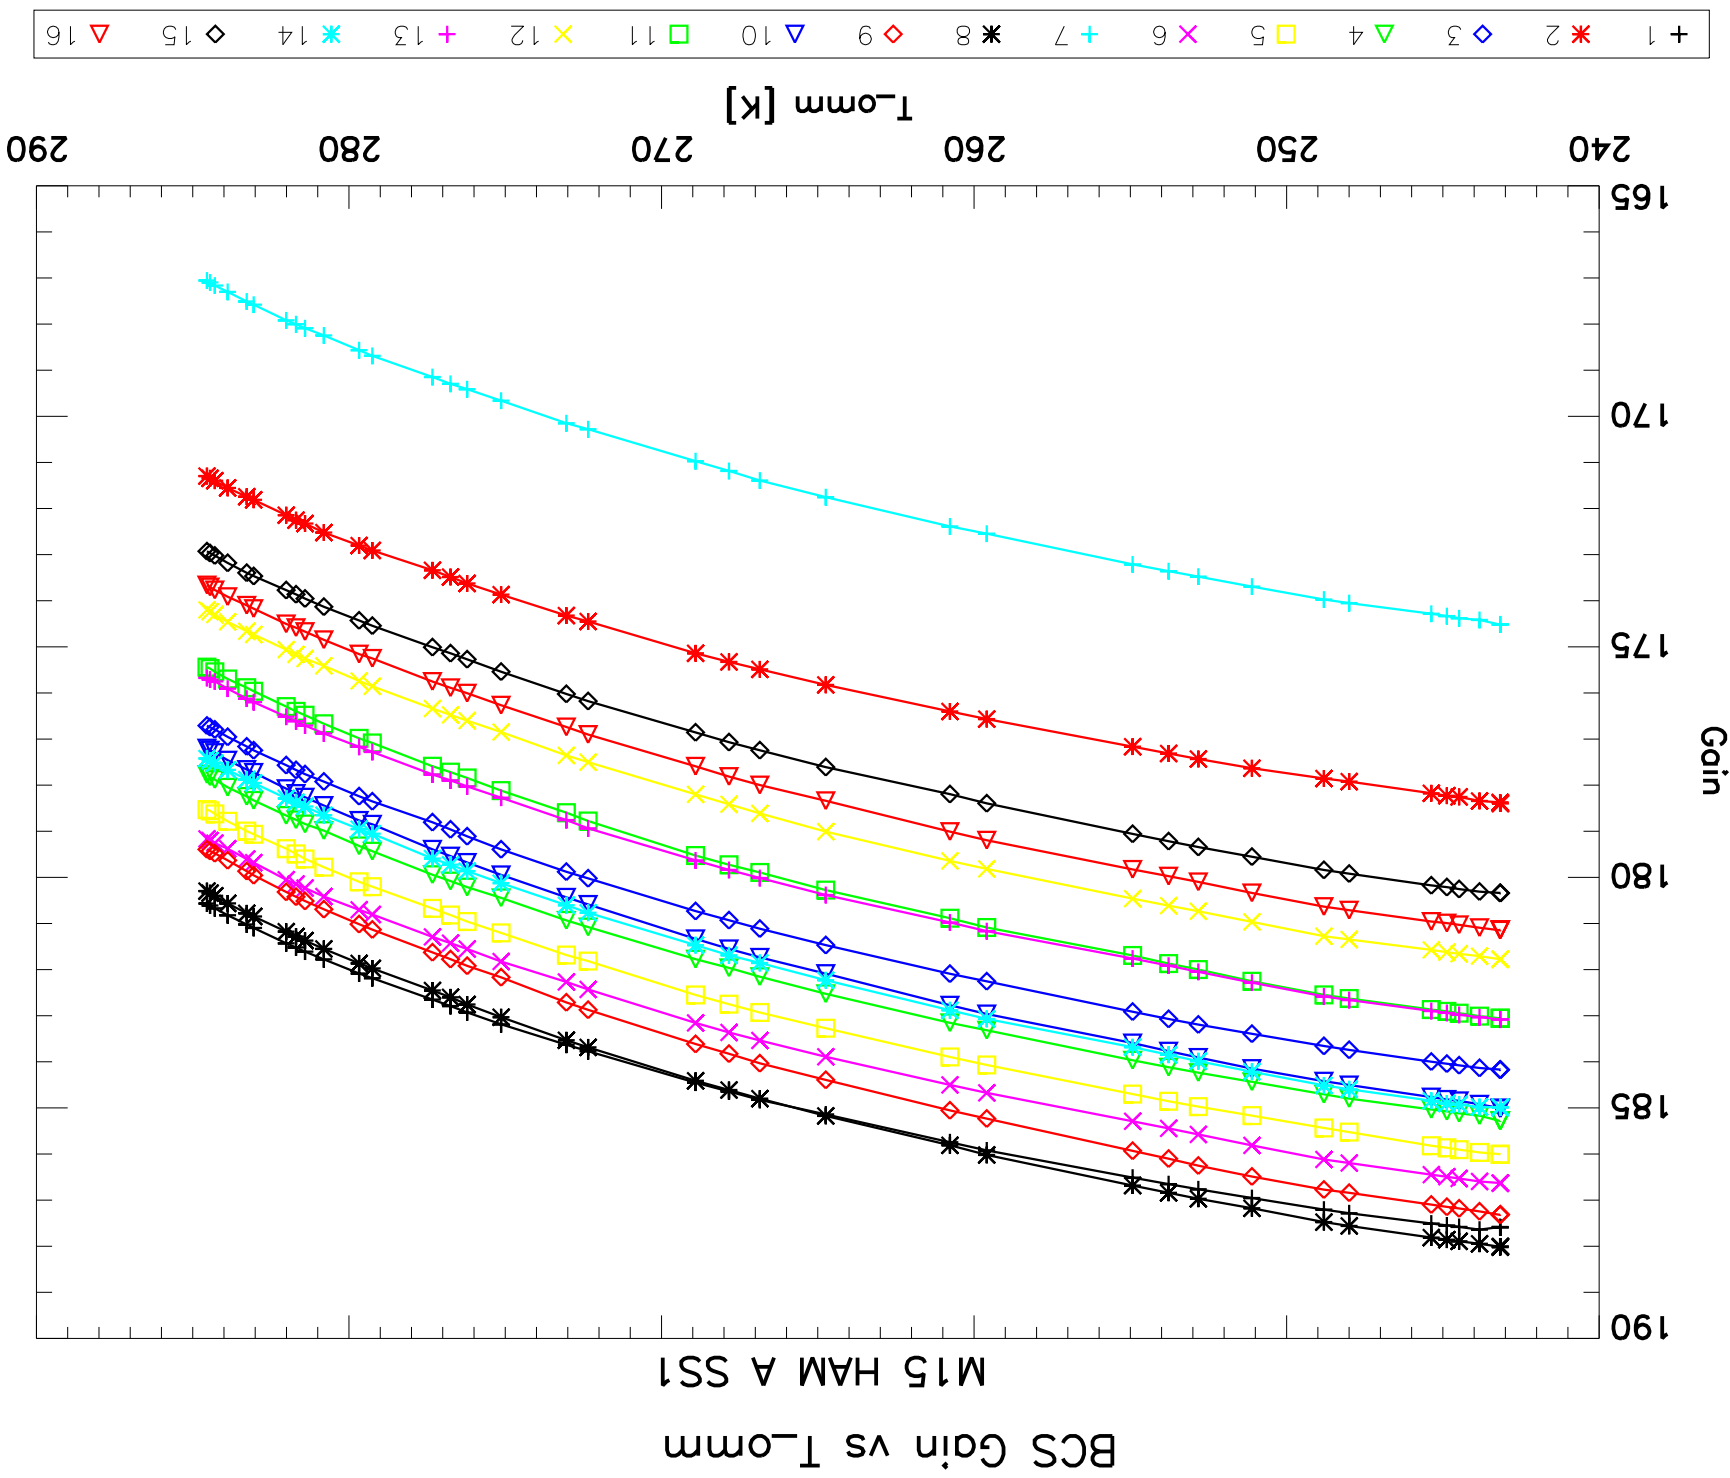

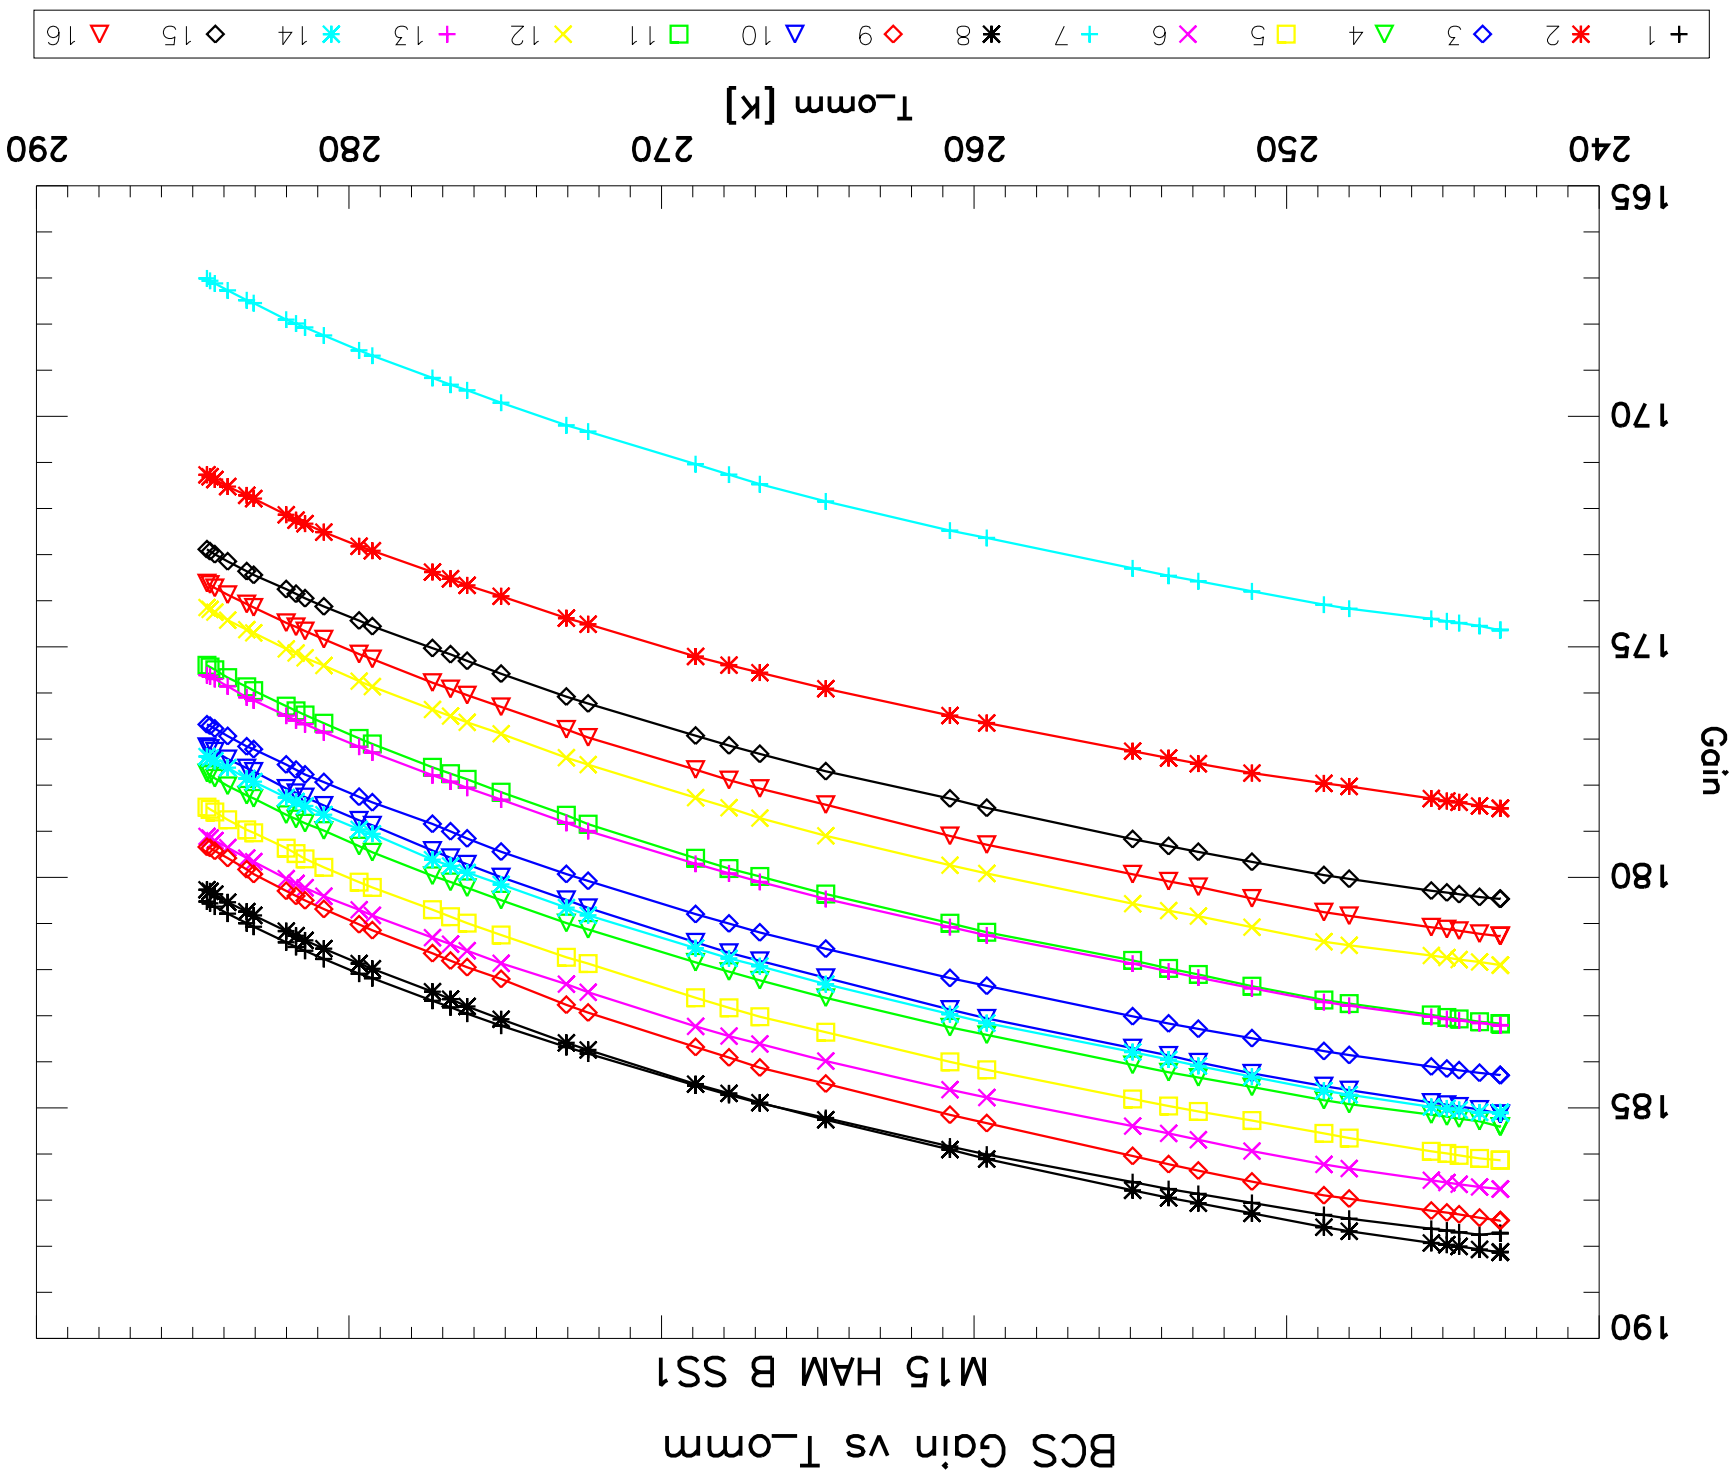


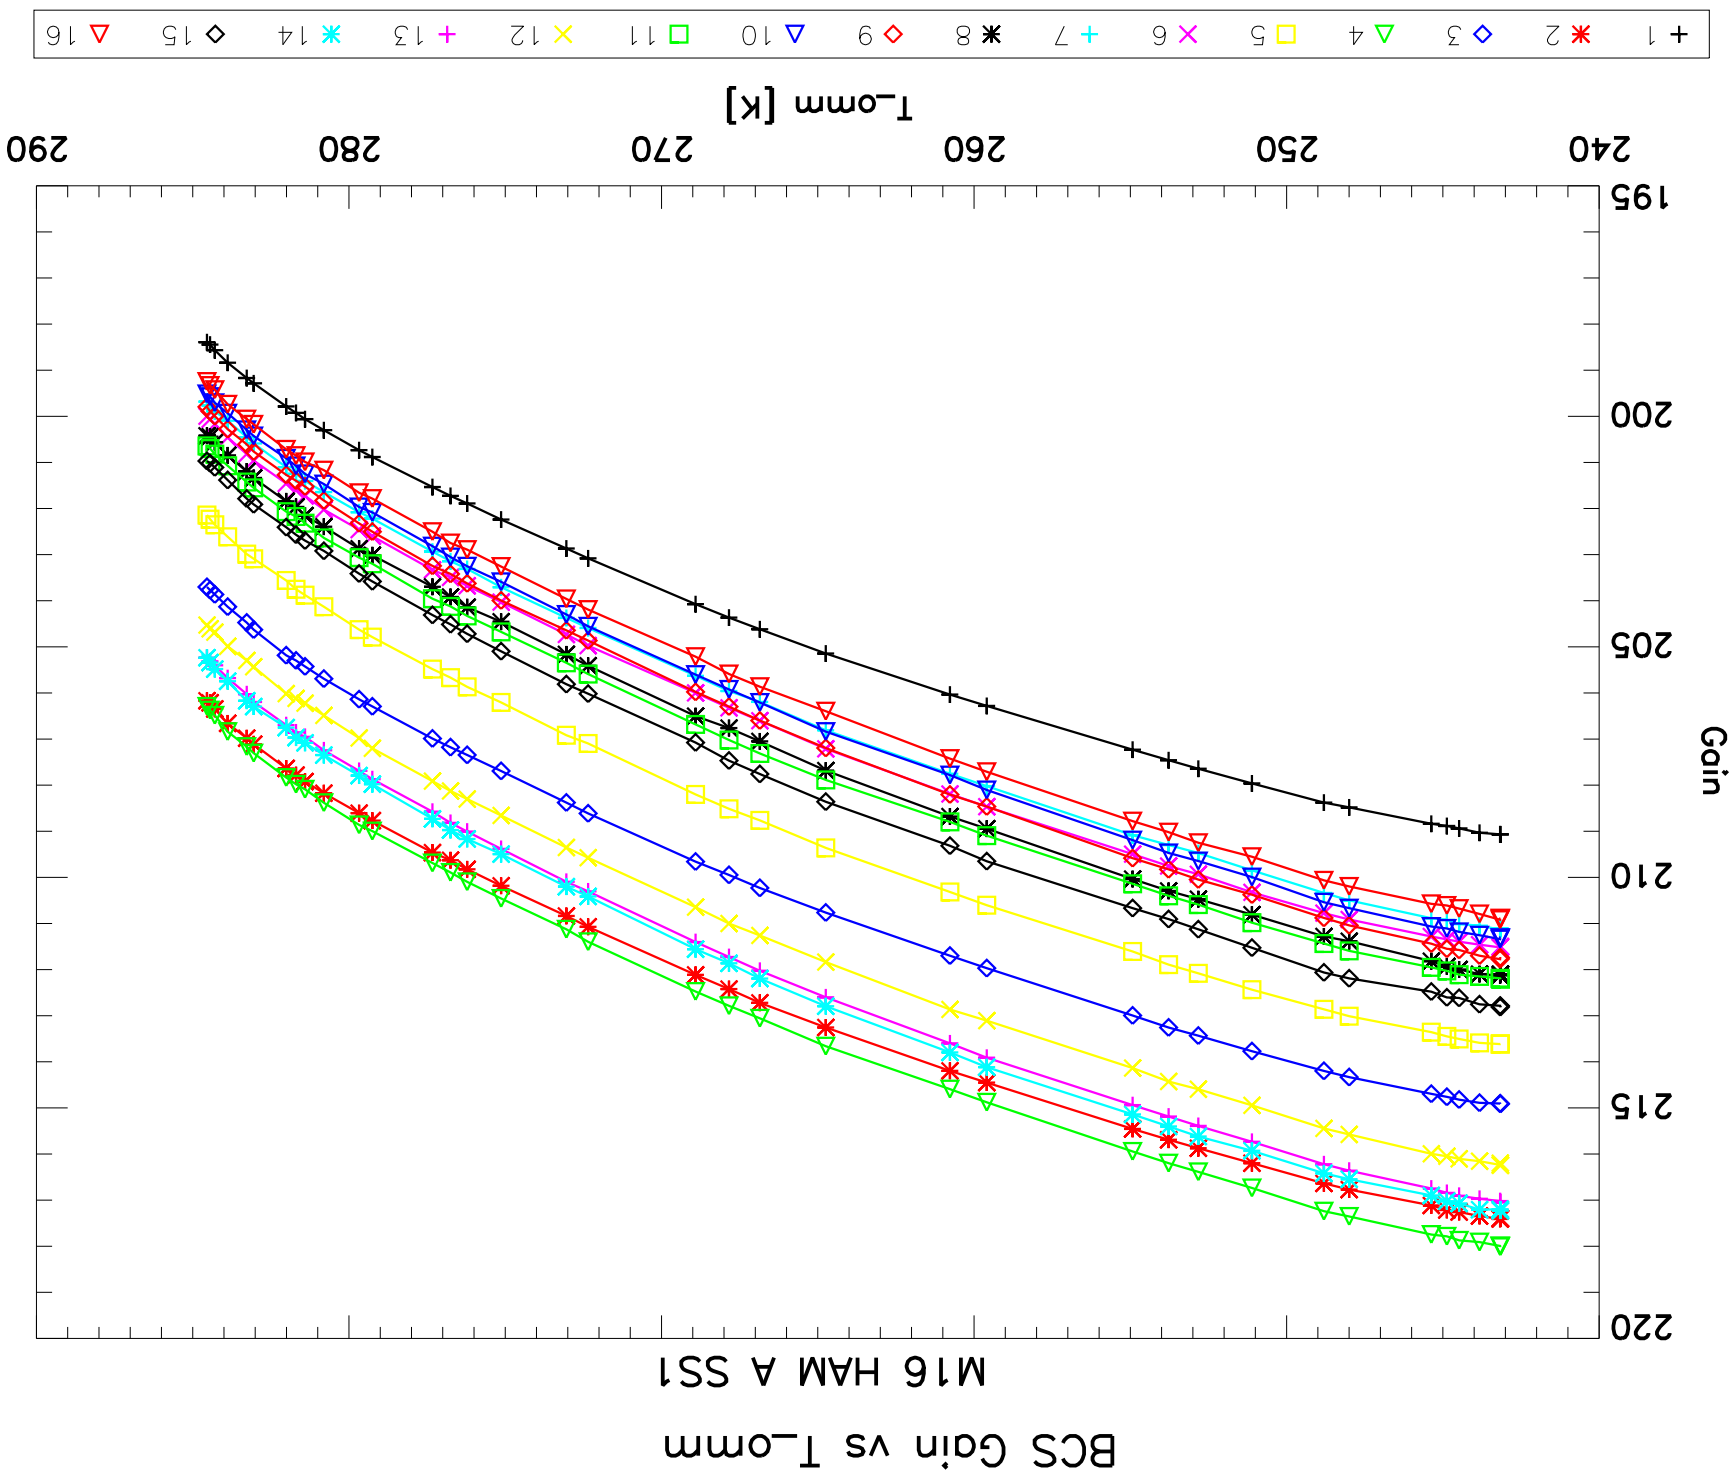

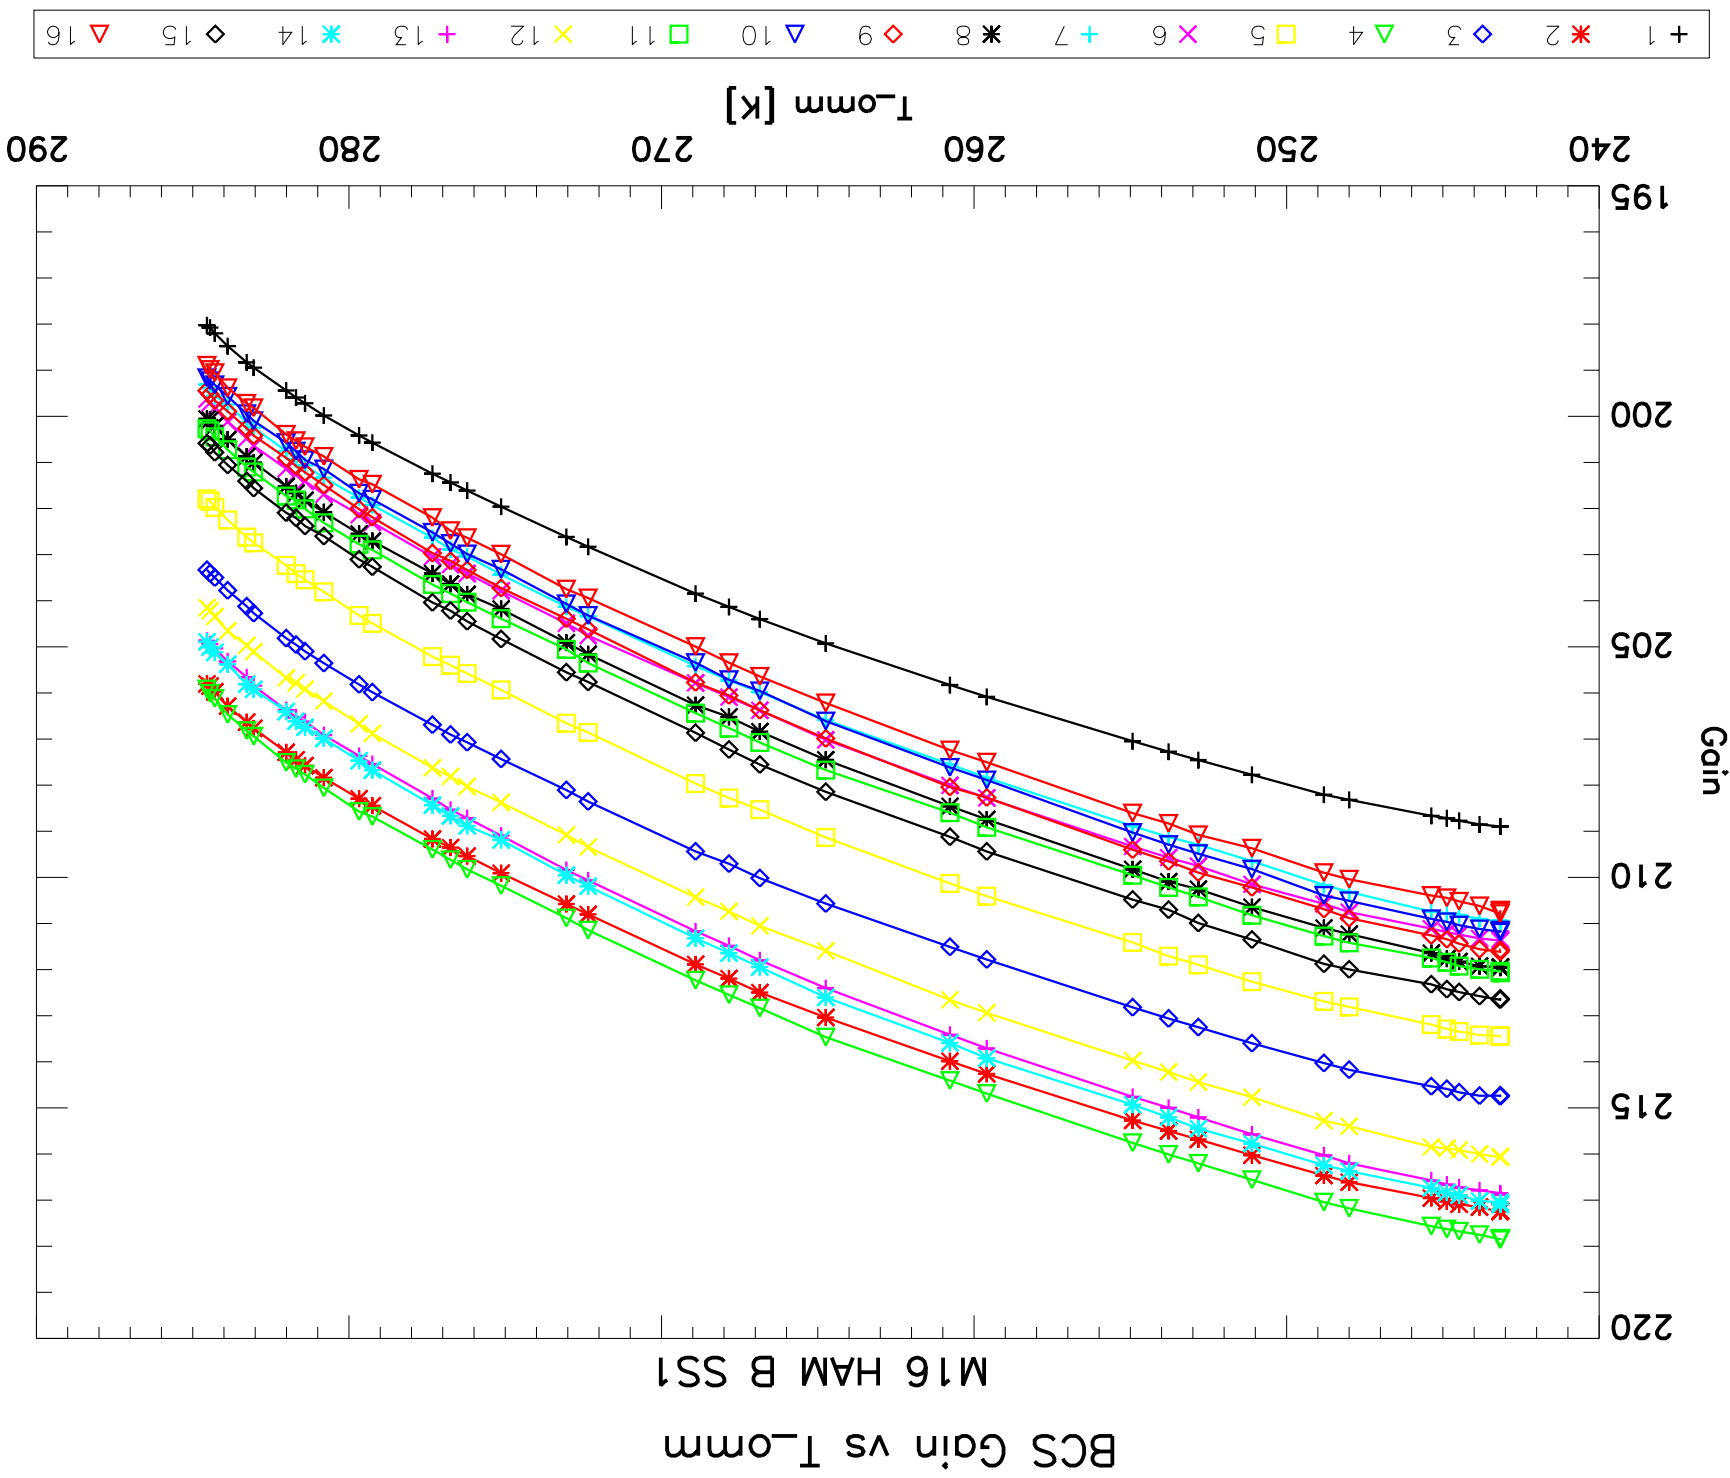


Normalized BCS Gain vs T_{omm}

14 HAM A SS1

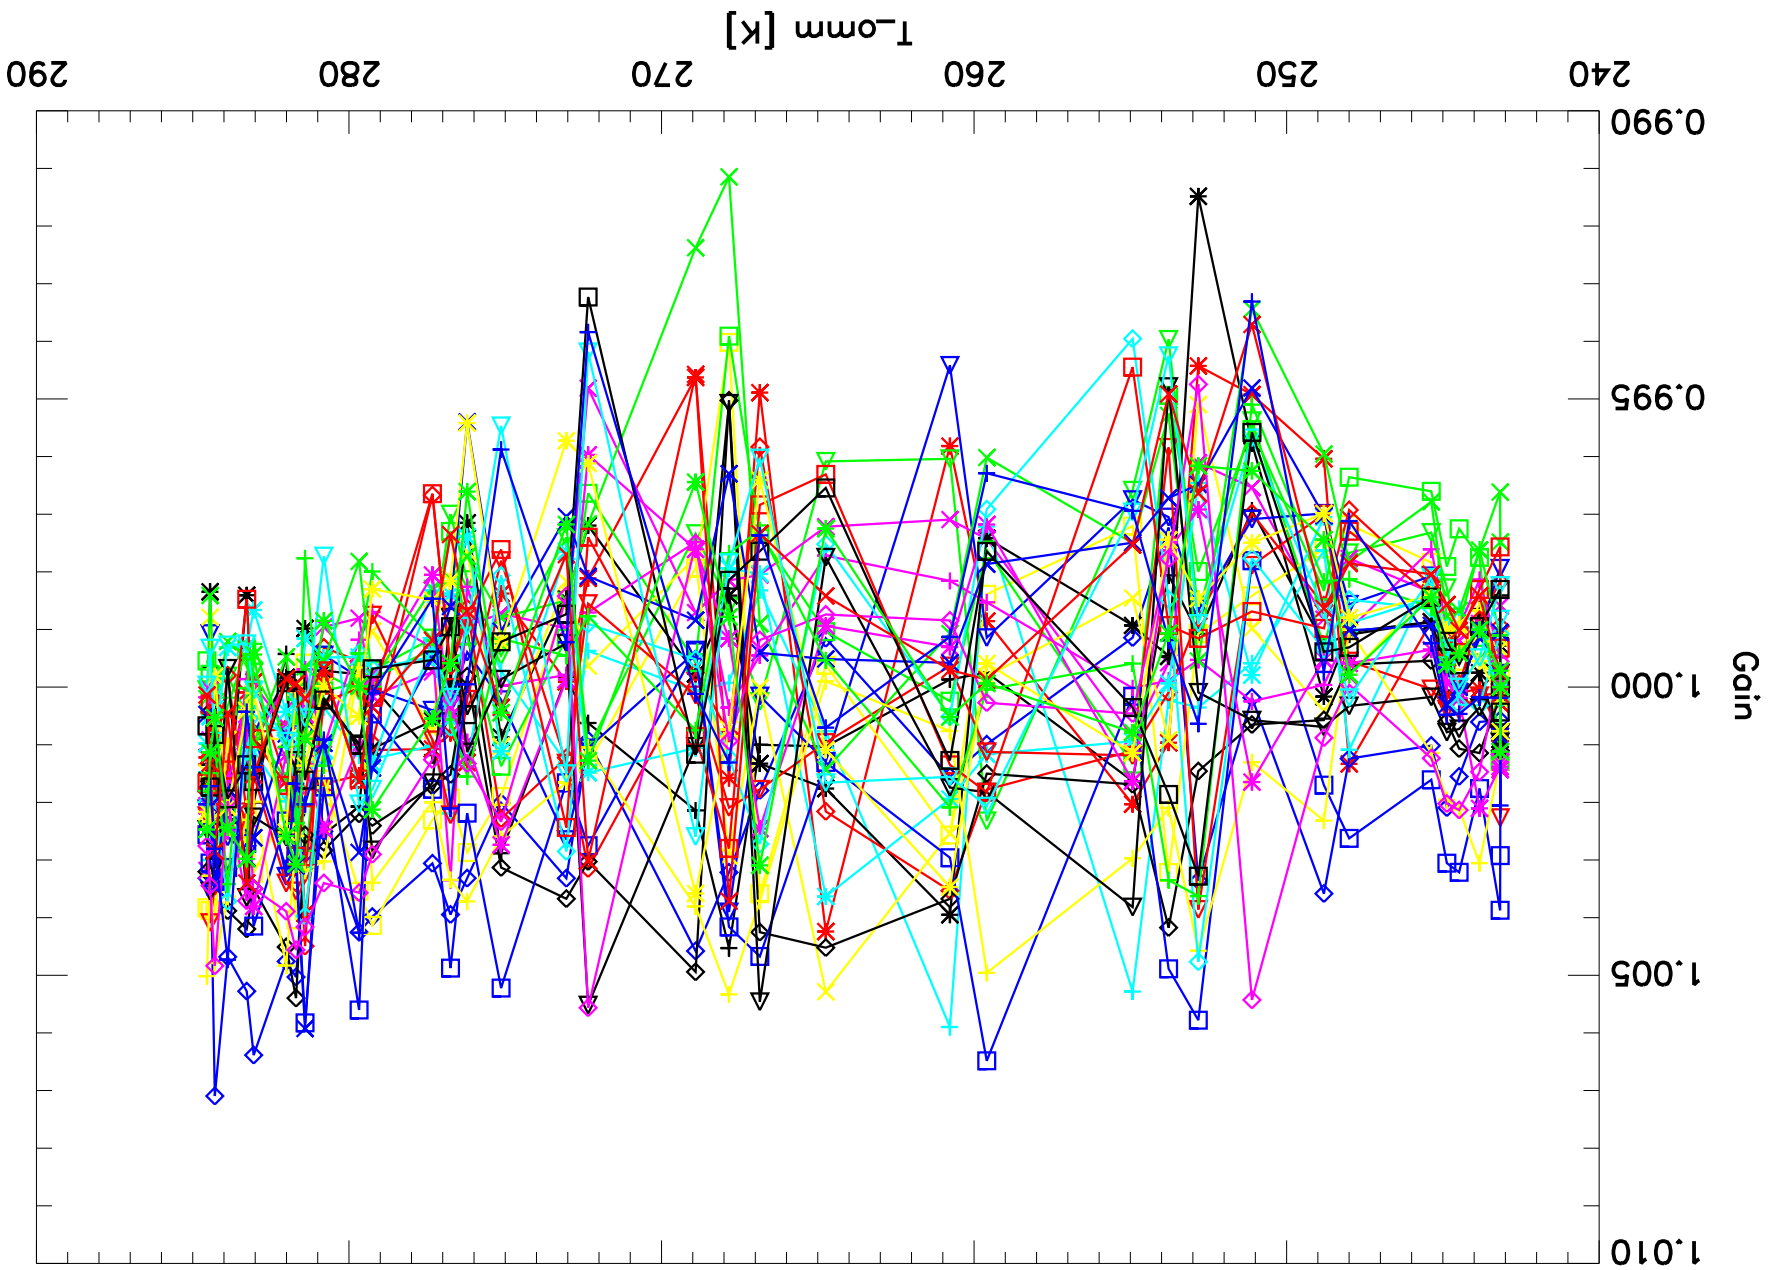


Normalized BCS Gain vs T_{omm}

14 HAM A SS2

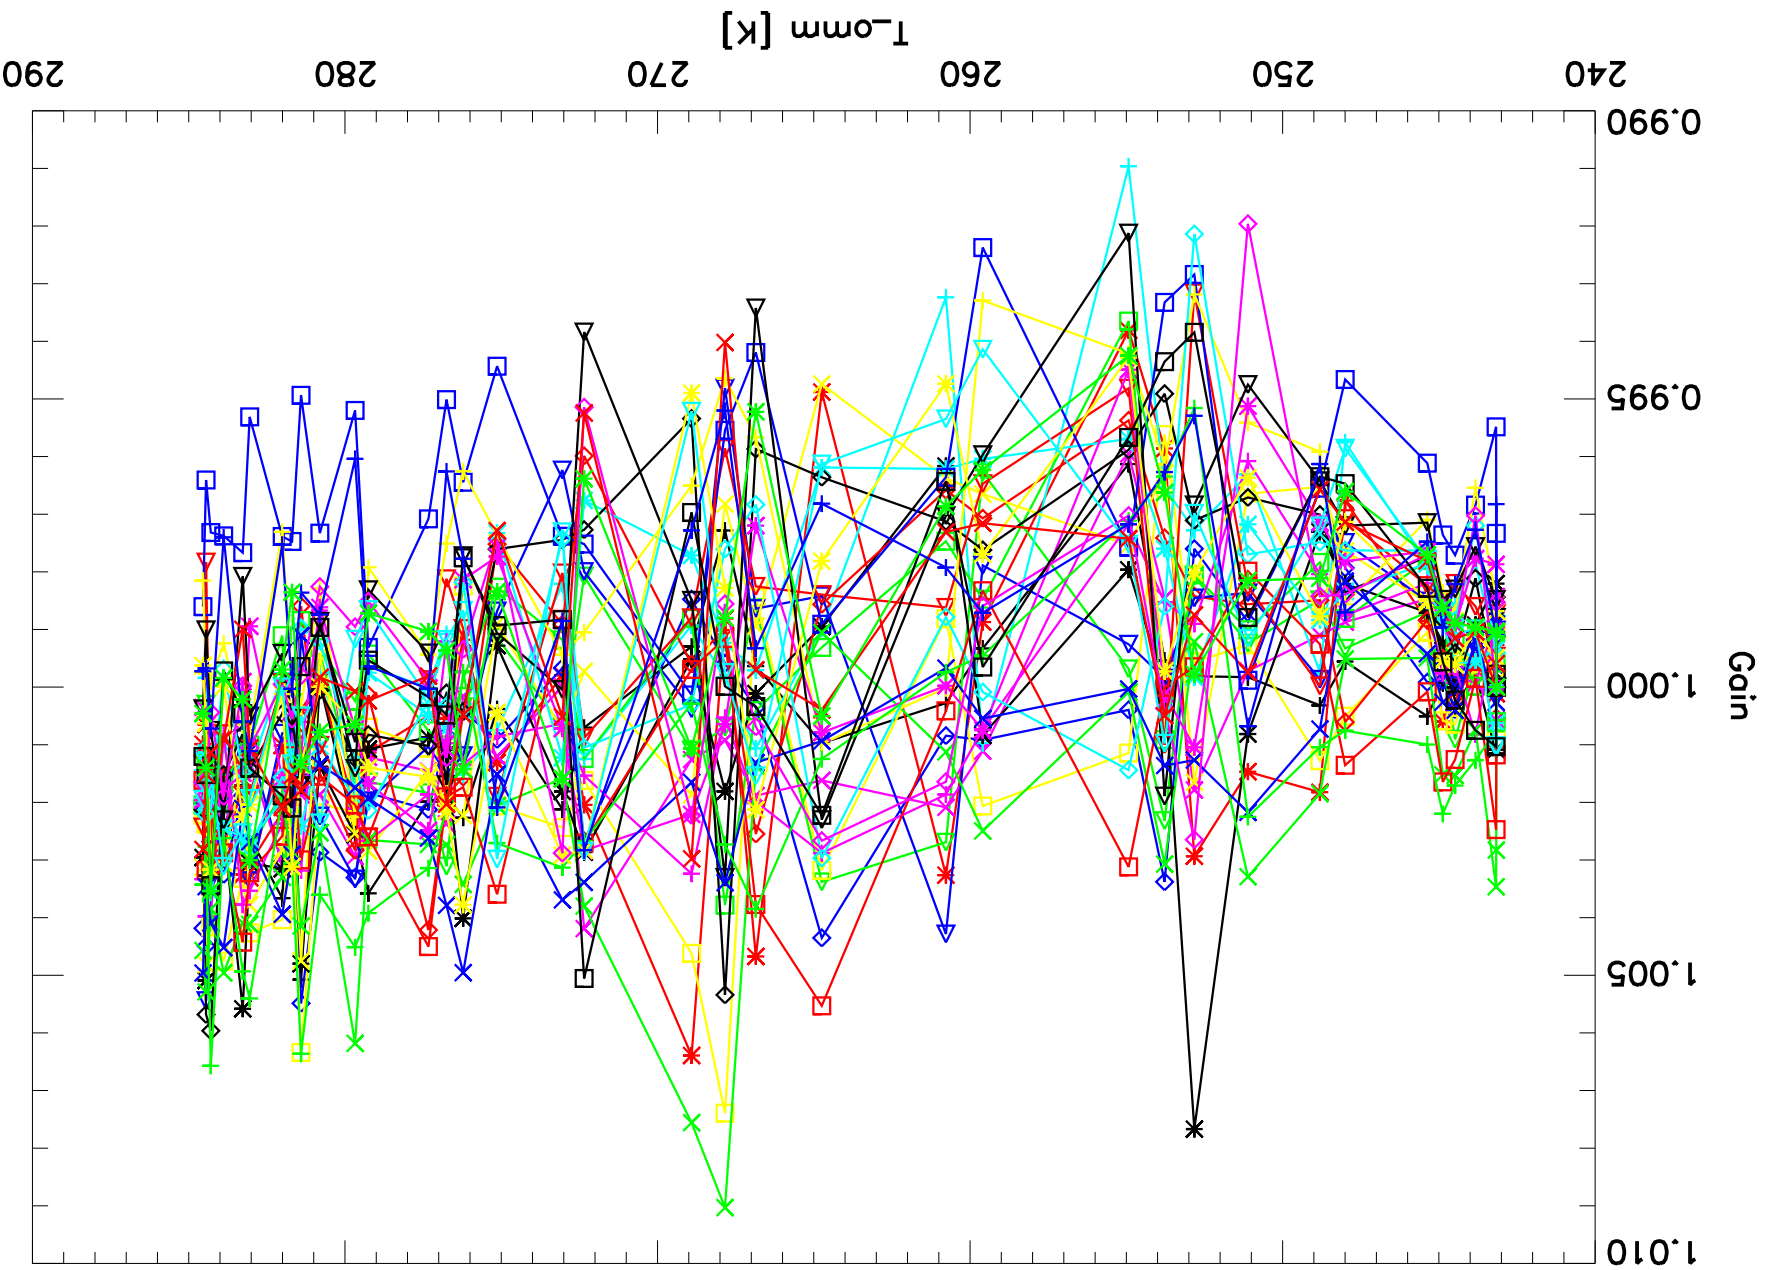



Normalized BCS Gain vs T_{omm}

14 HAM B SS1

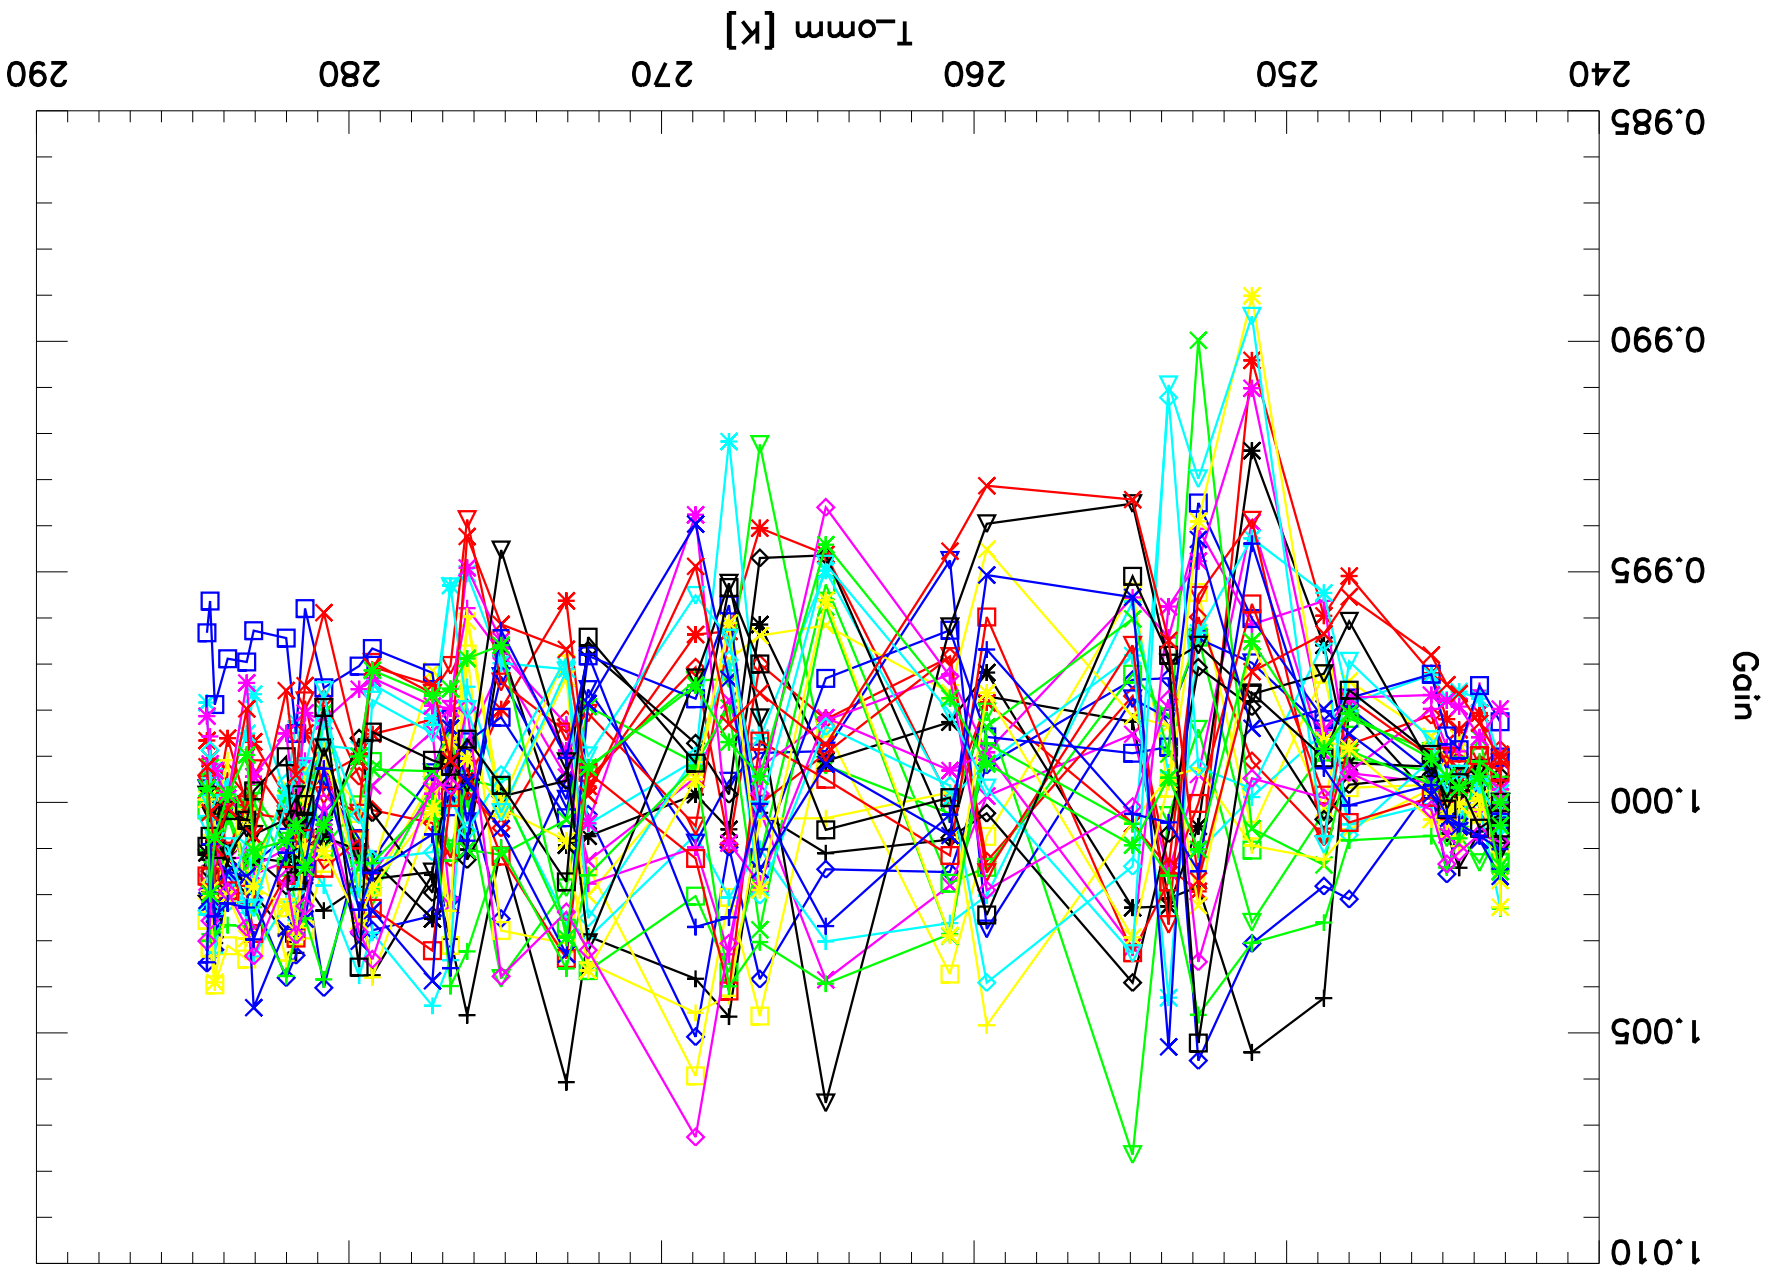


Normalized BCS Gain vs T_{omm}

14 HAM B SS2

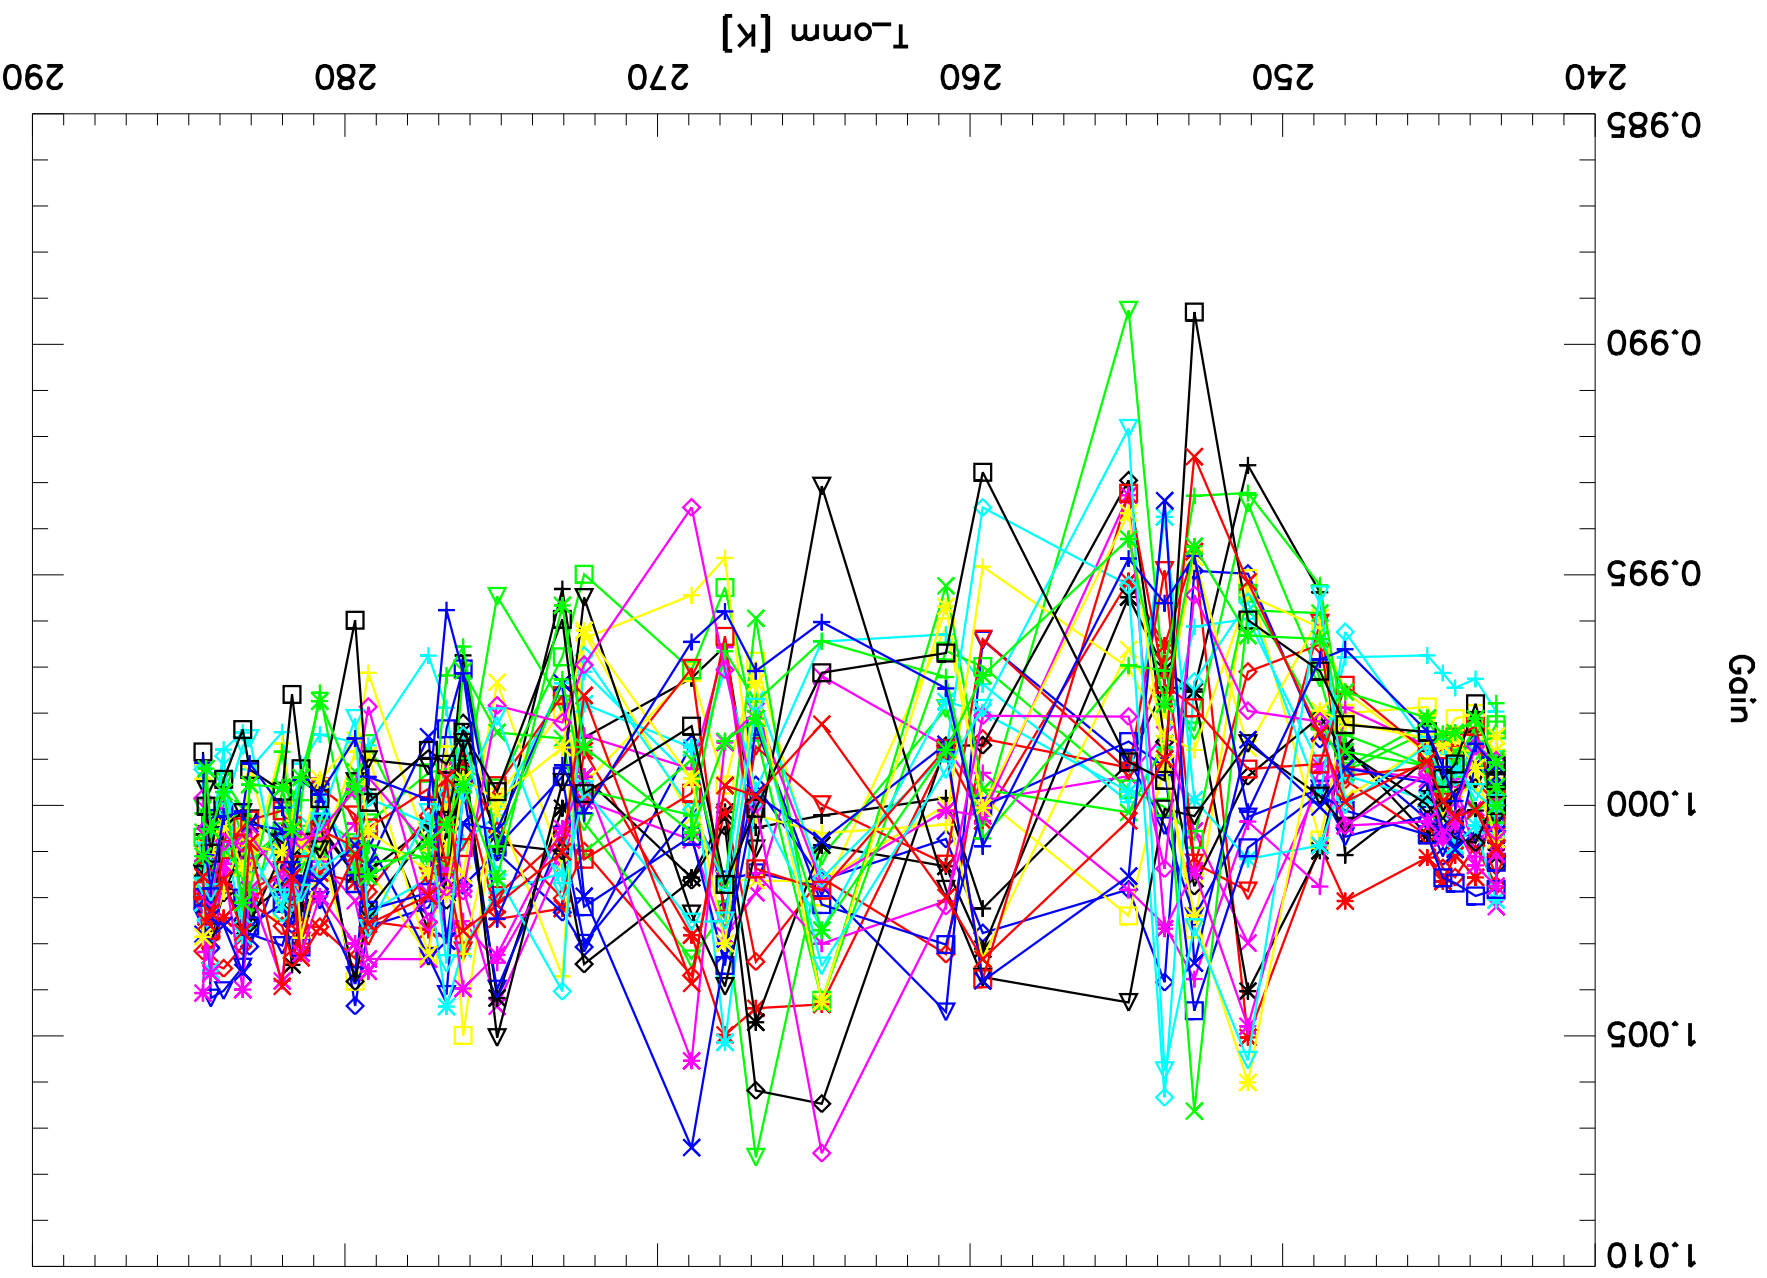


Normalized BCS Gain vs T_{omm}

15 HAM A SS1

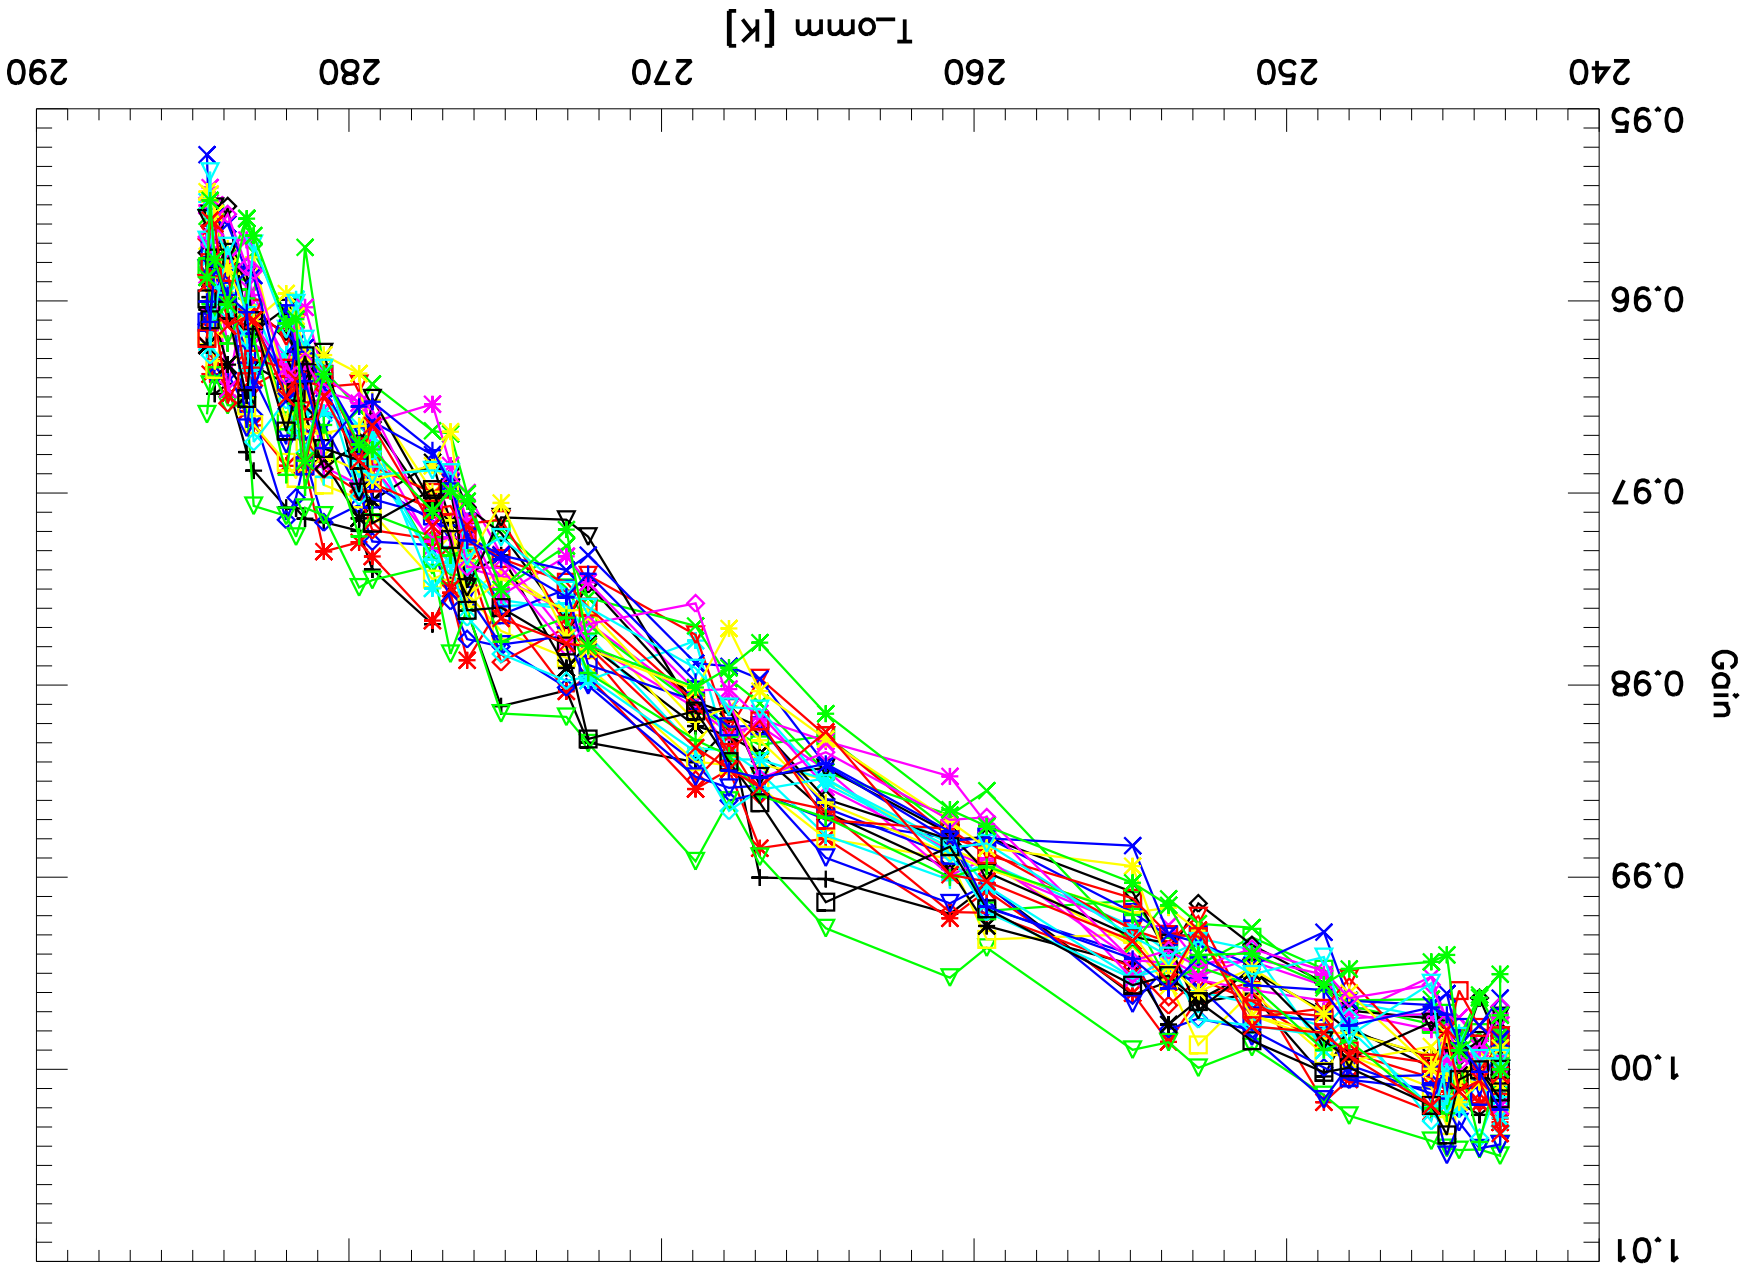


Normalized BCS Gain vs T_{omm}

15 HAM A SS2

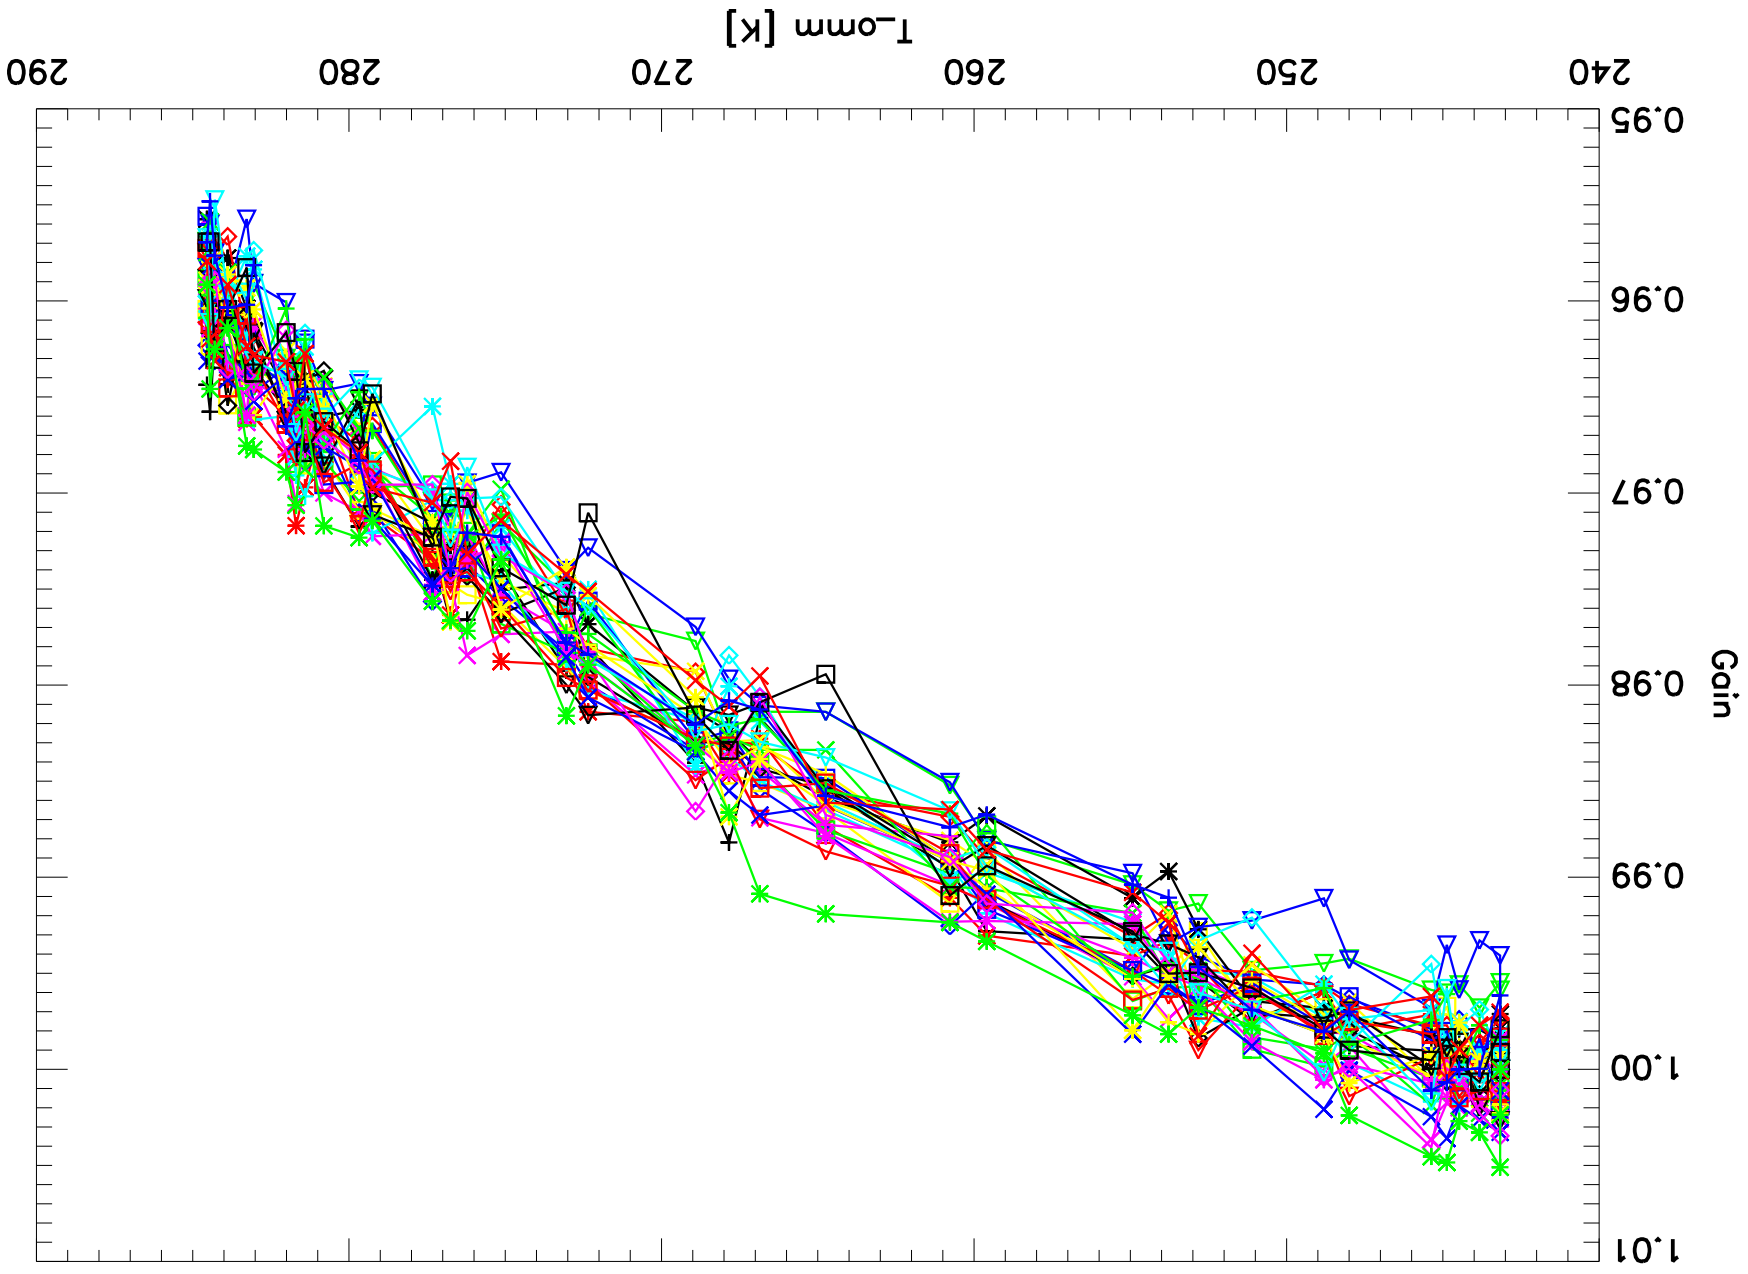



Normalized BCS Gain vs T_{omm}


15 HAM B SS1

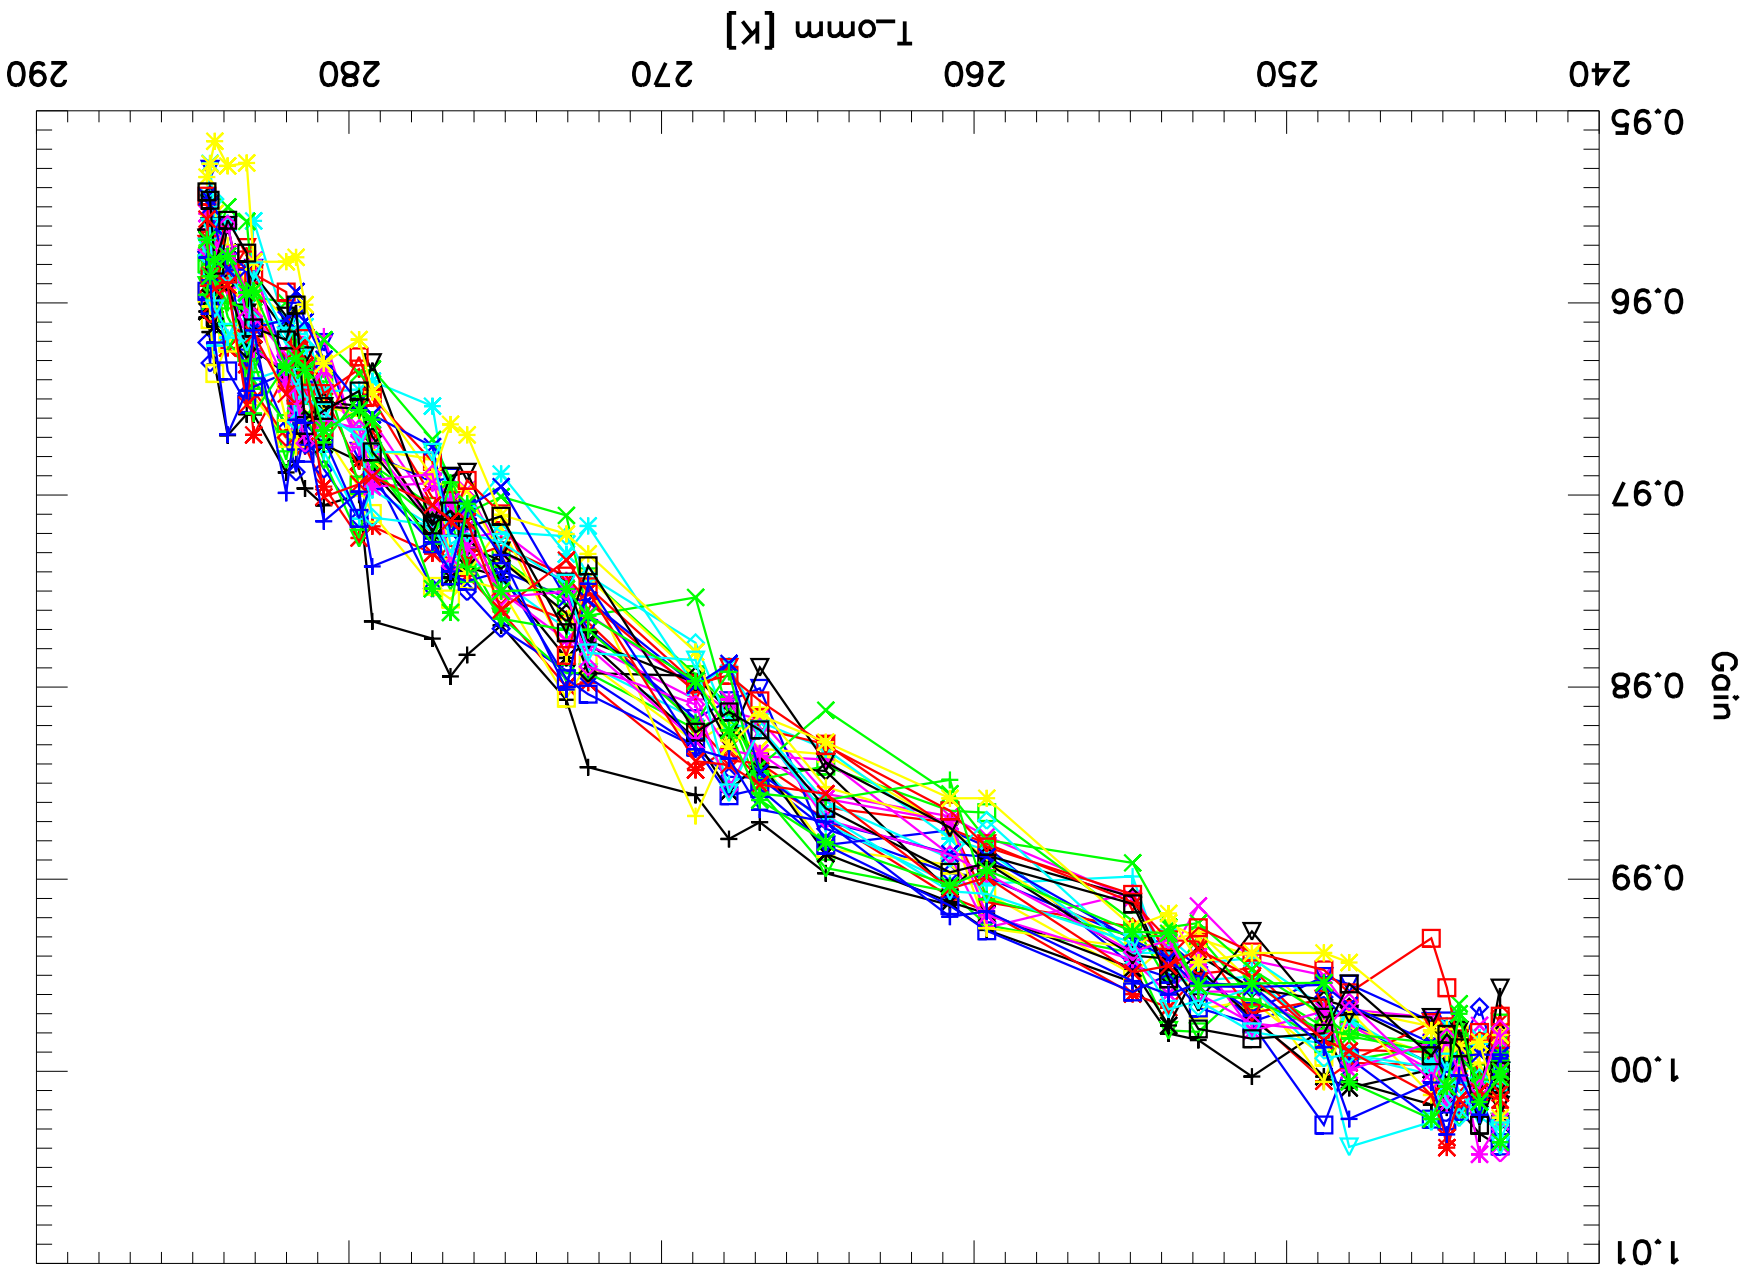



Normalized BCS Gain vs T_{omm}


15 HAM B SS2

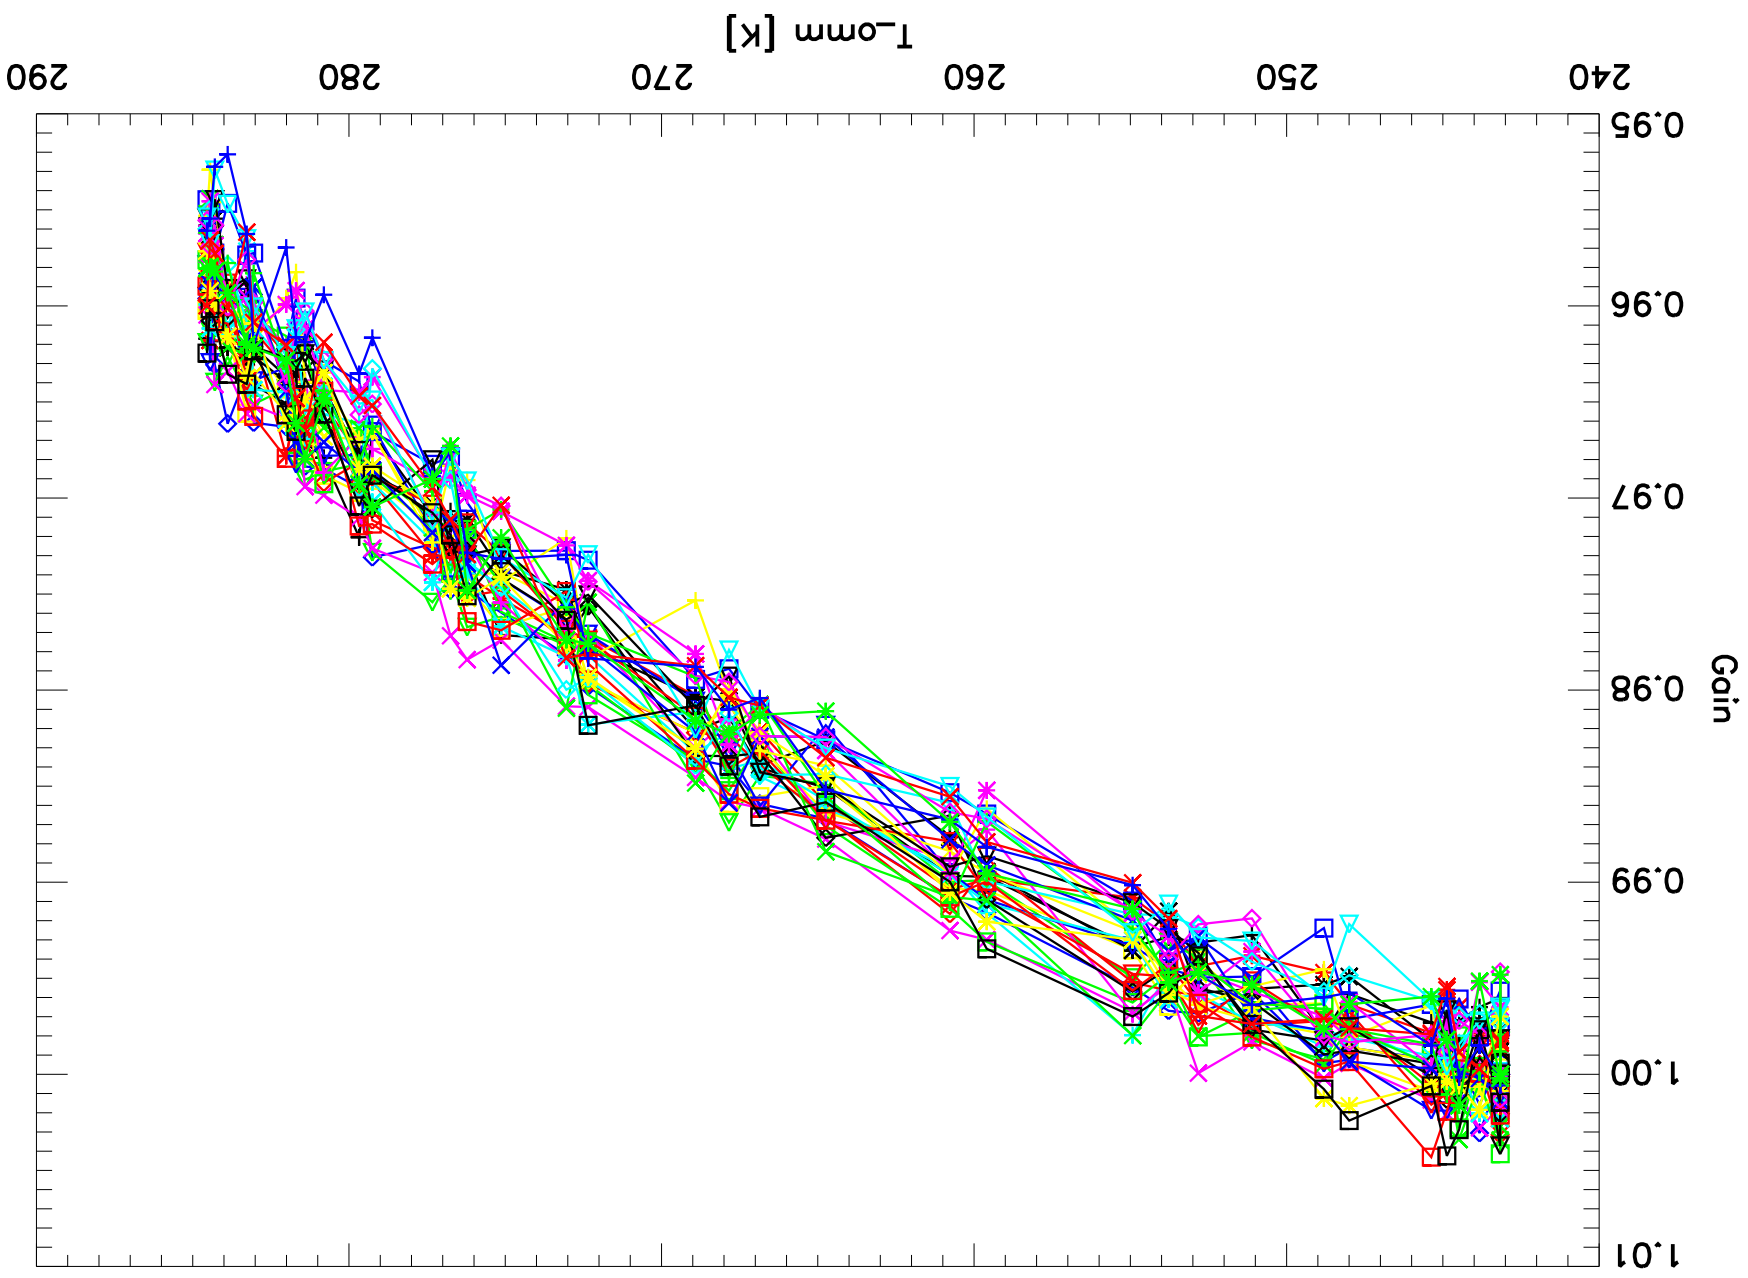


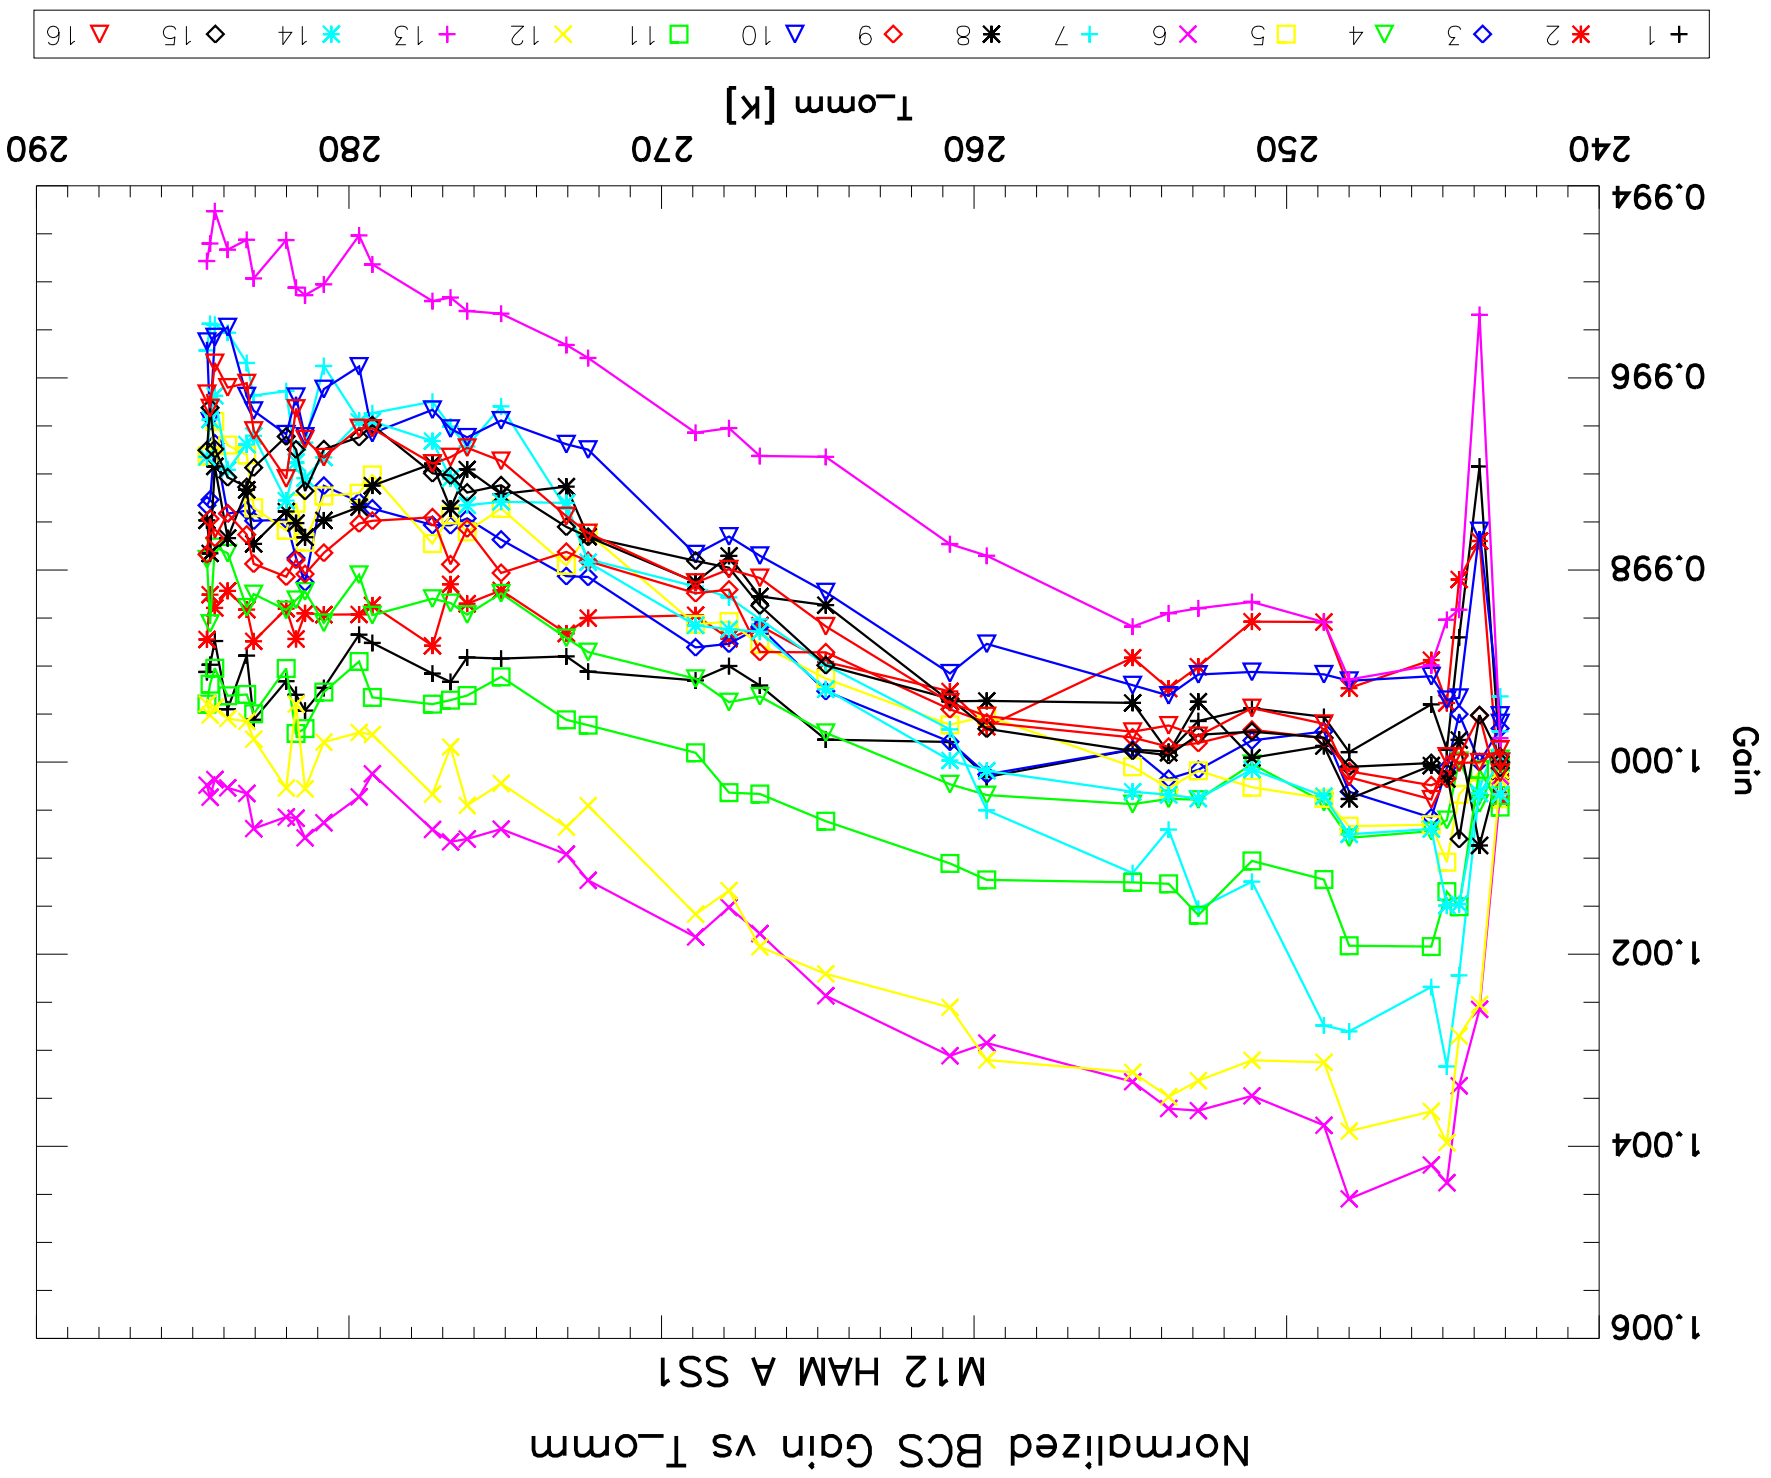


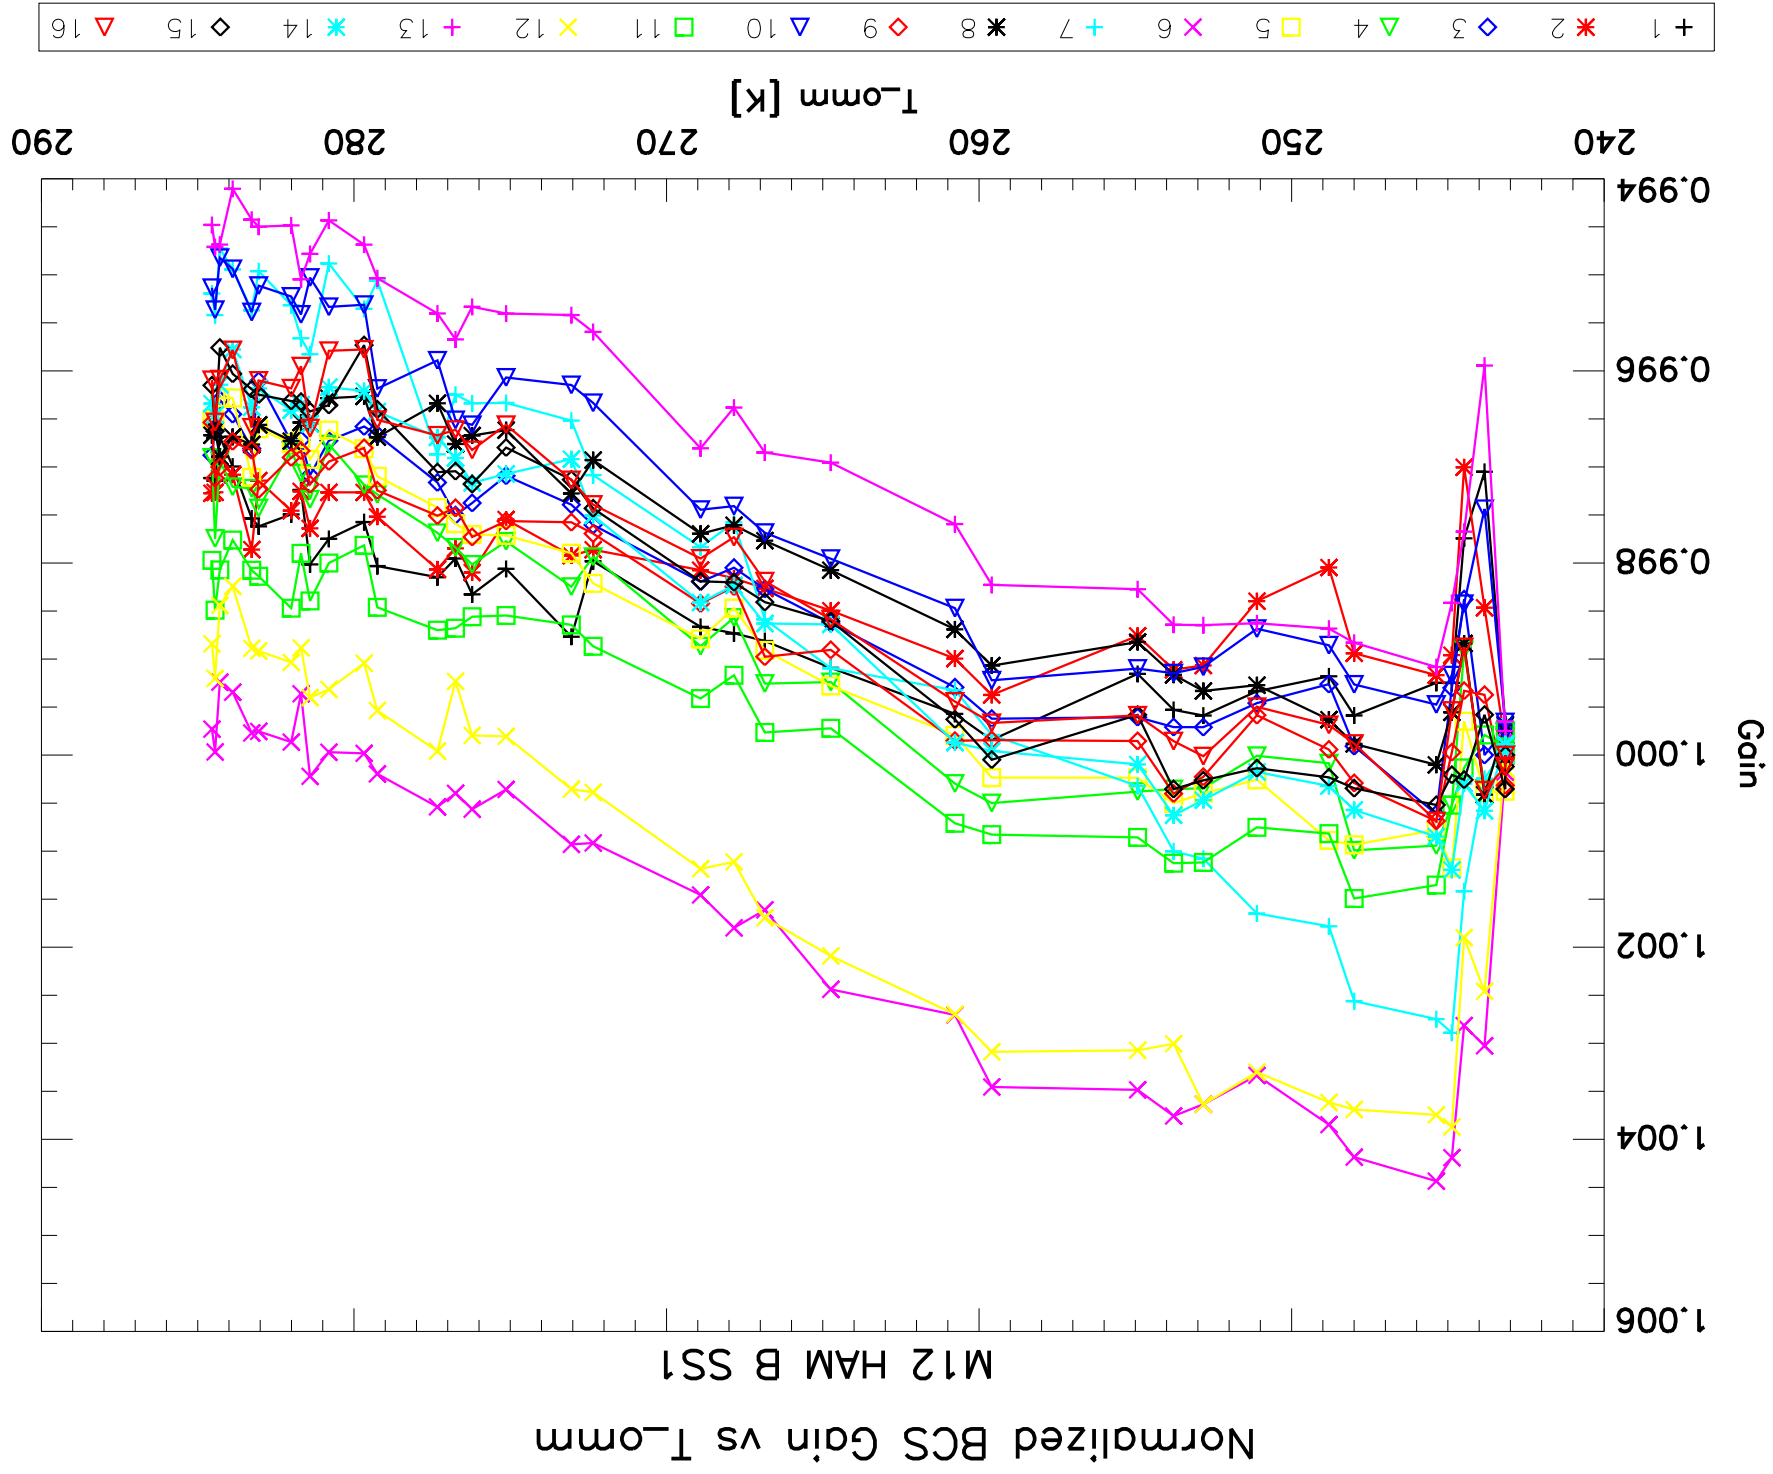


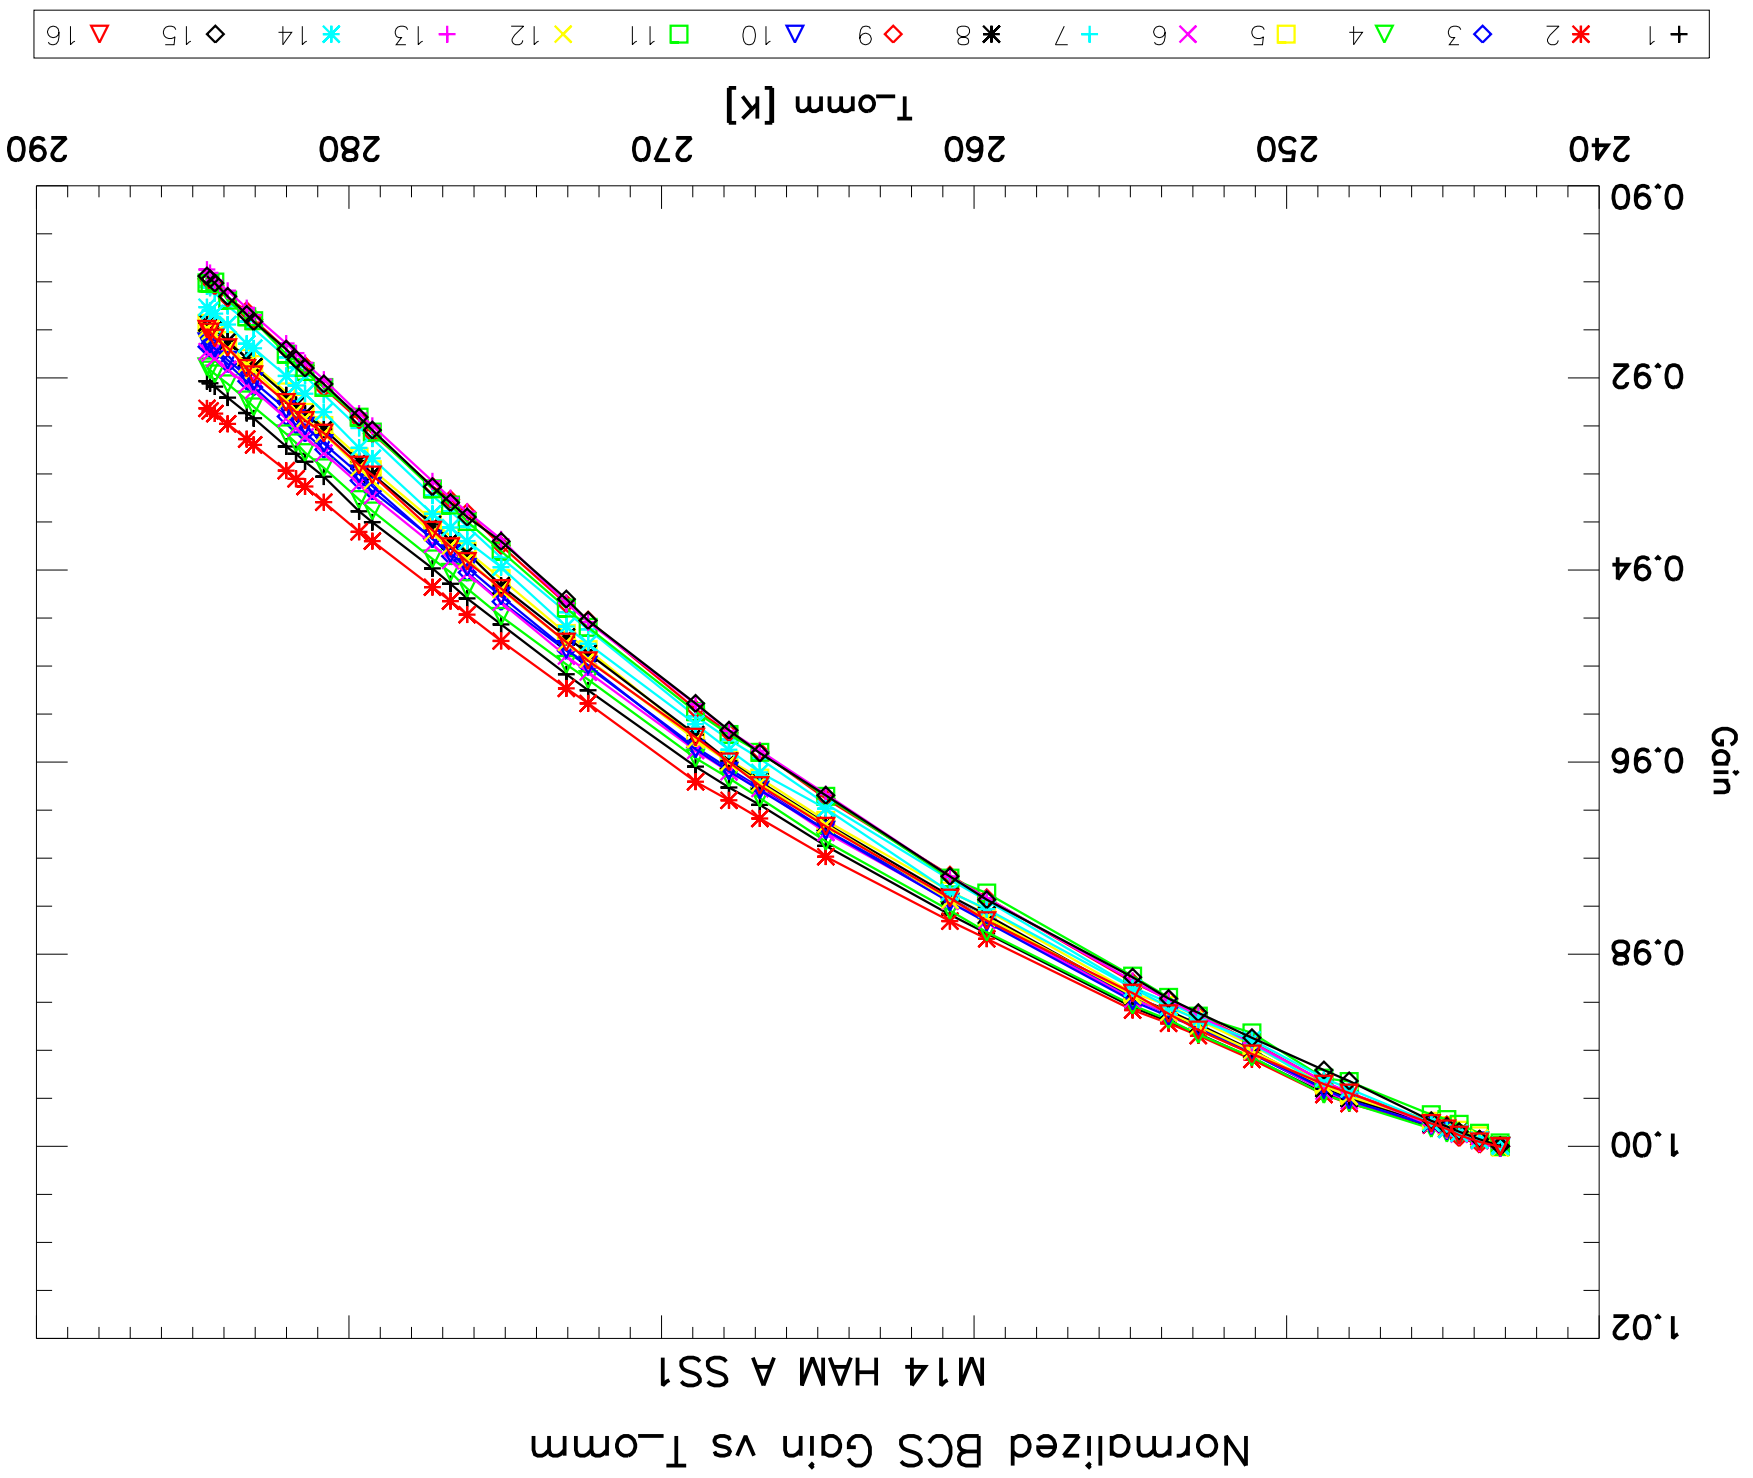


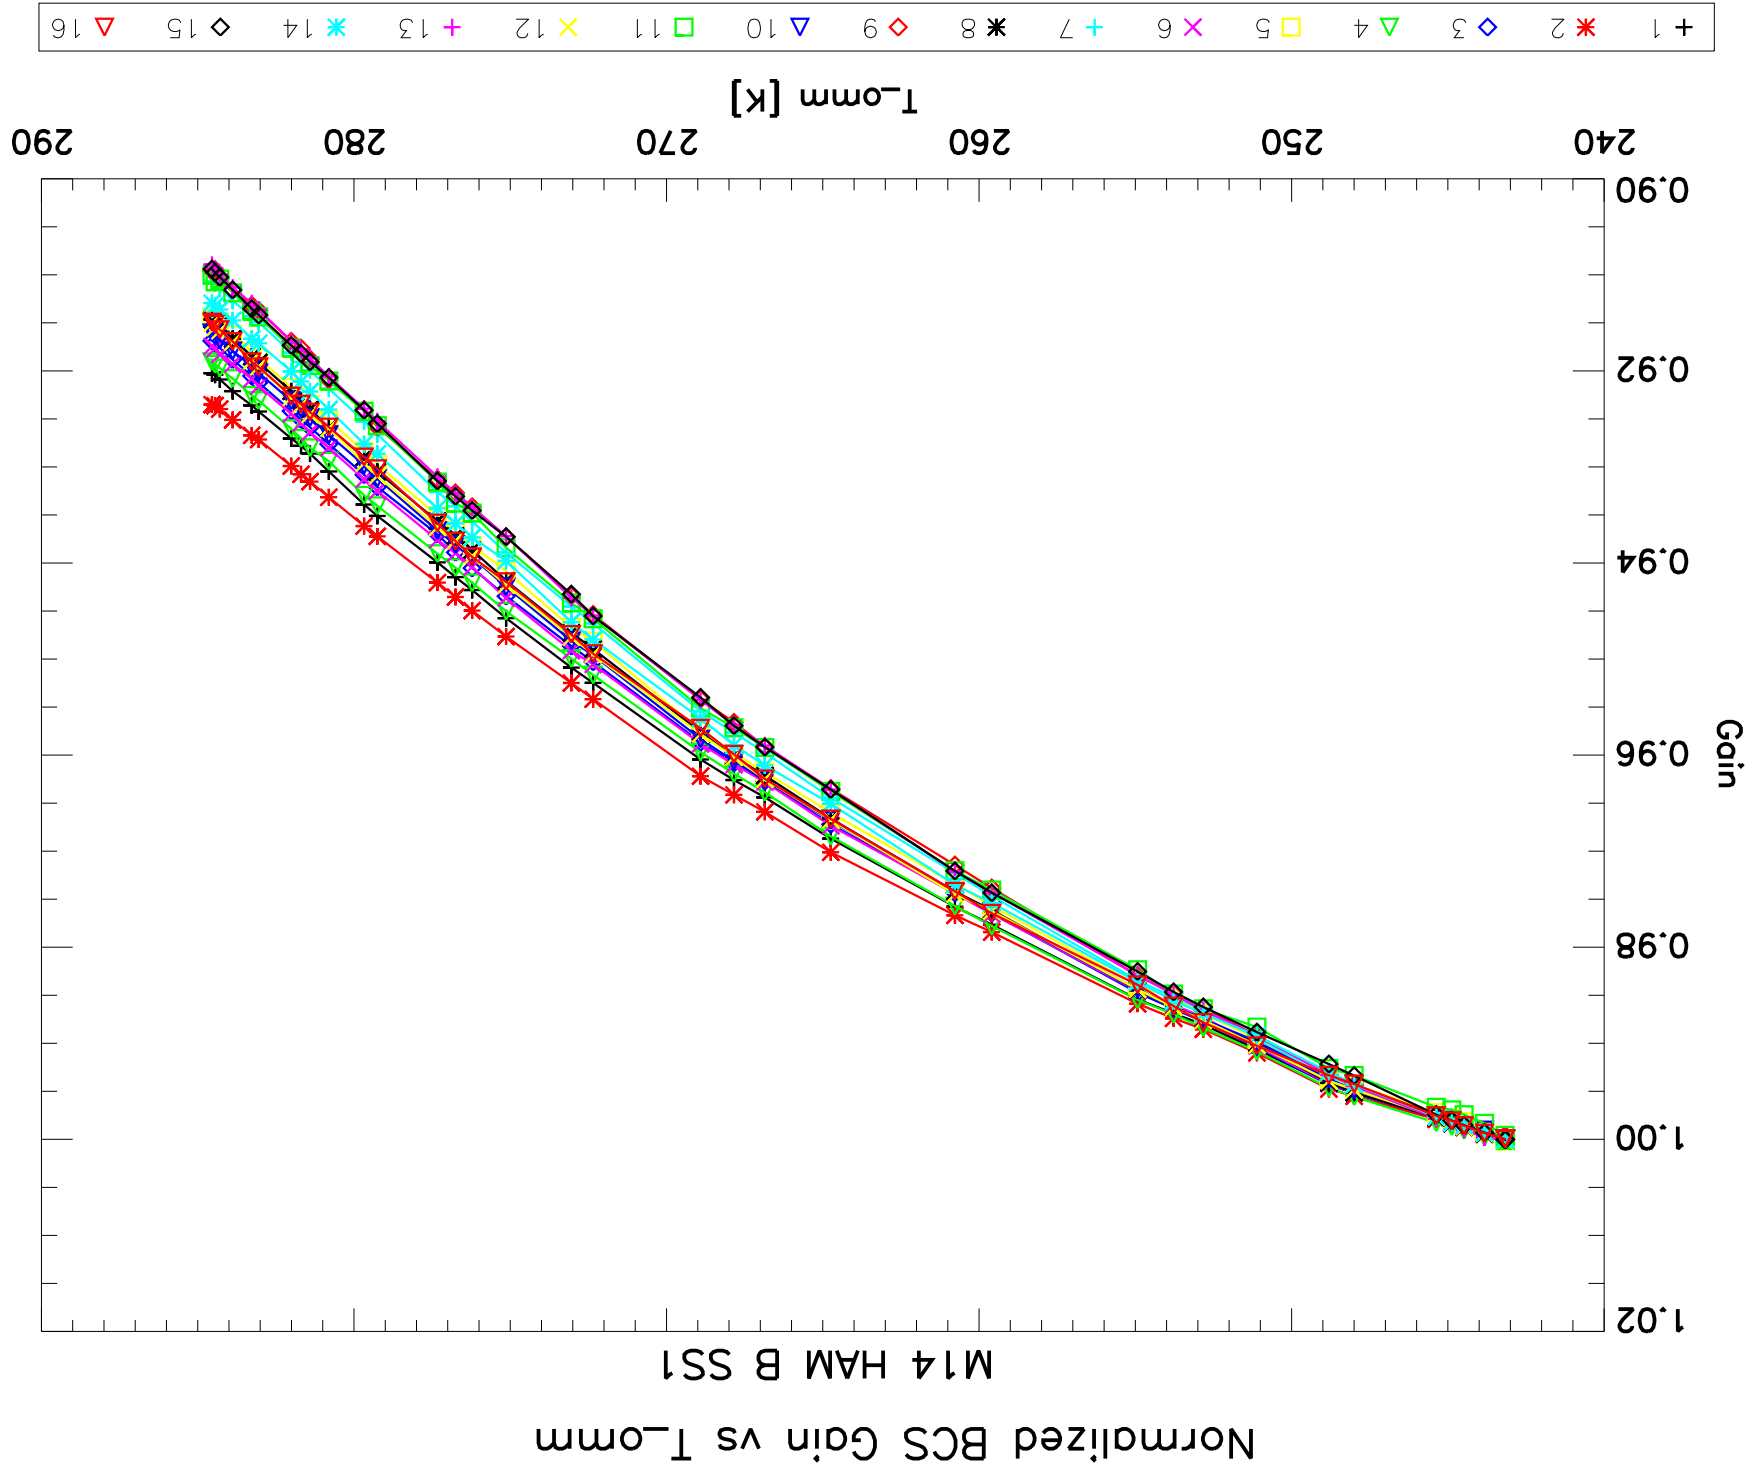

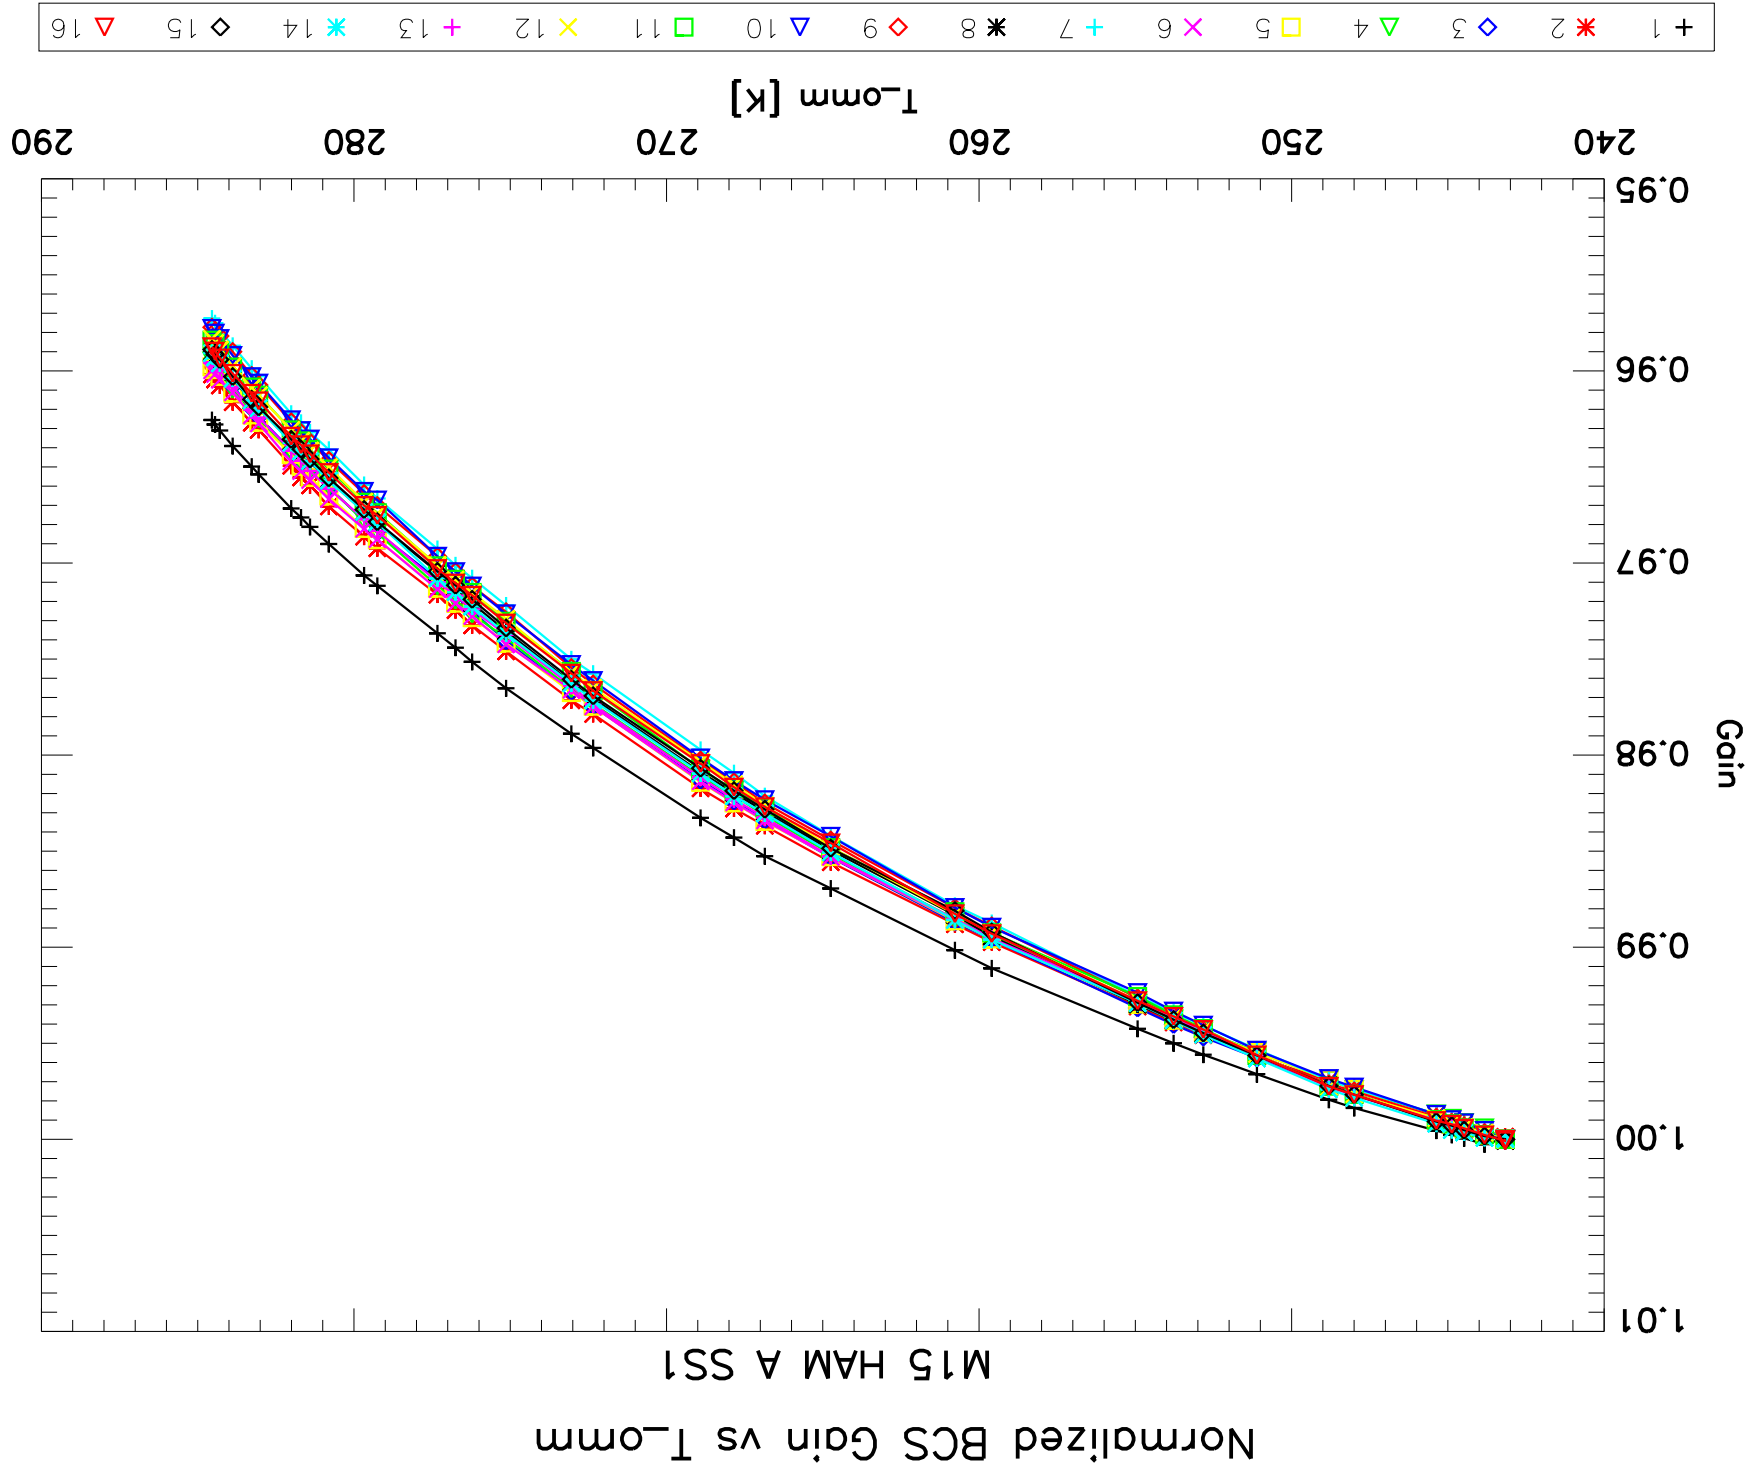


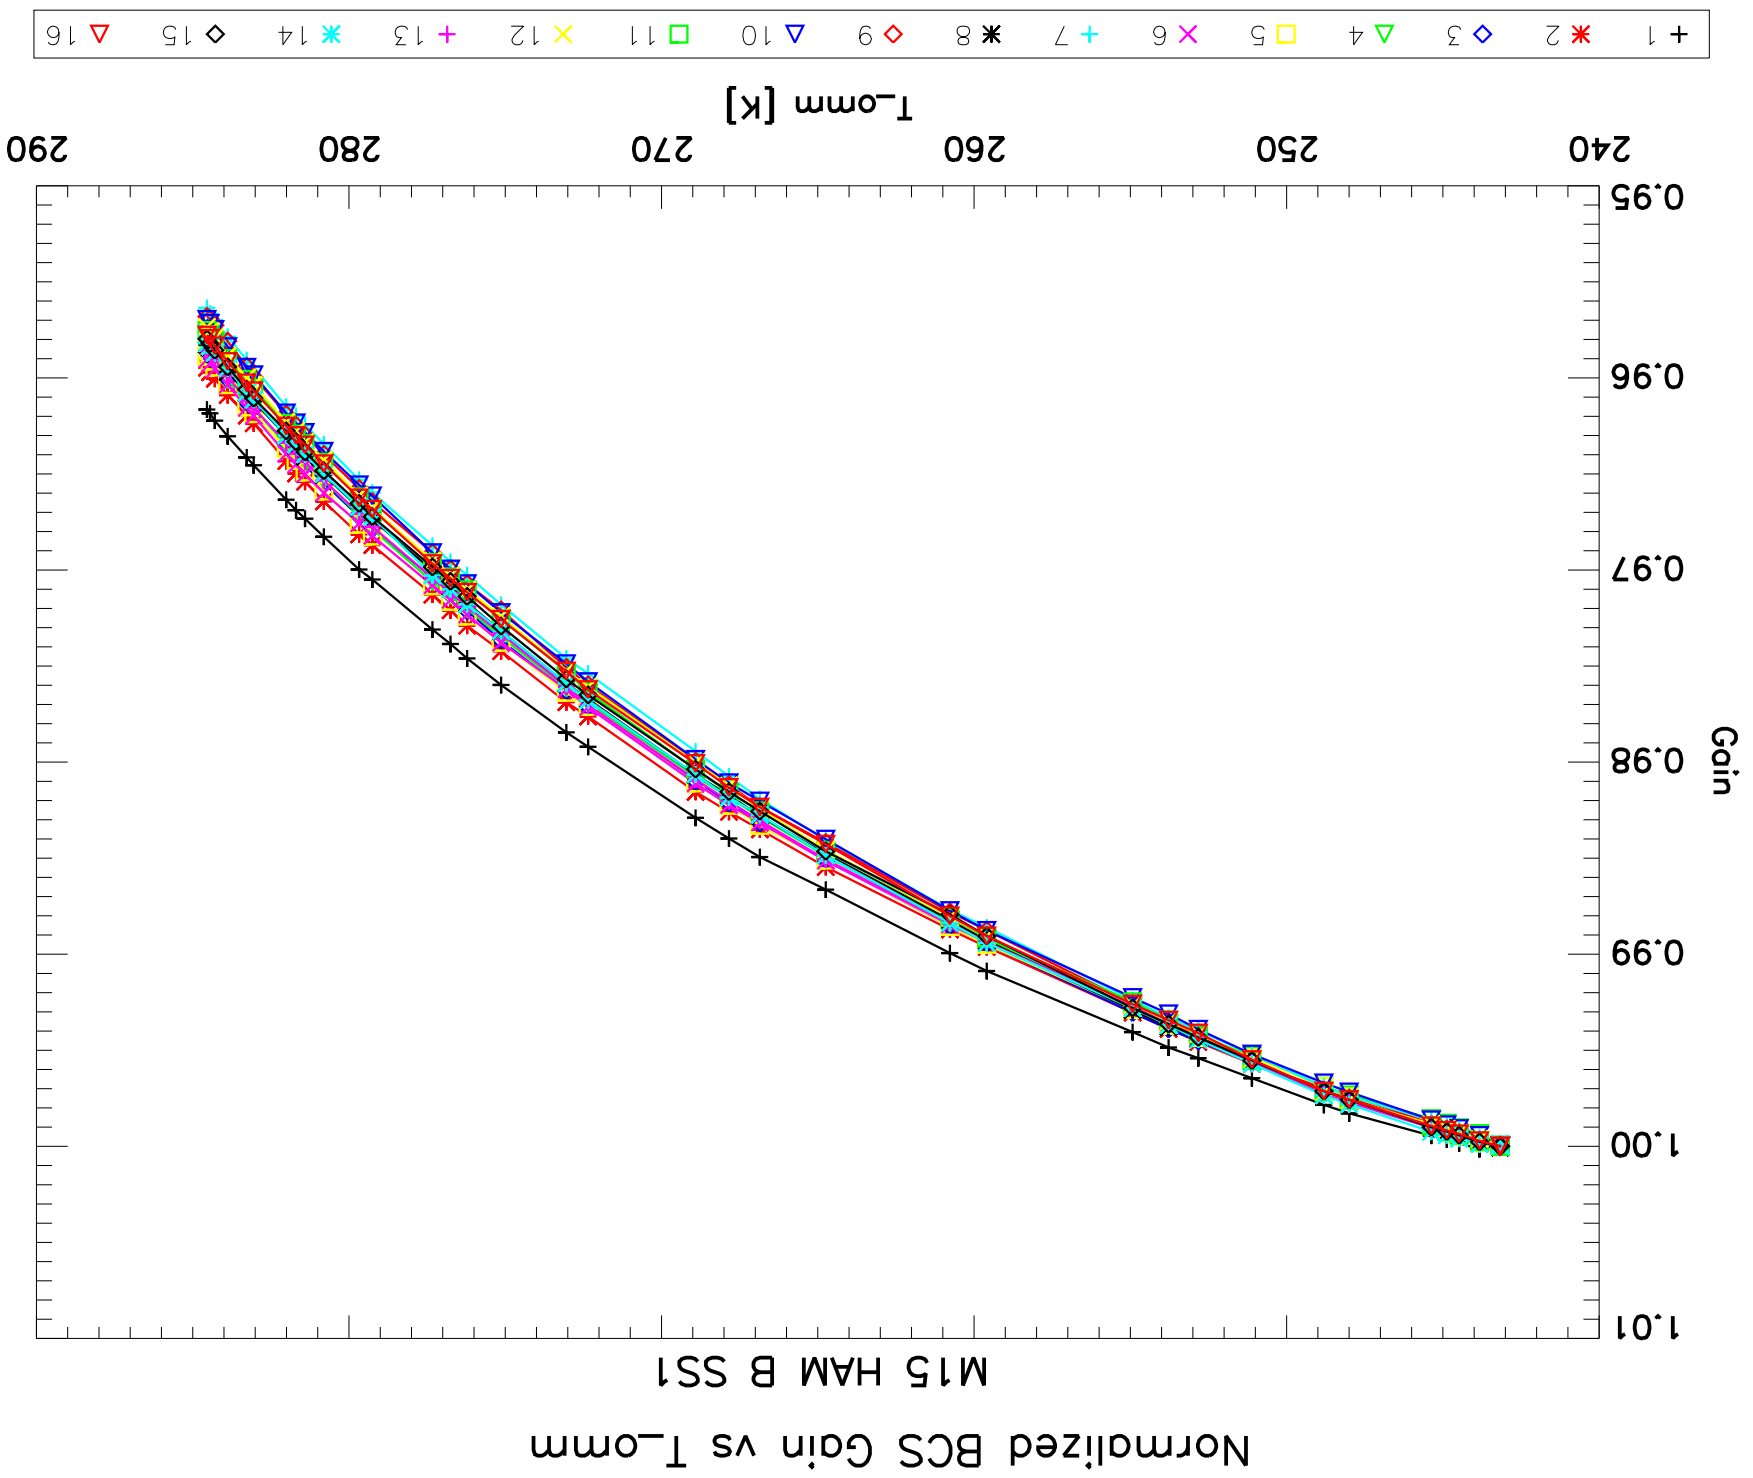


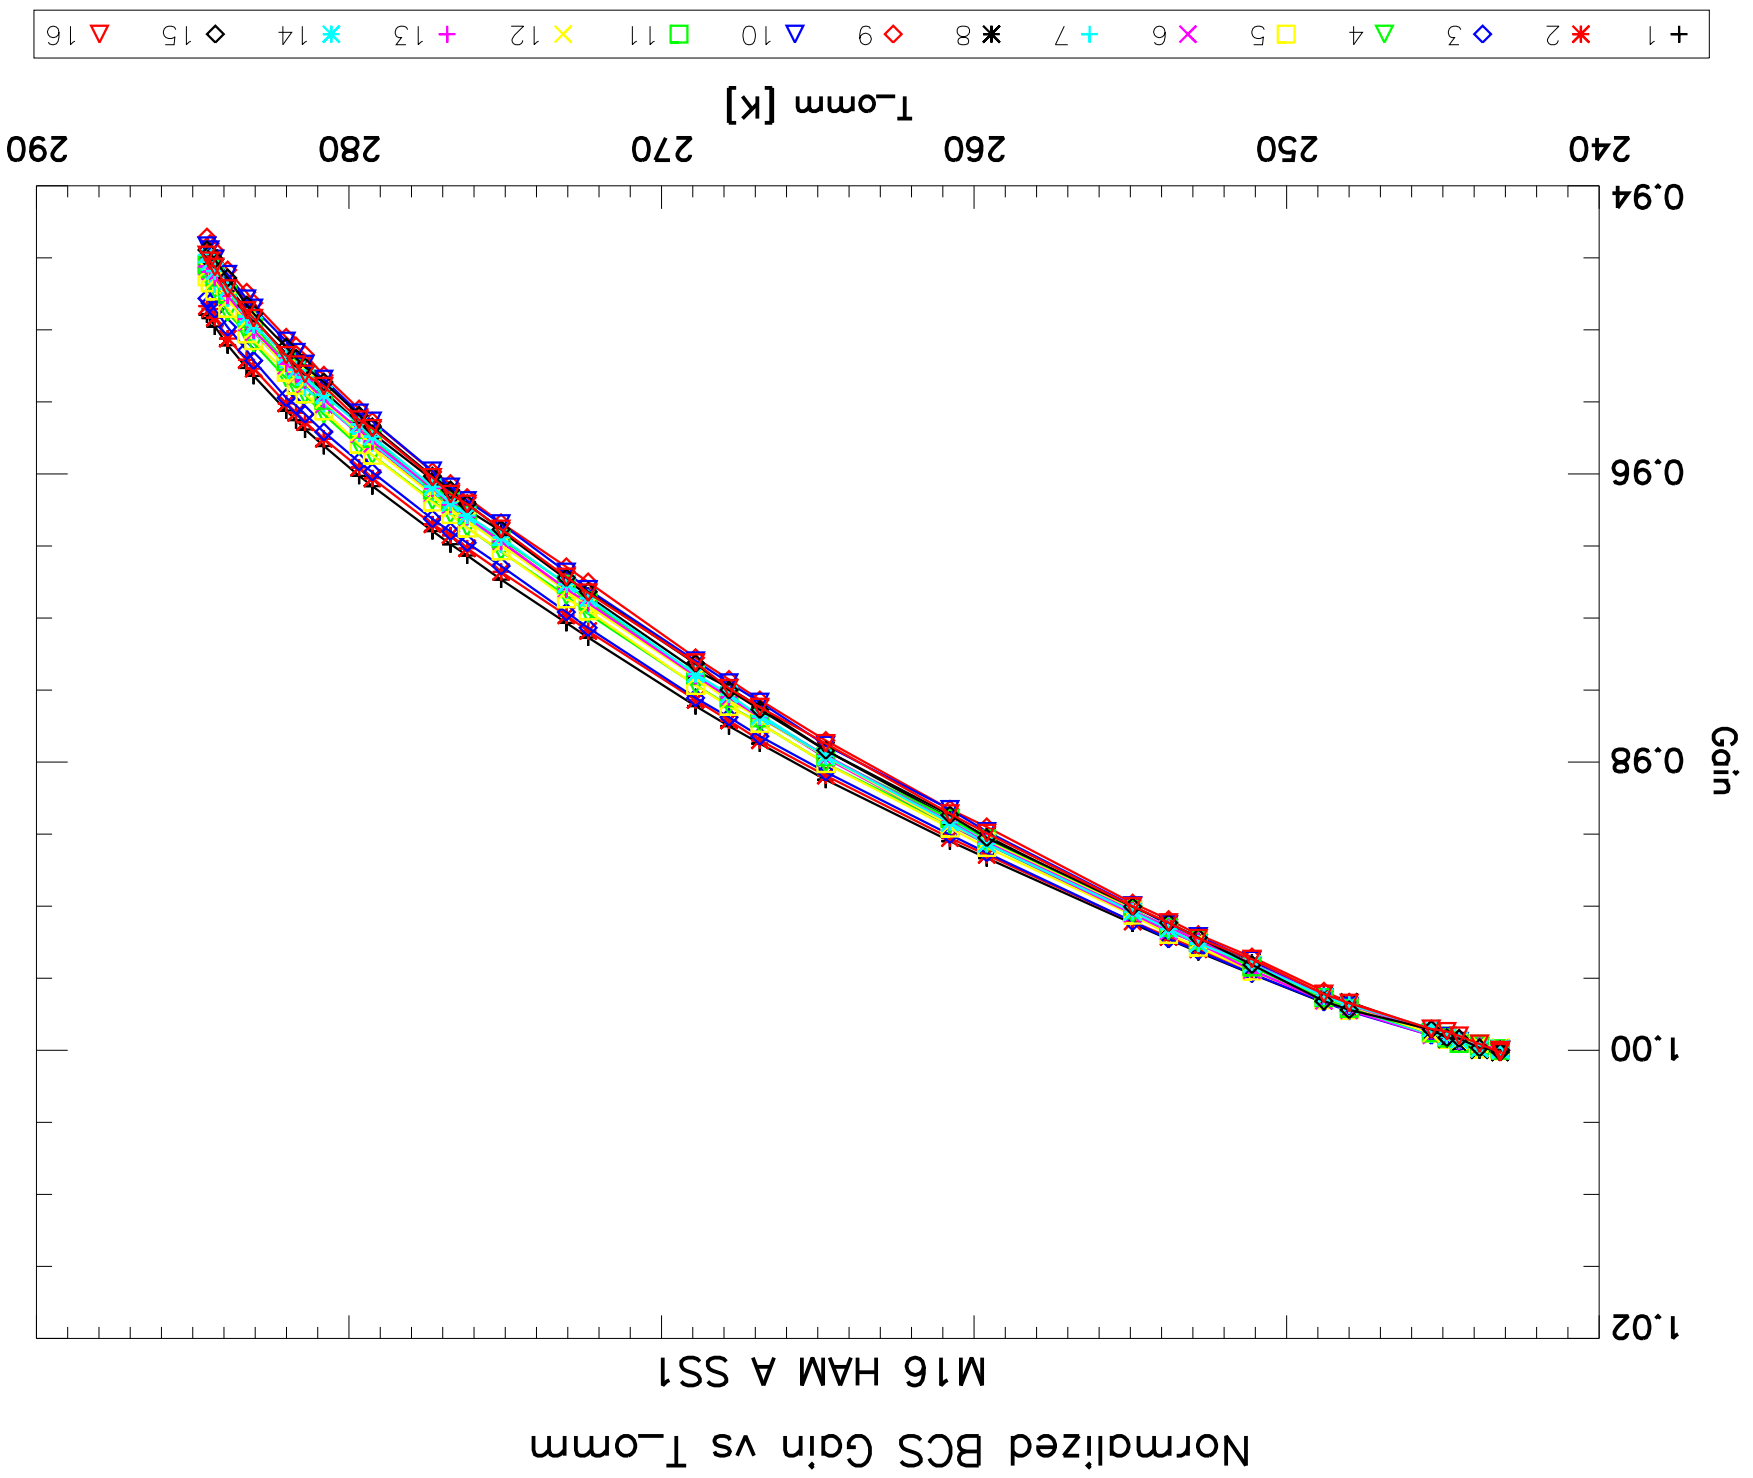

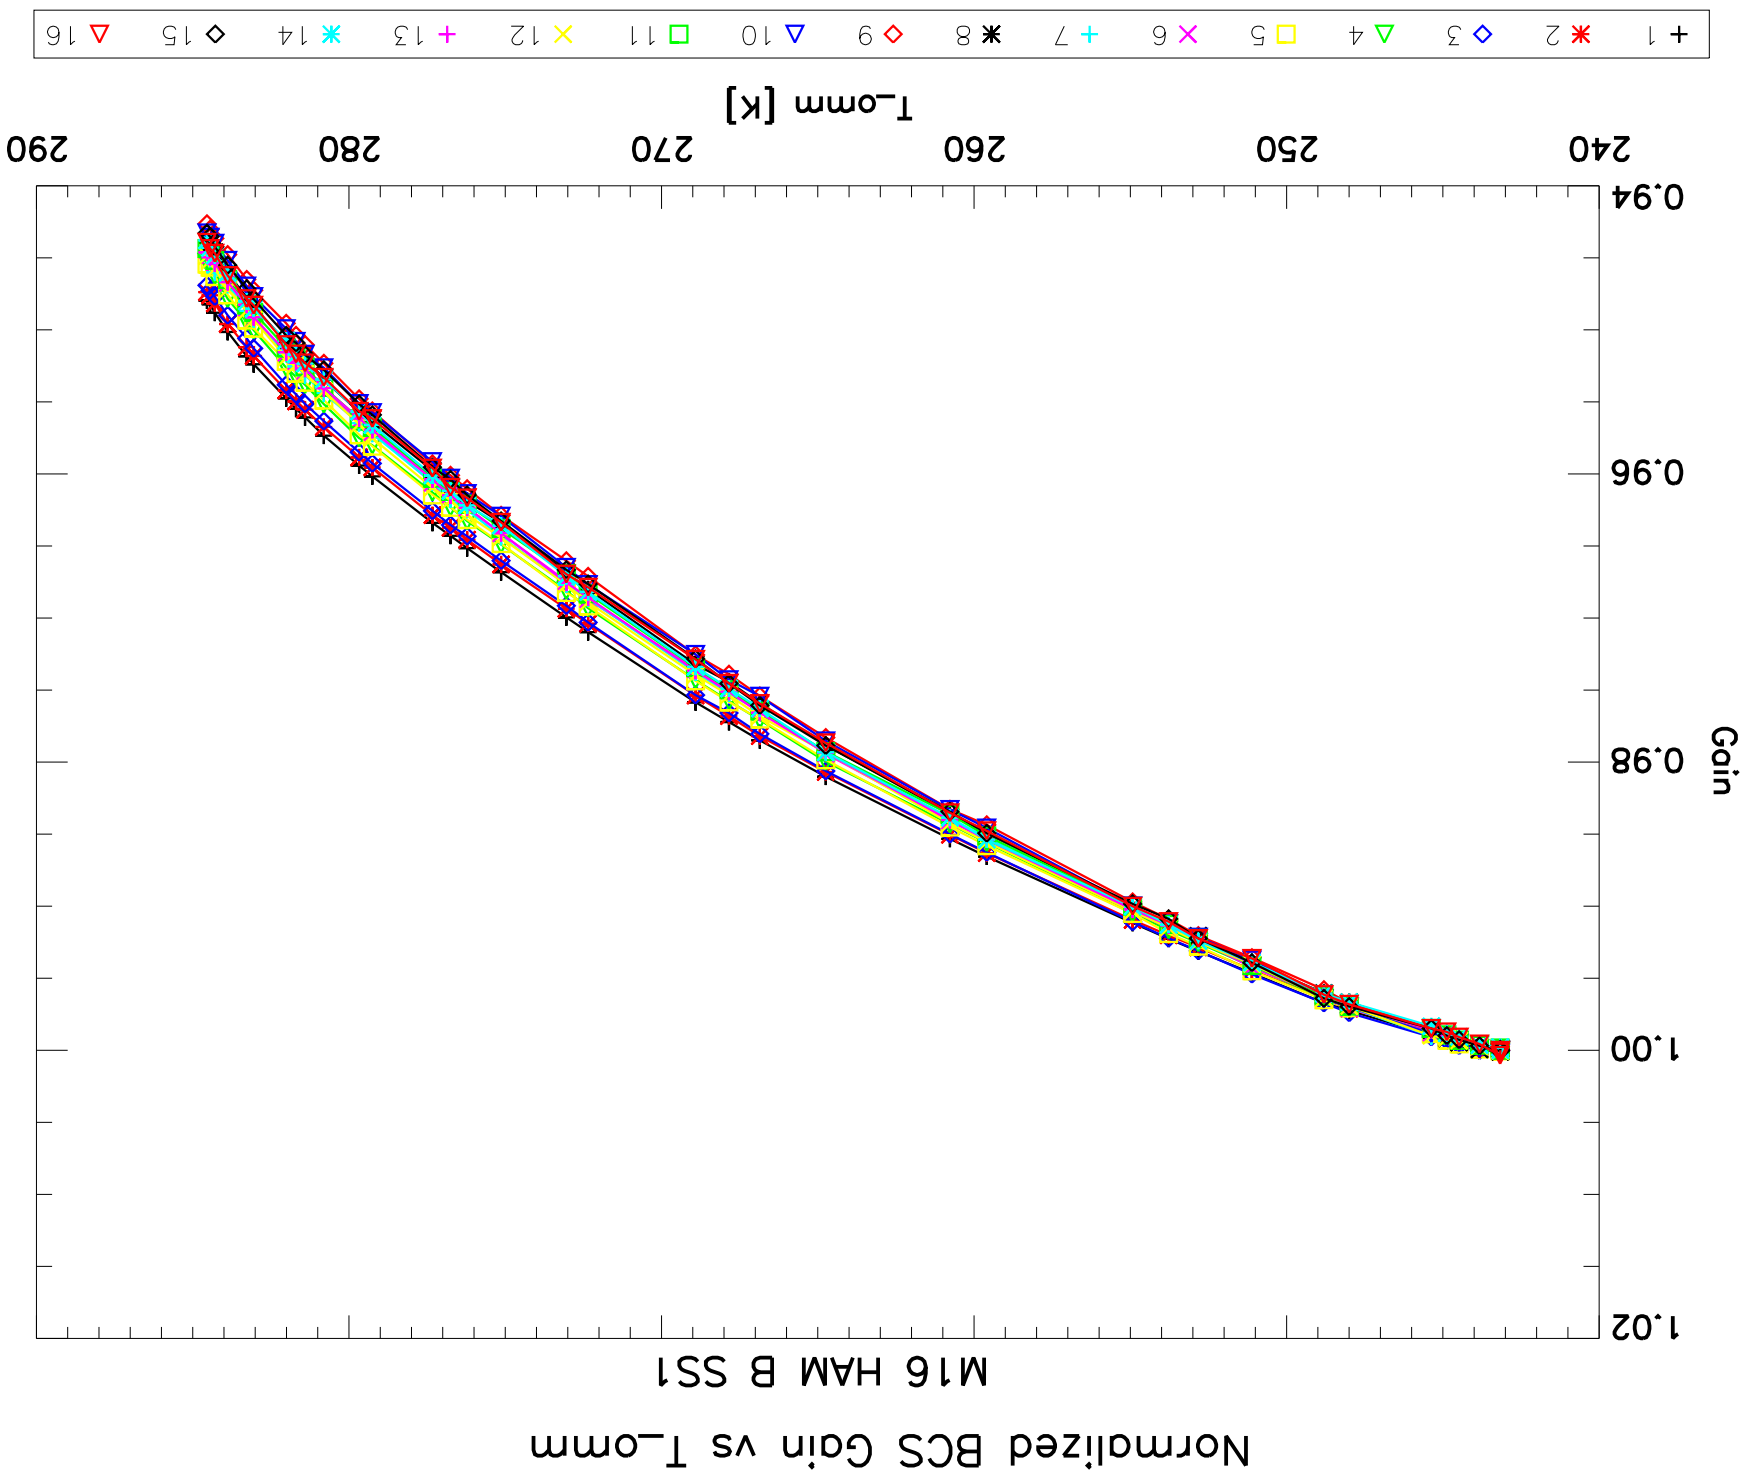



BCS NEDT vs T_{0mm}

14 HAM A SS1

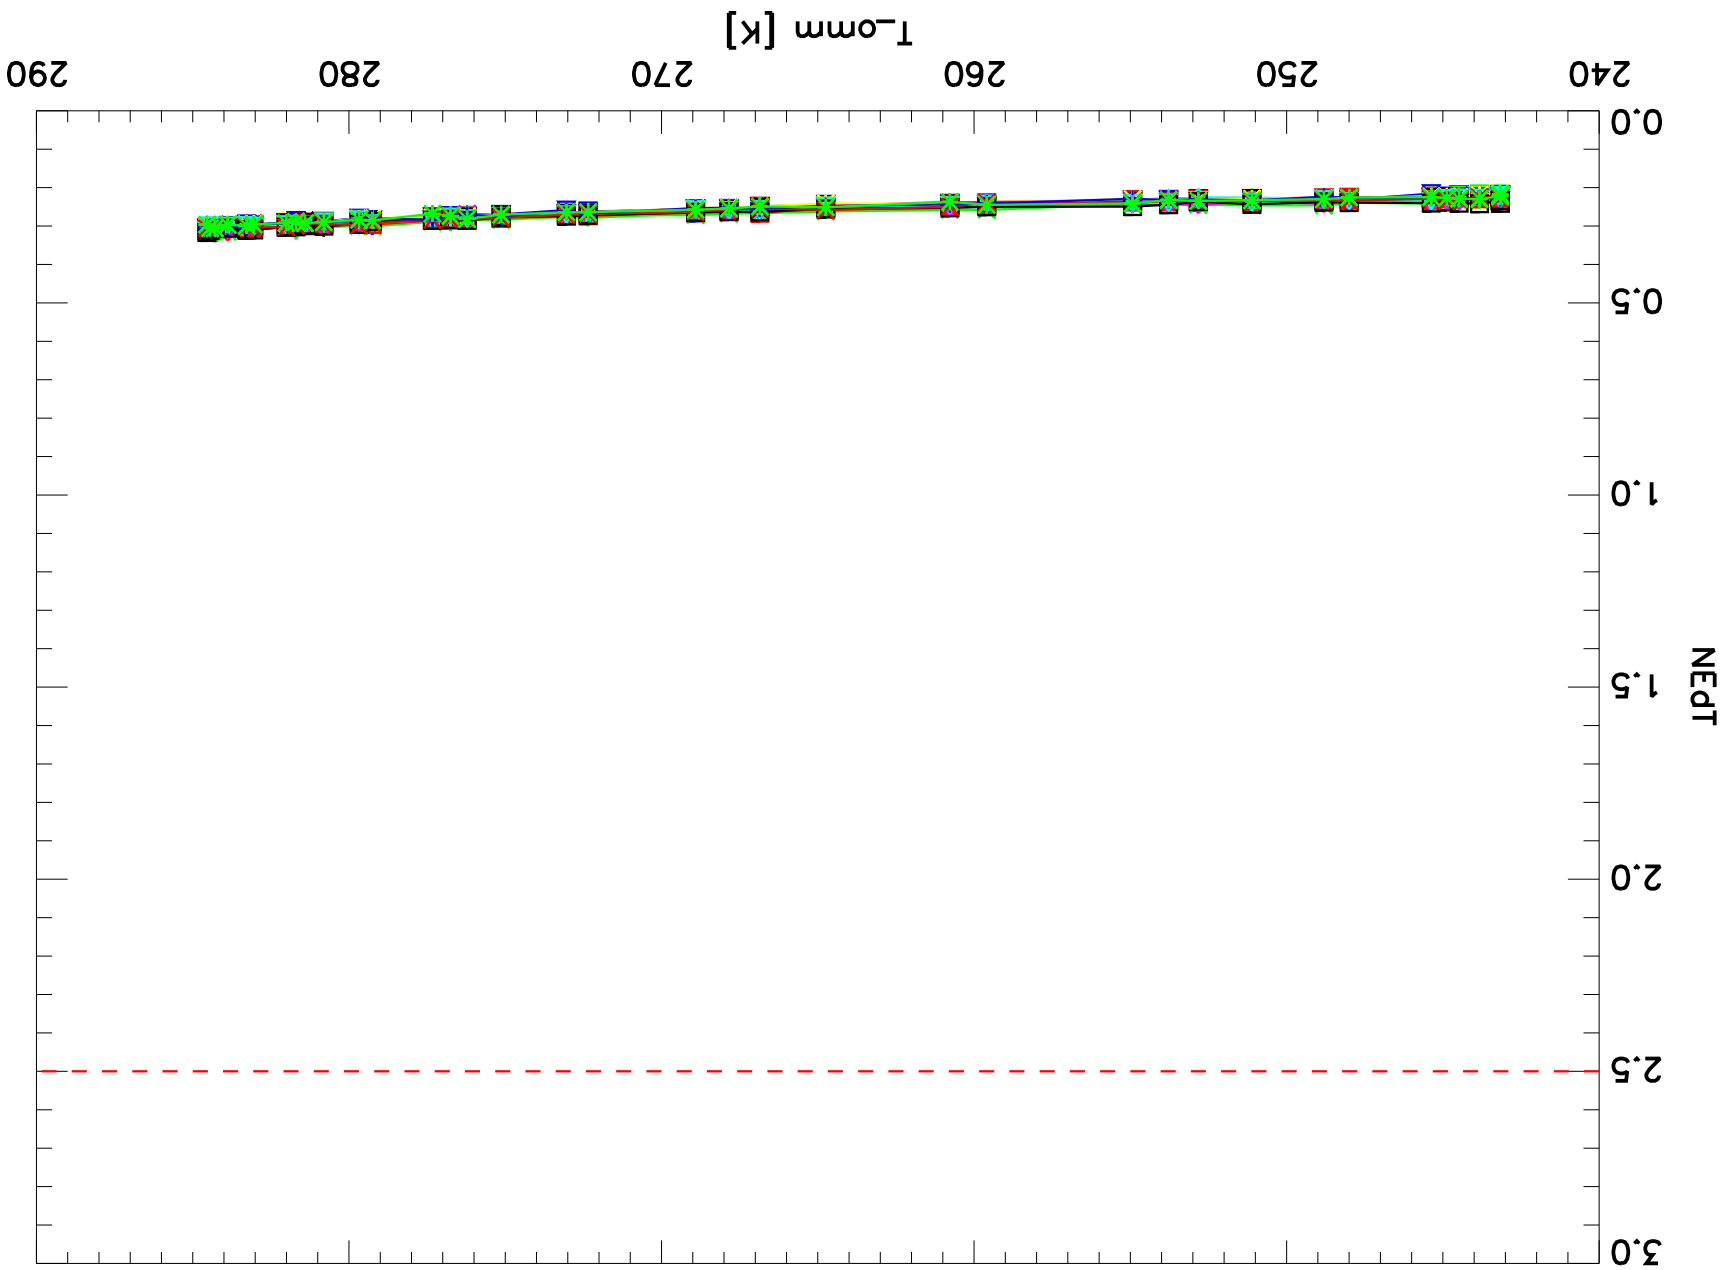



BCS NEDT vs T_{0mm}

14 HAM A SS2

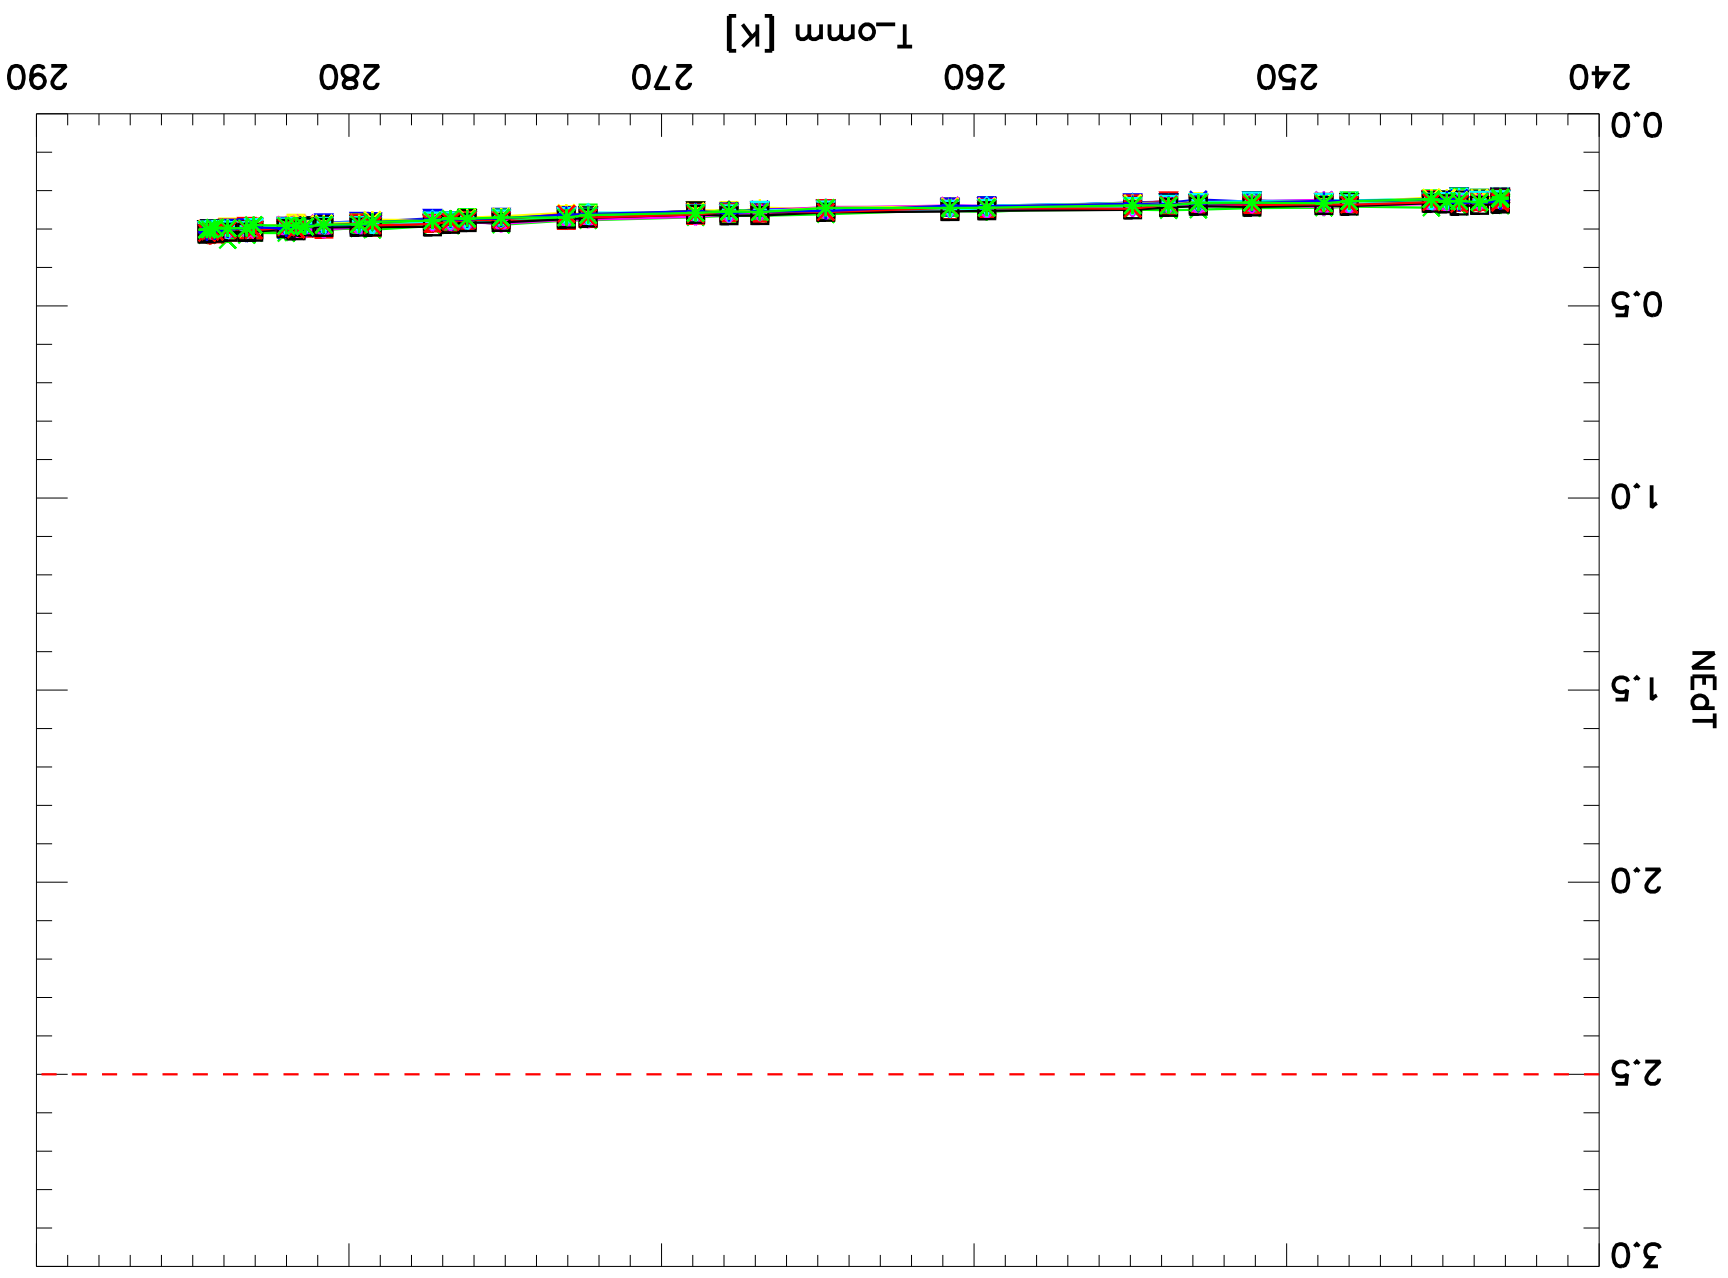



BCS NEDT vs T_{0mm}

14 HAM B SS1

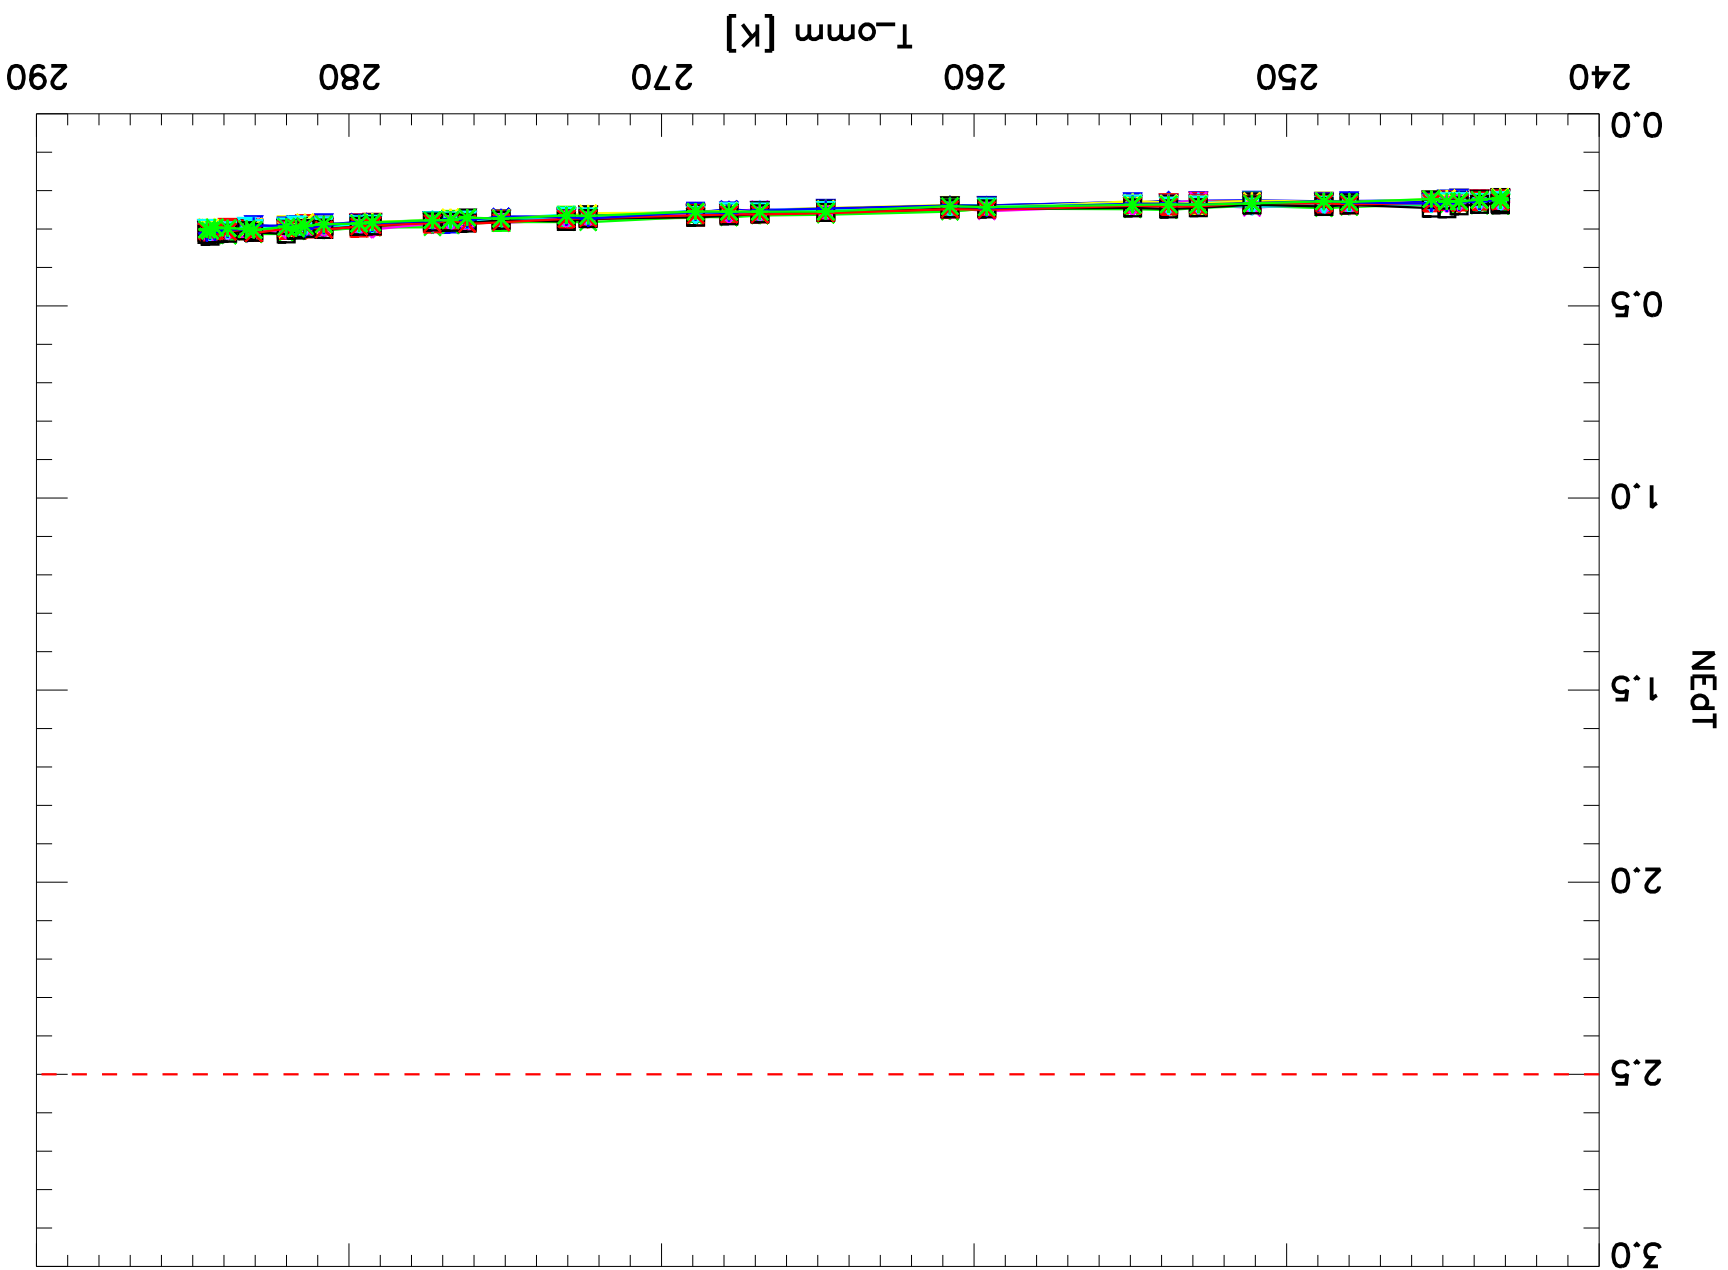


BCS NEDT vs T_{0mm}

14 HAM B SS2

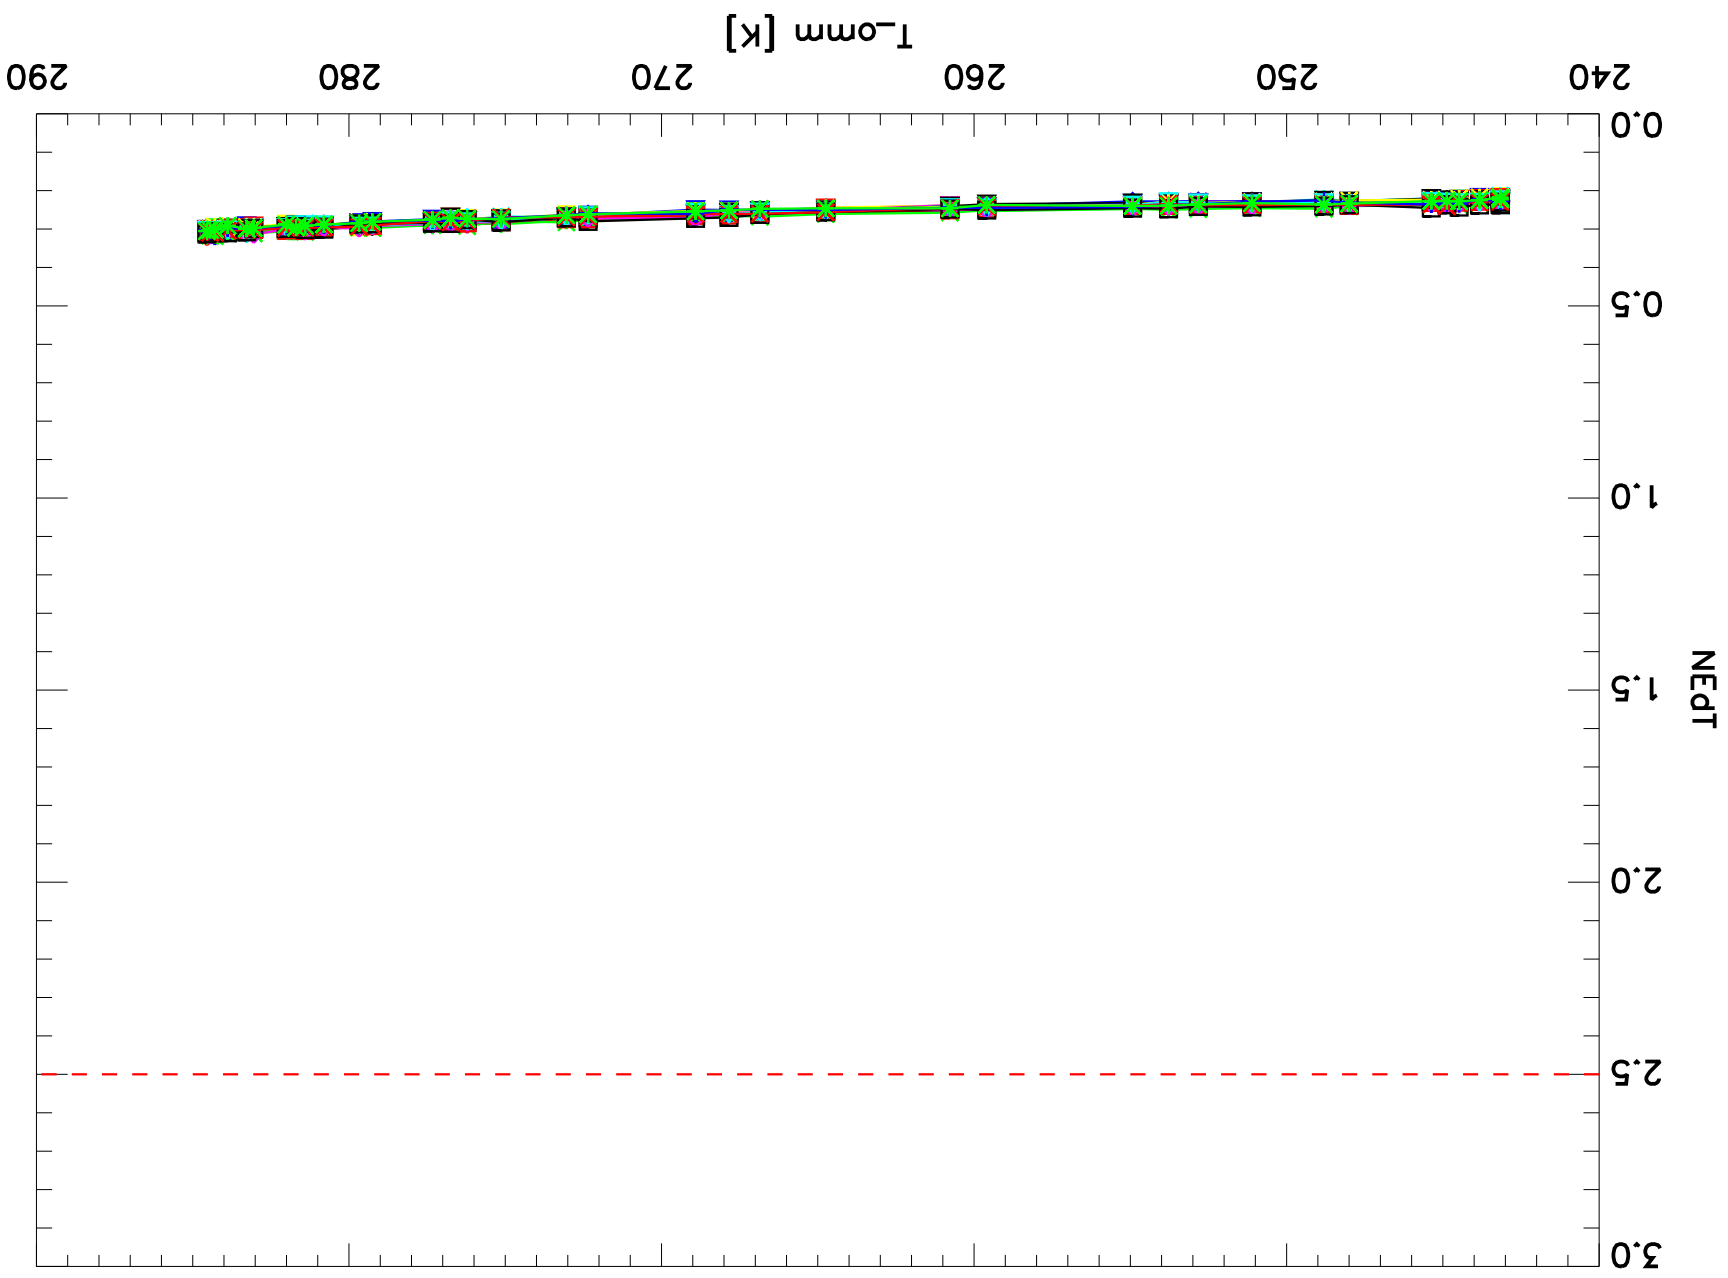



BCS NEDT vs T₀mm

IS HAM A SS1

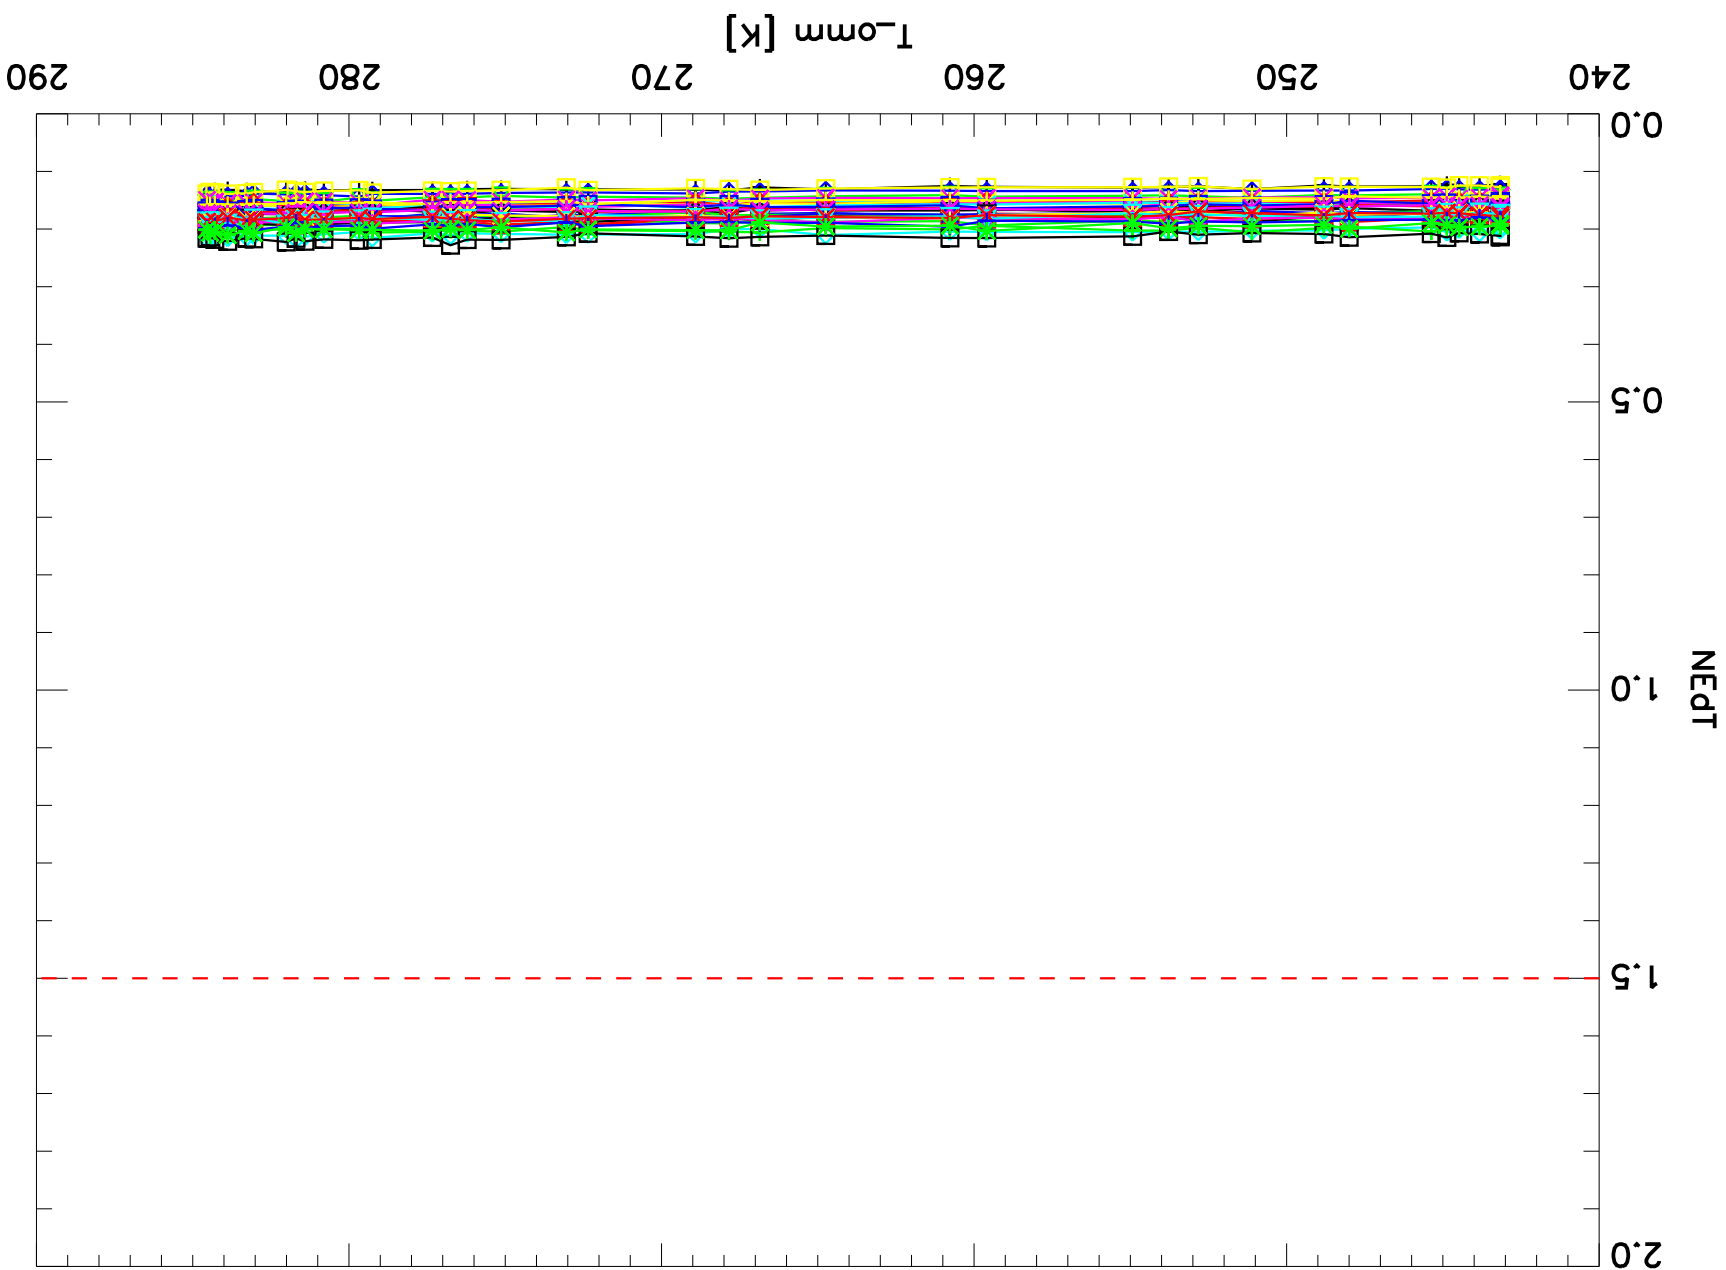



BCS NEDT vs T_{0mm}


IS HAM A SS2

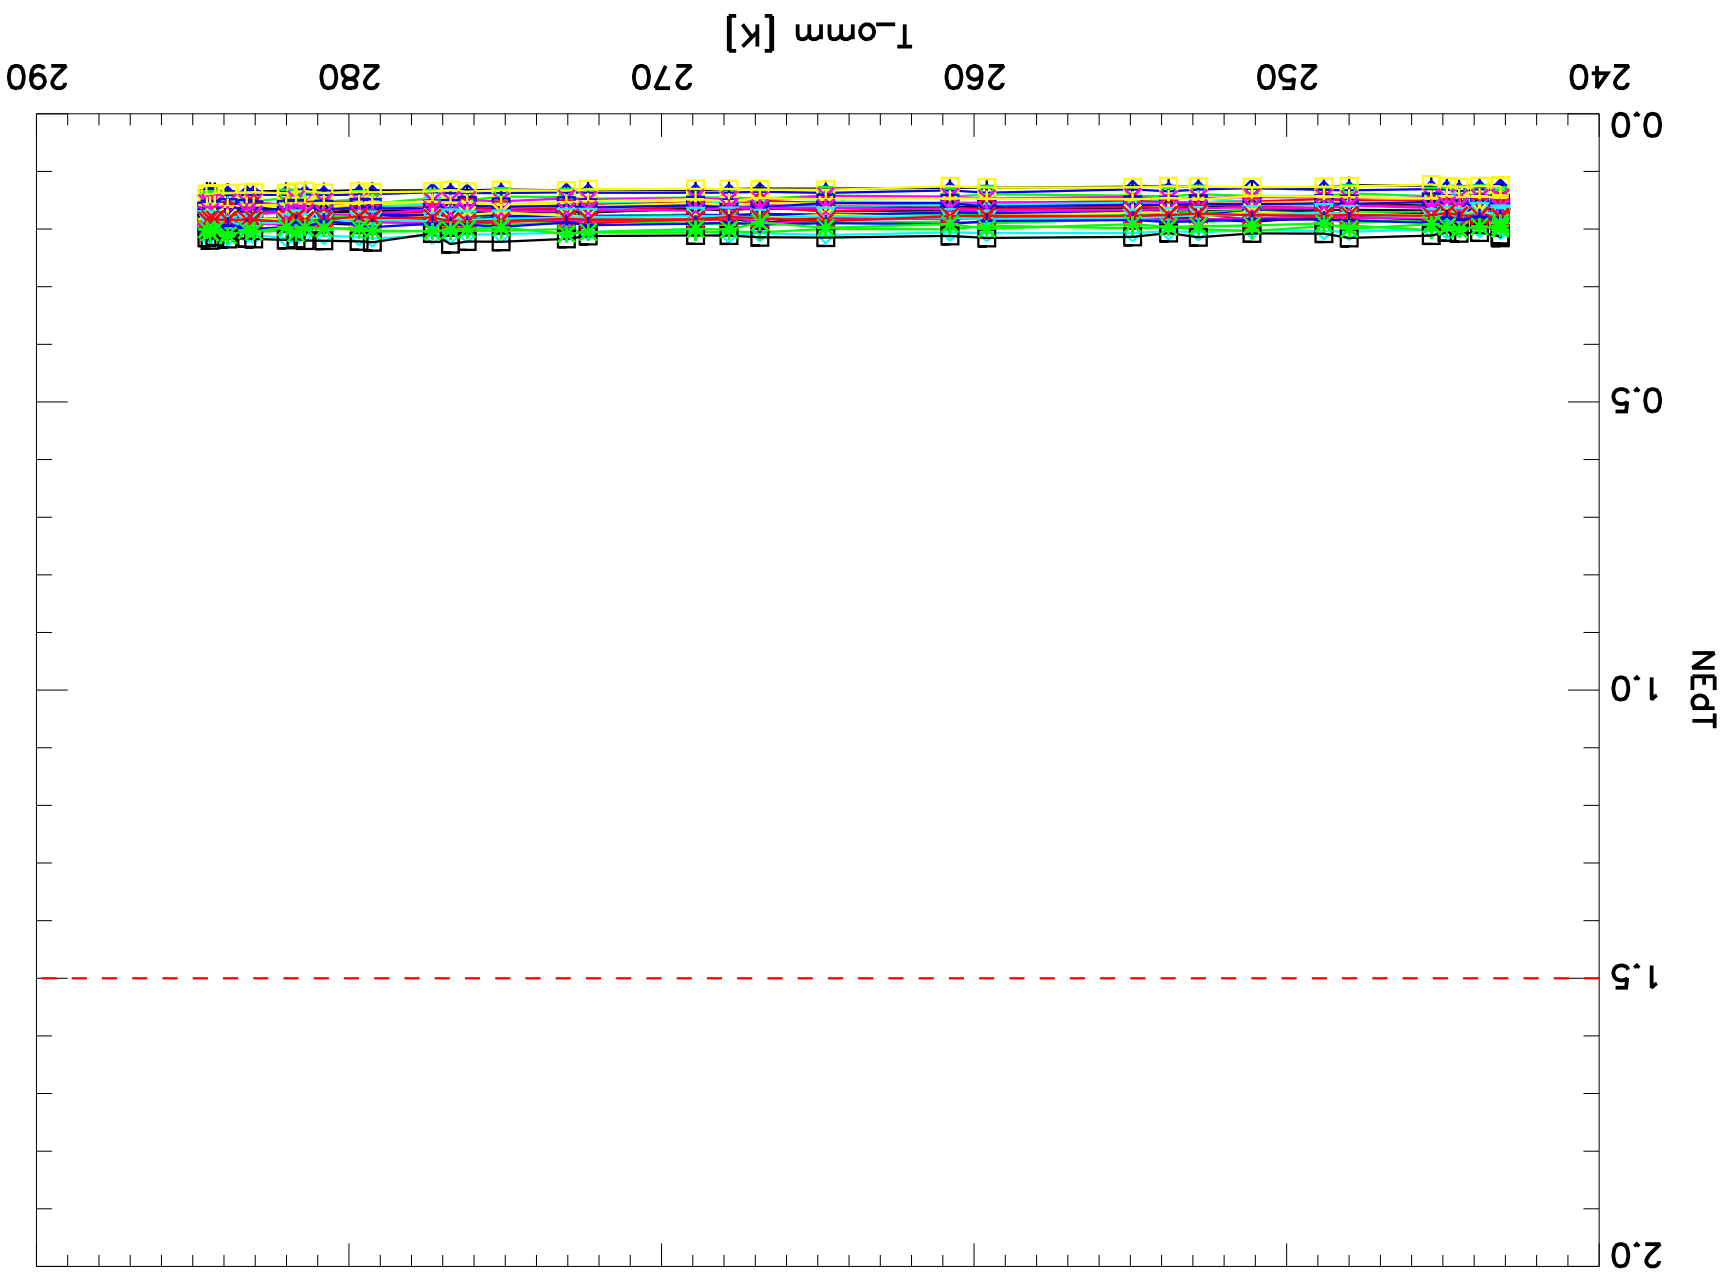

BCS NEDT vs T_{0mm}


15 HAM B SS1

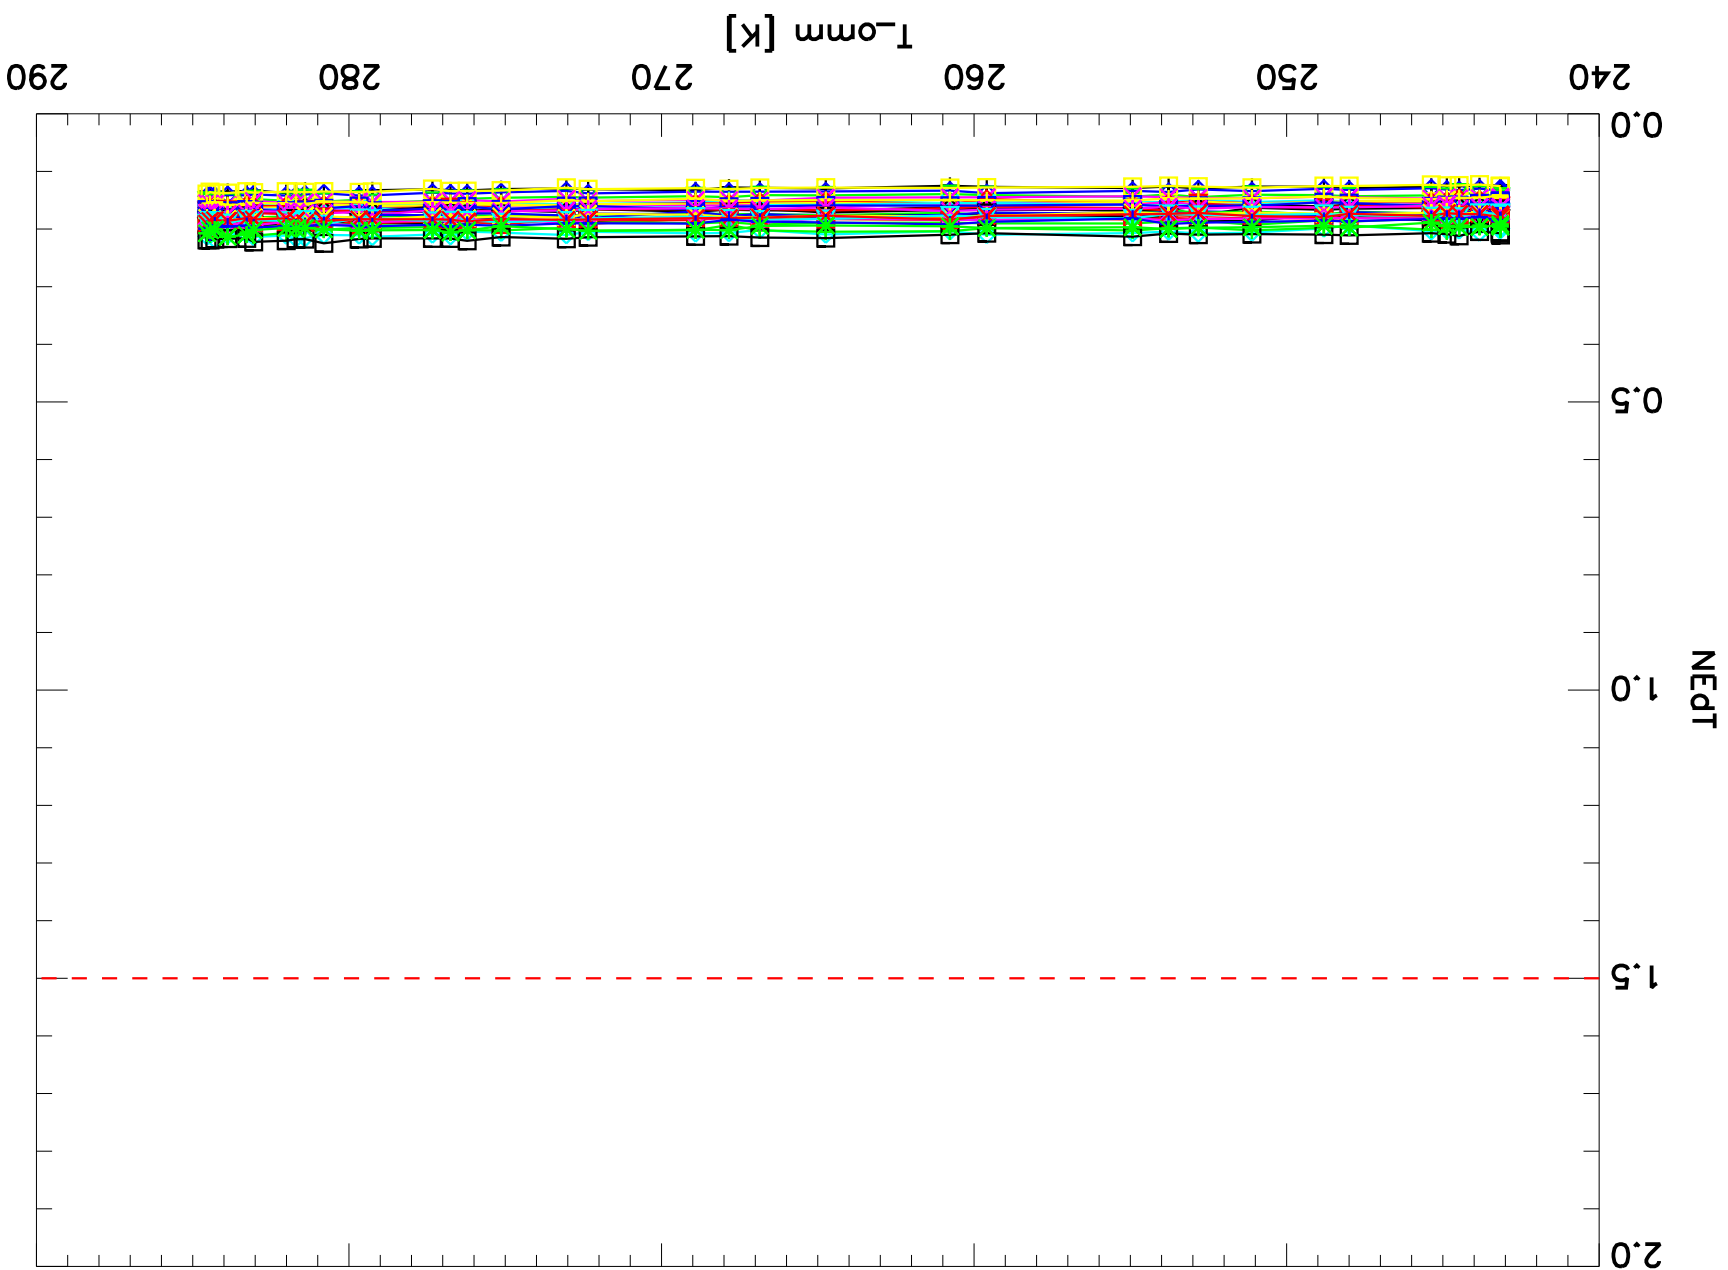


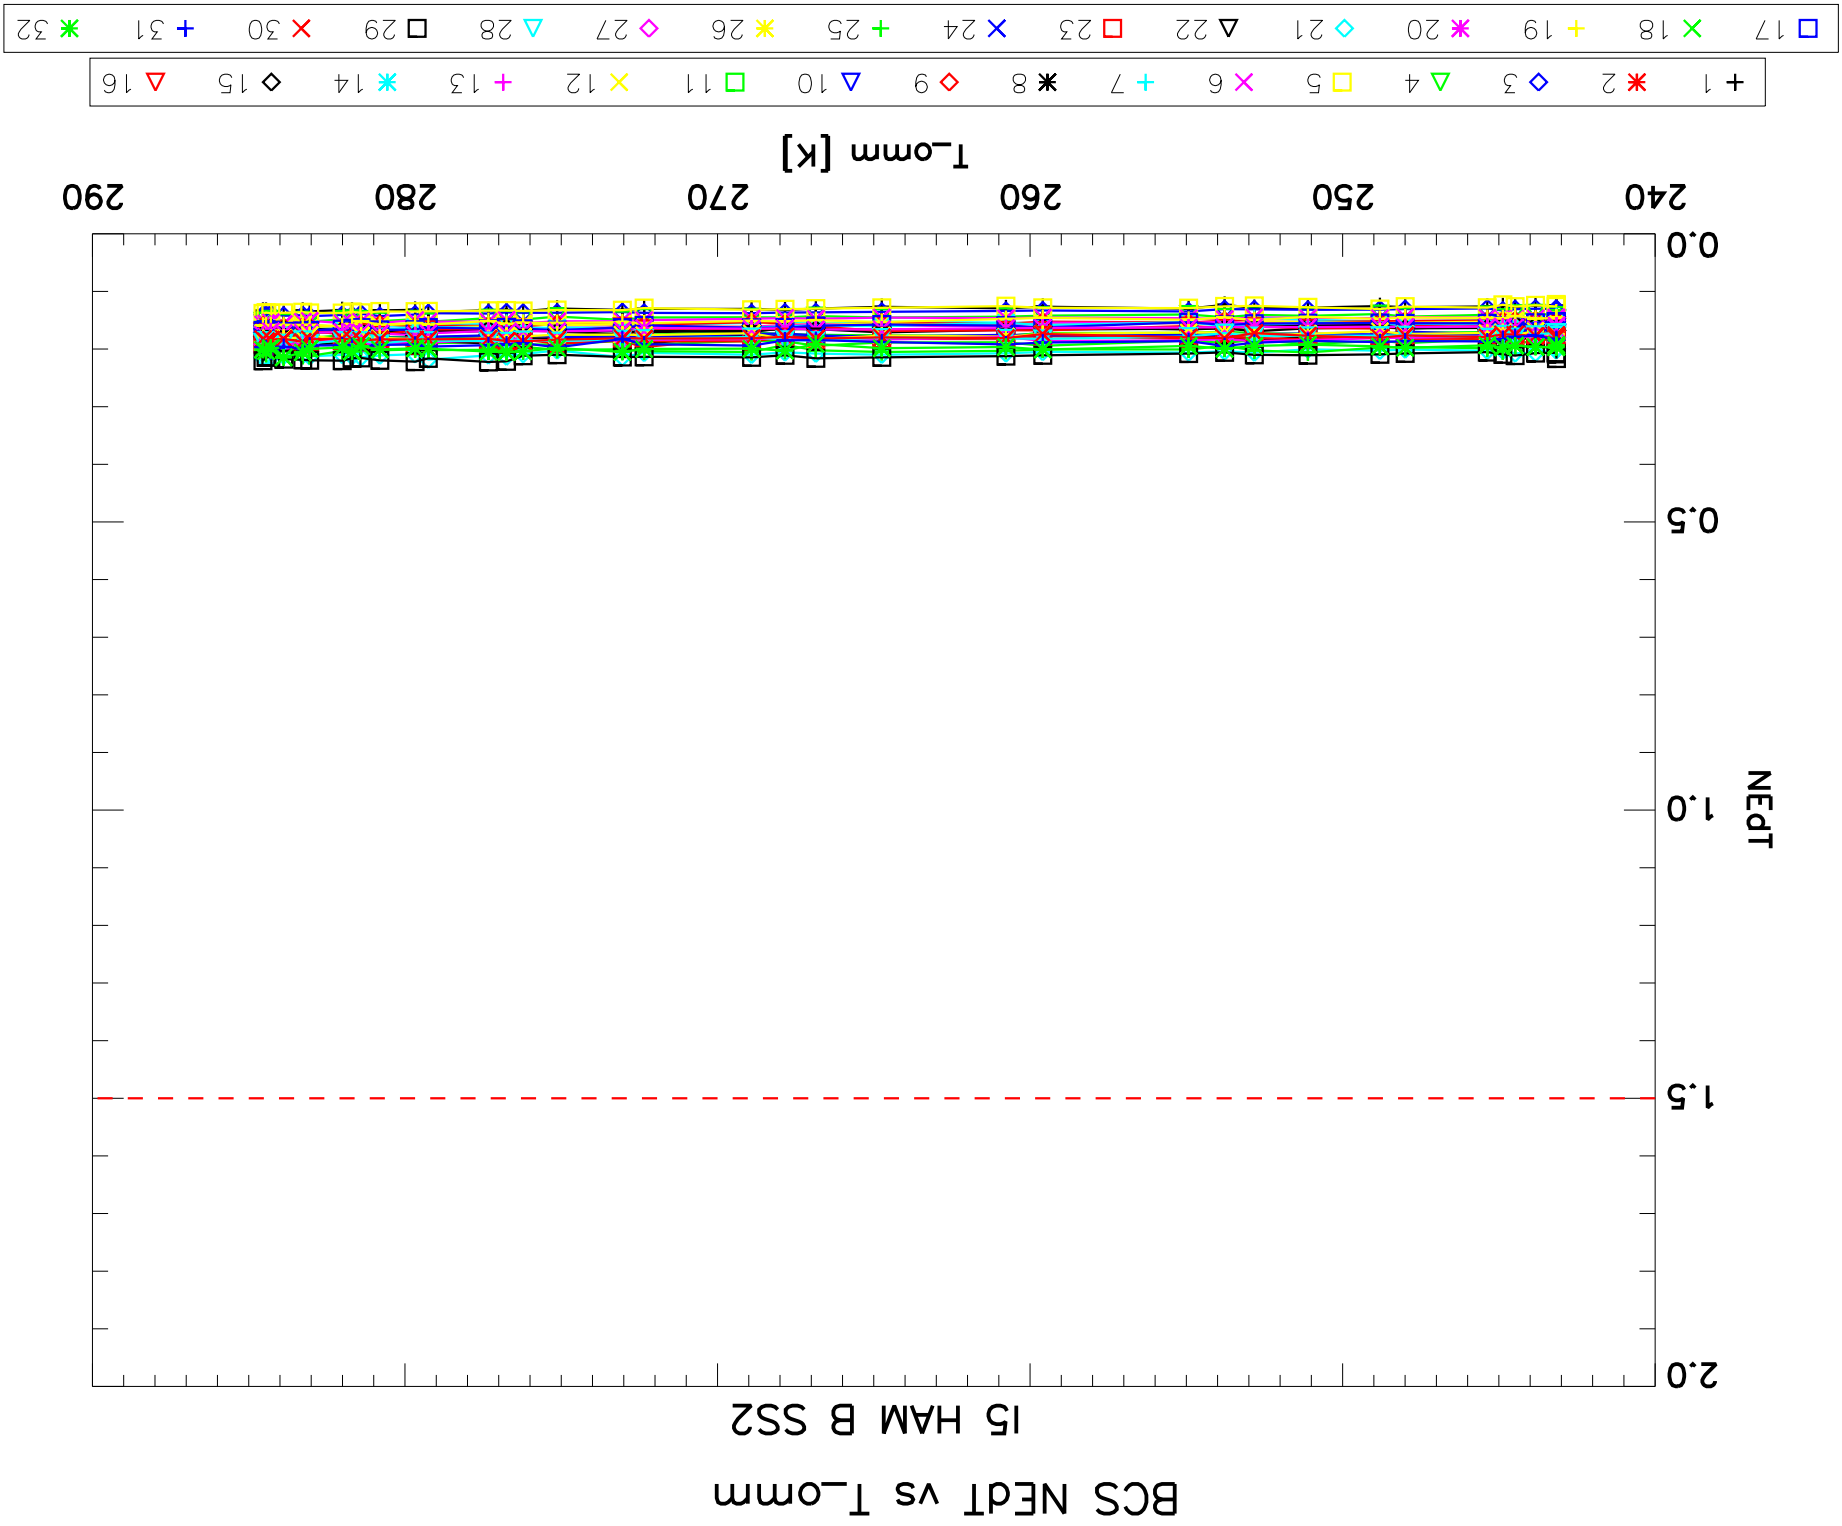



BCS NEDT vs T_{0mm}

M12 HAM A SS1

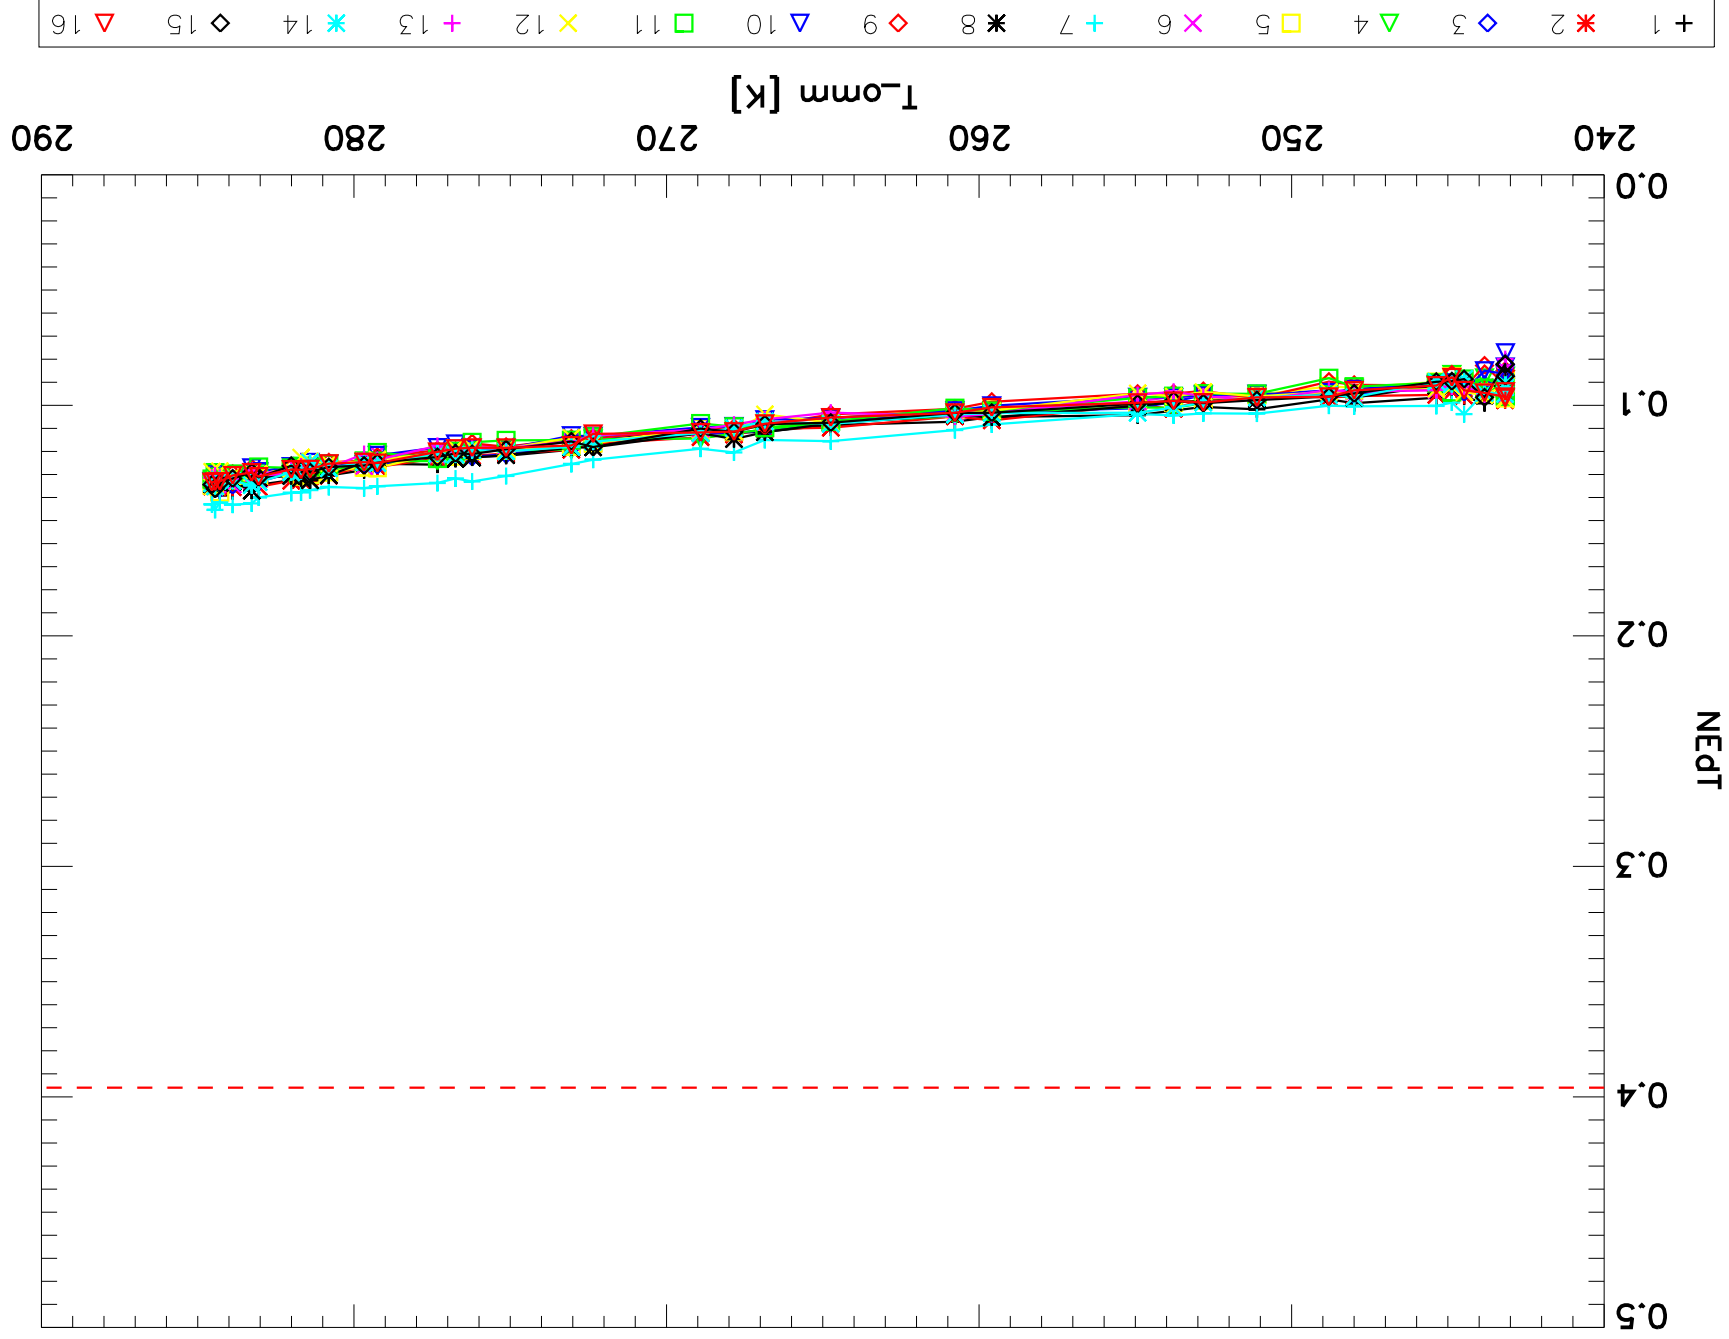

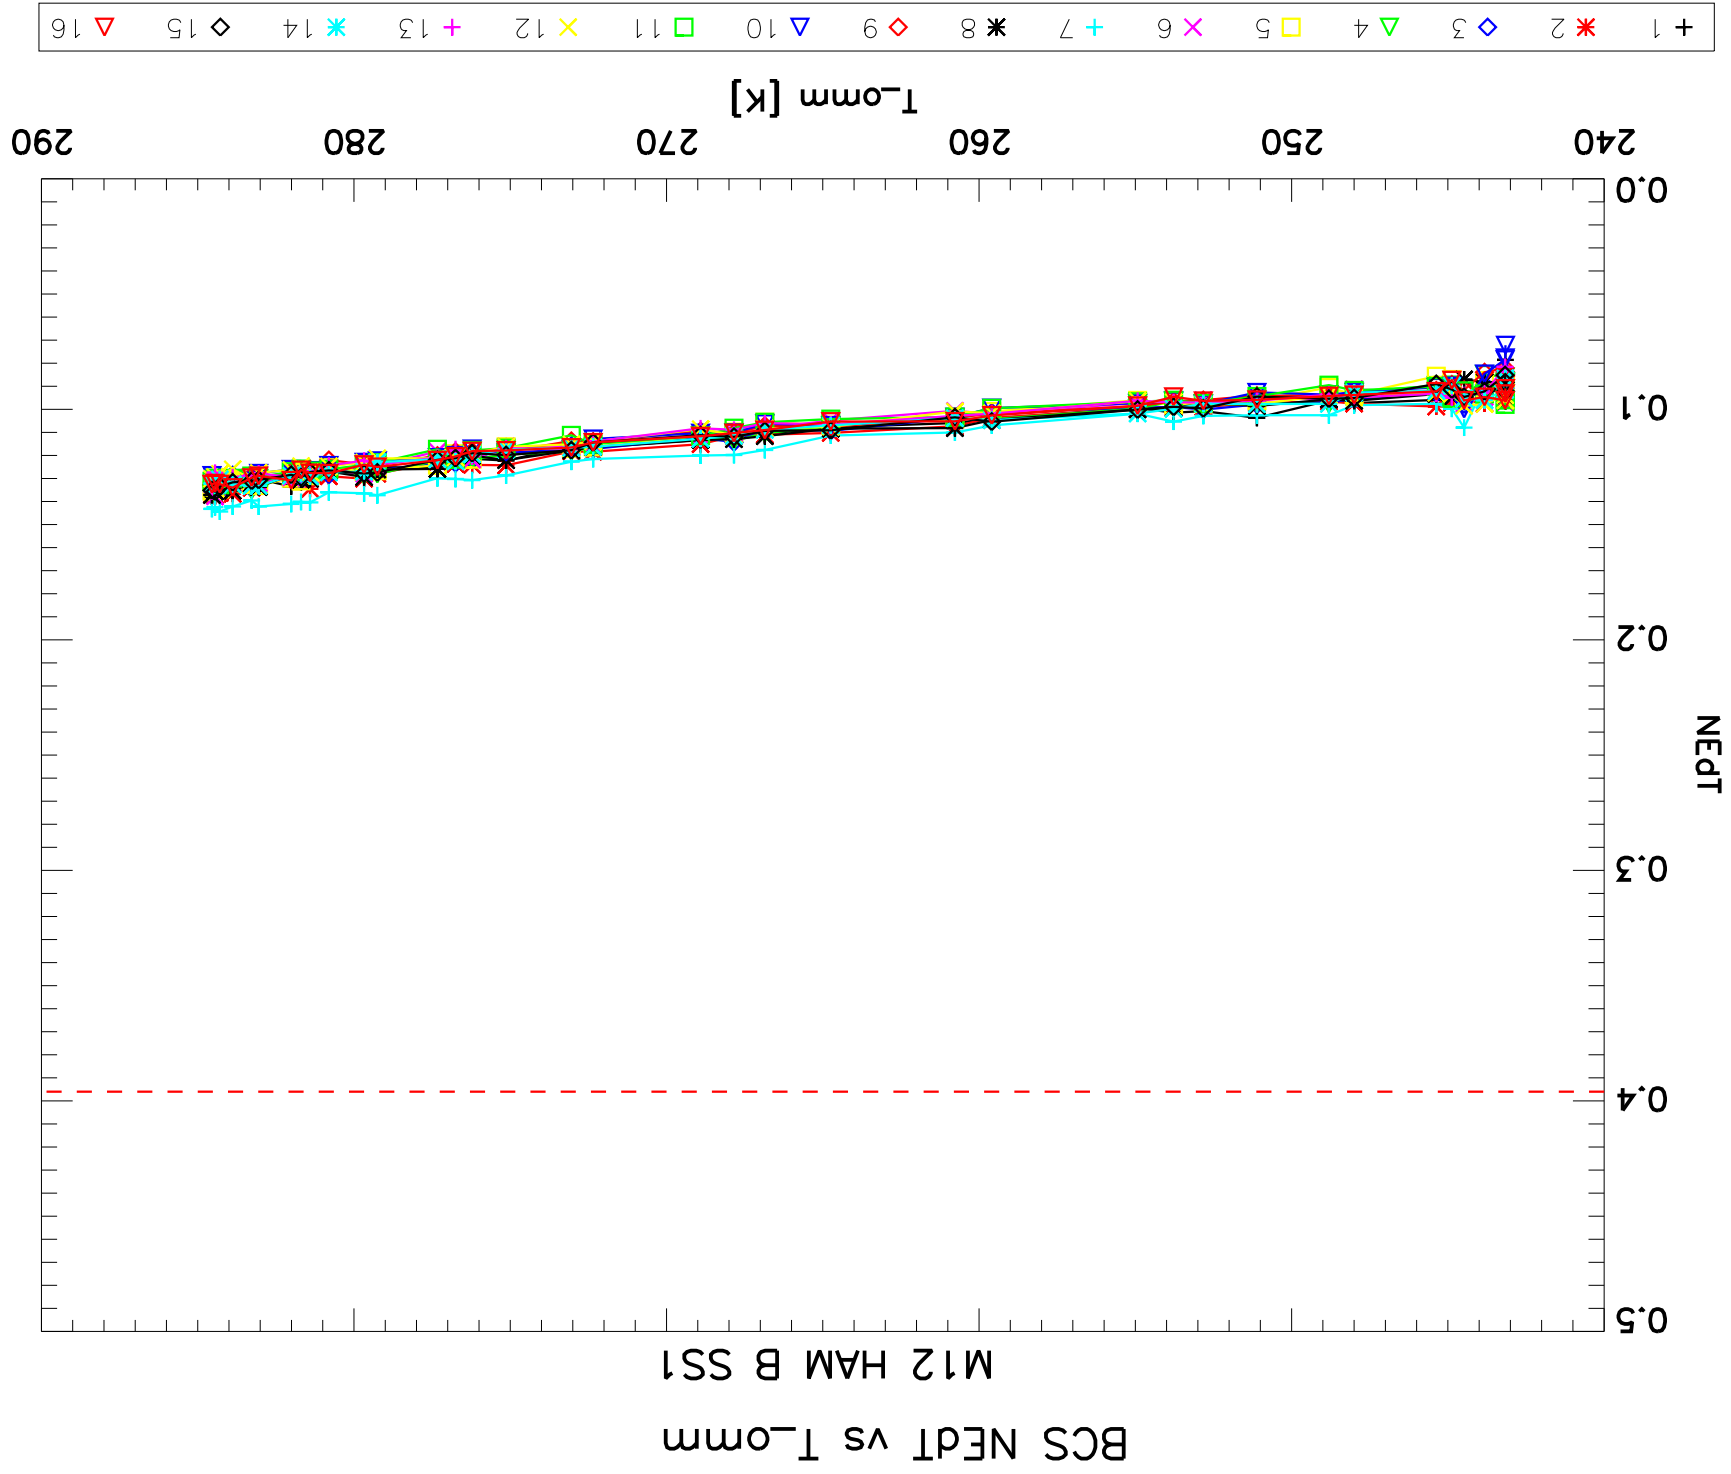

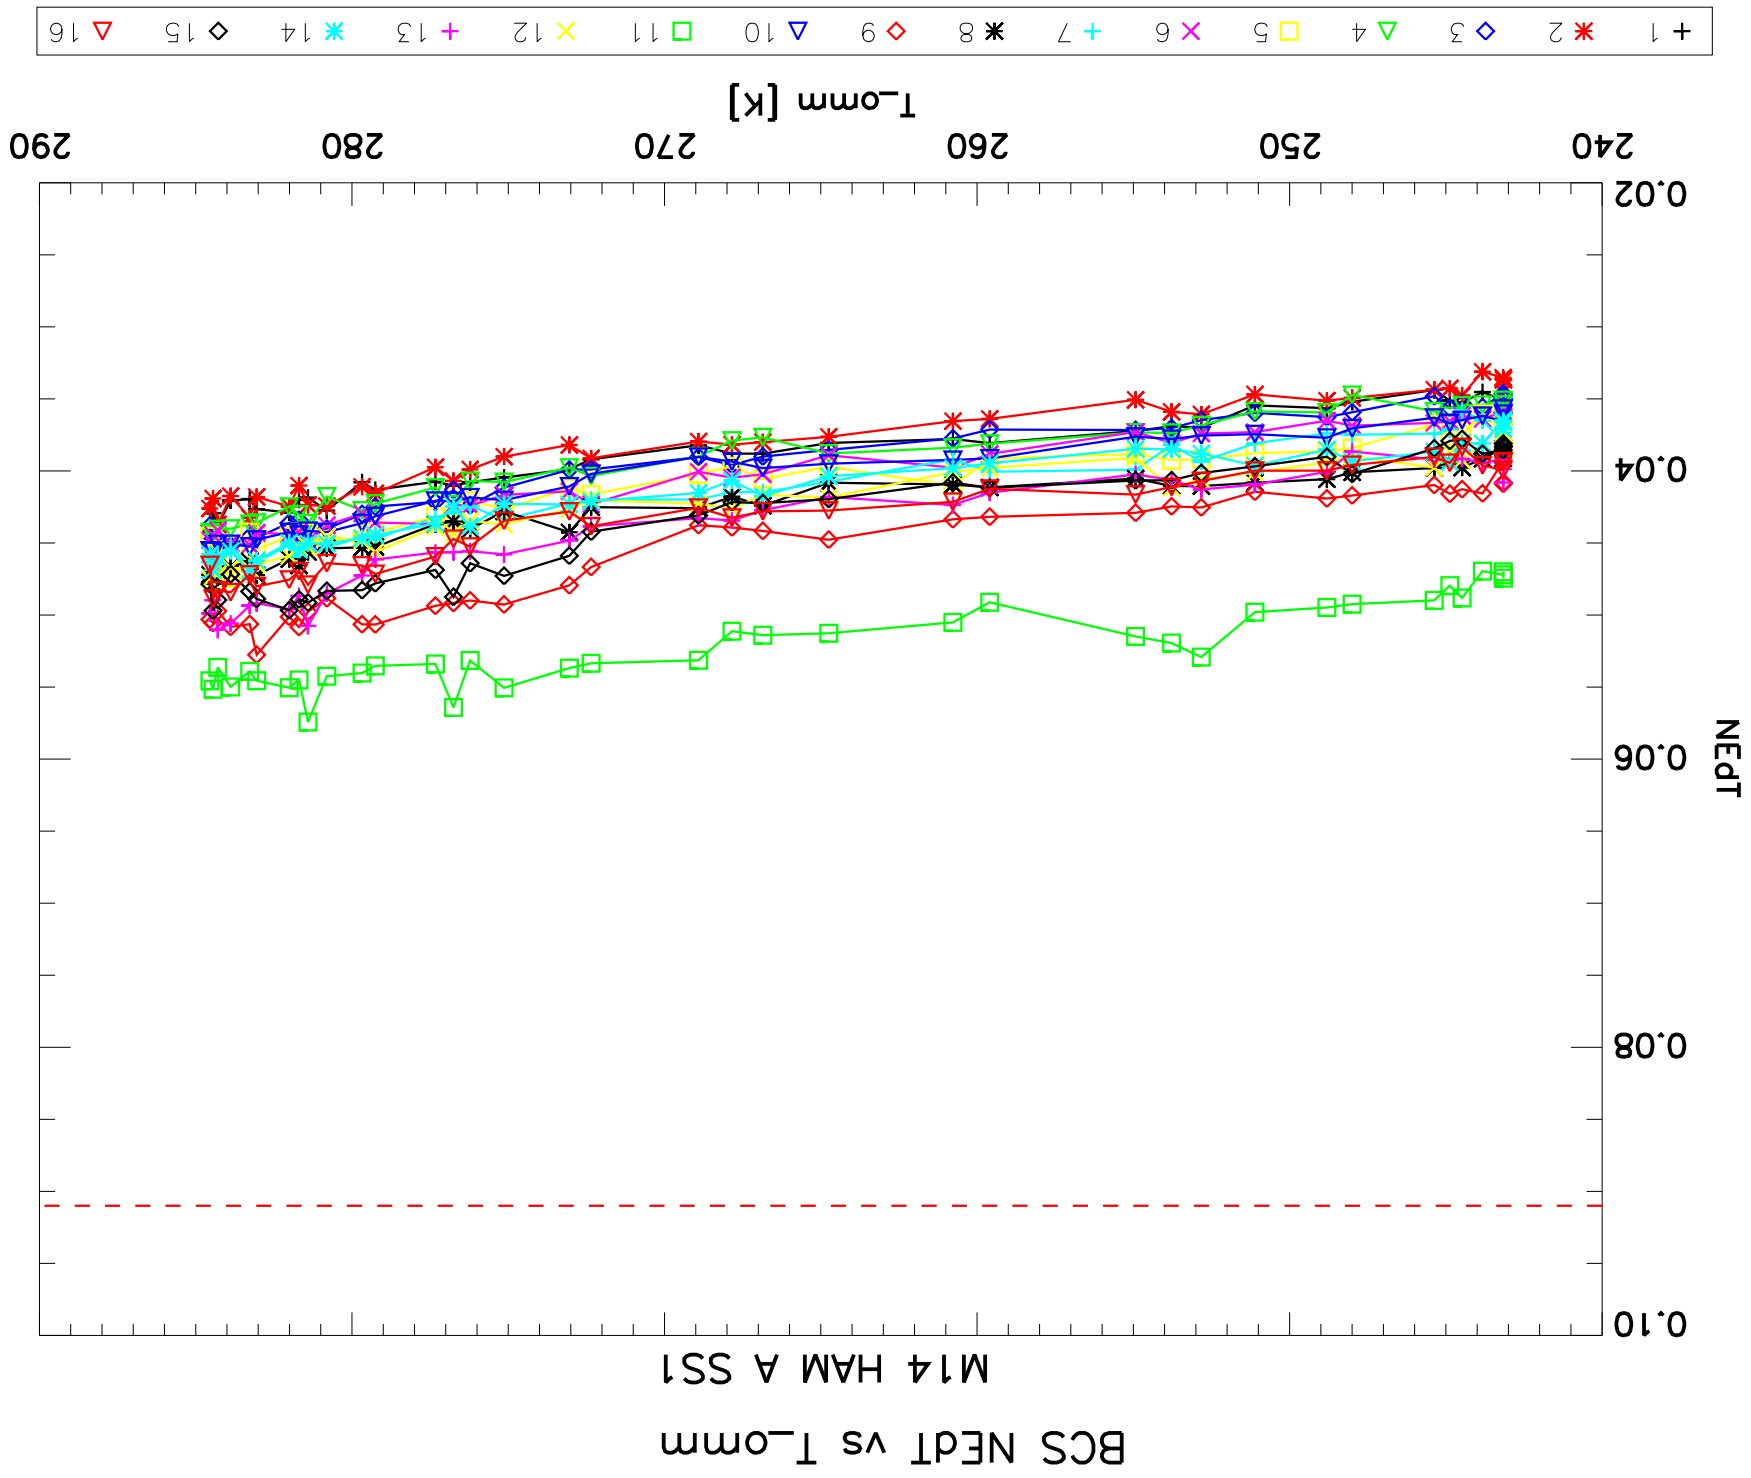

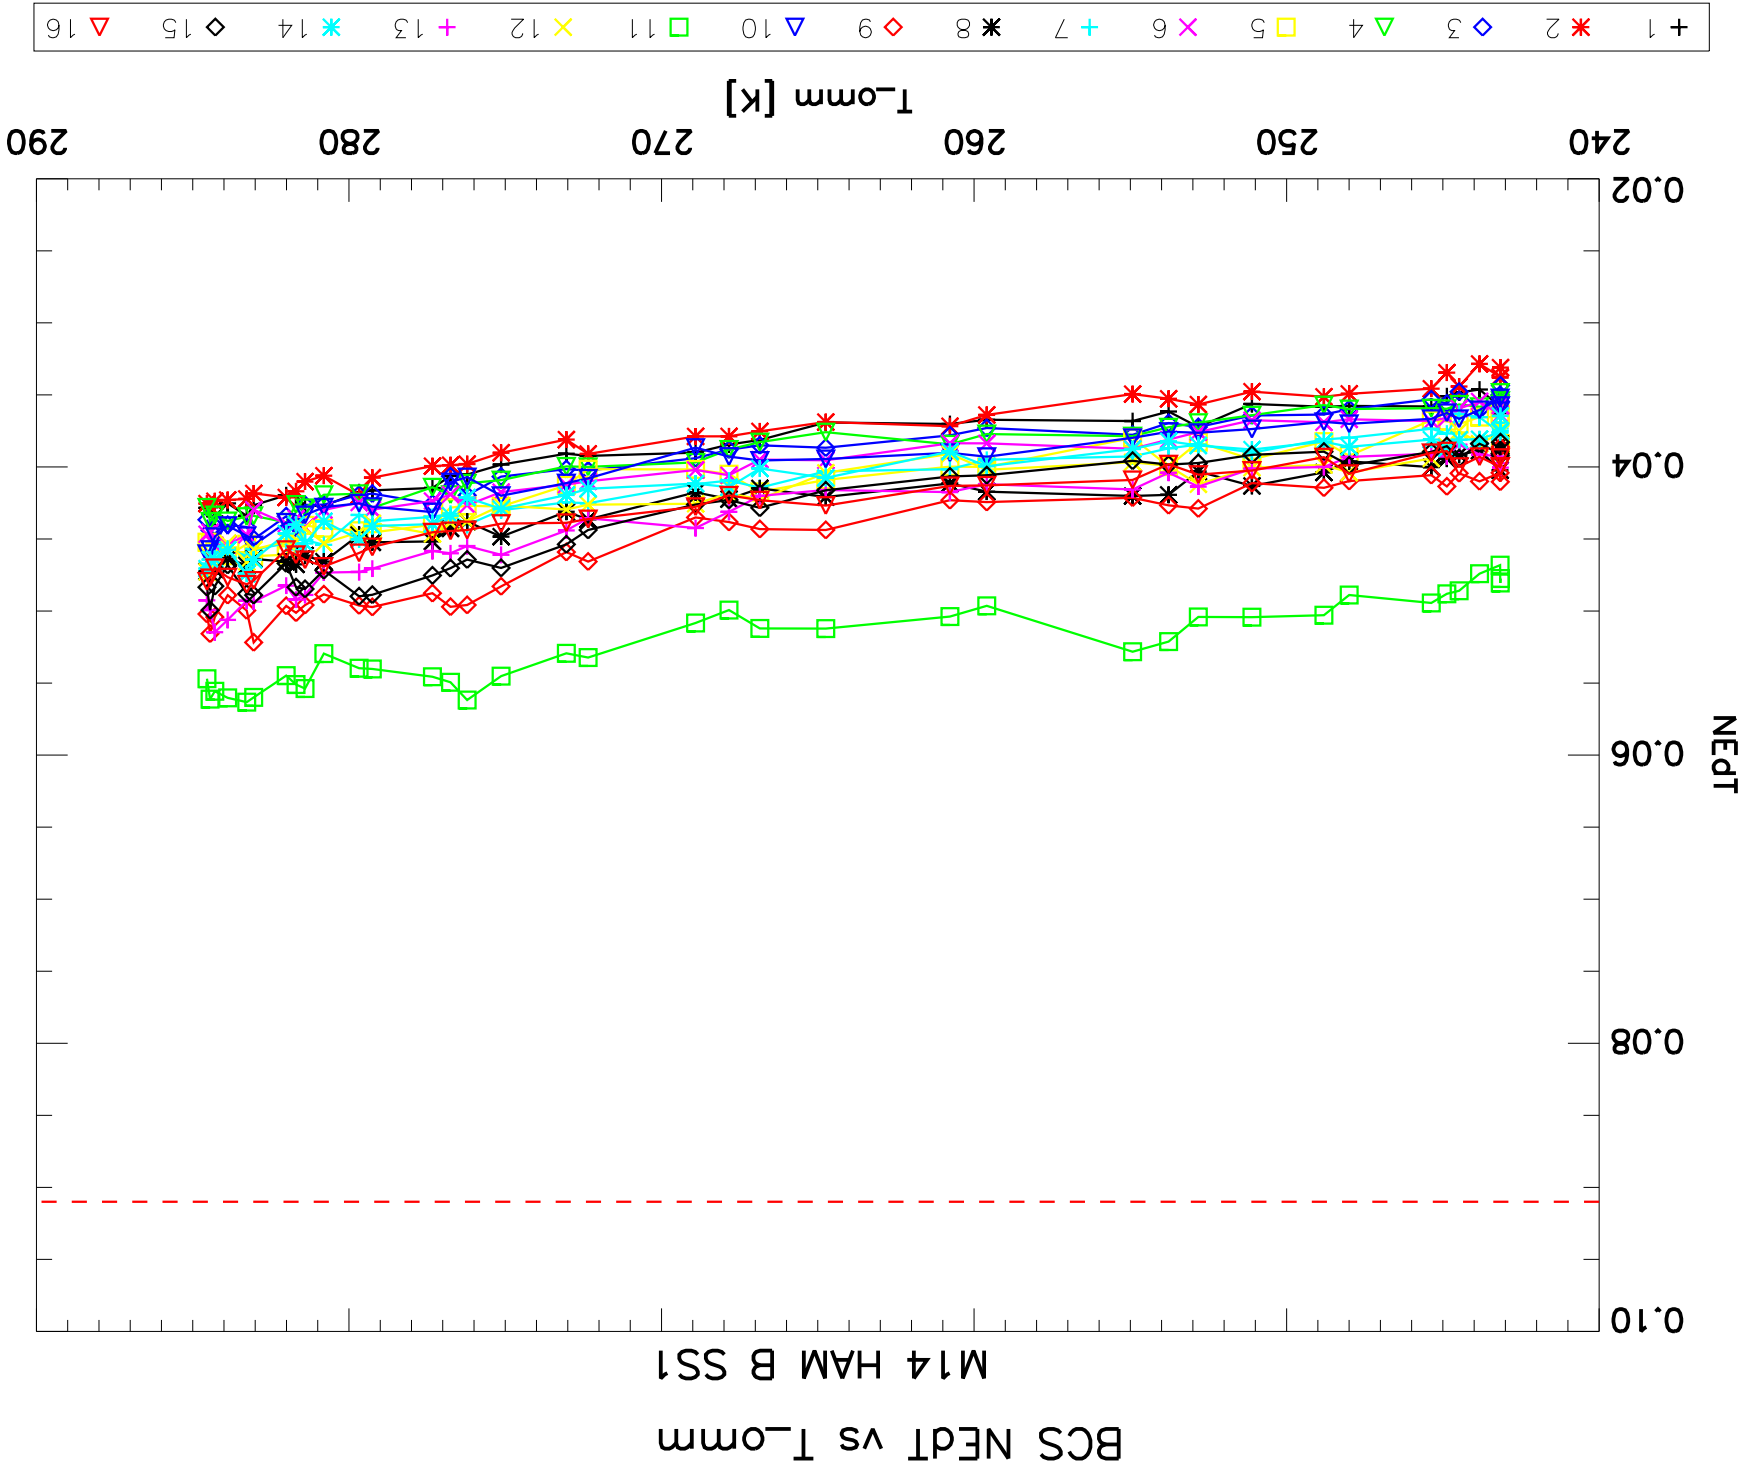

BCS NEDT vs T_{0mm}

M15 HAM A SS1

