



BCS Gain vs T_omm

14 HAM A SS1

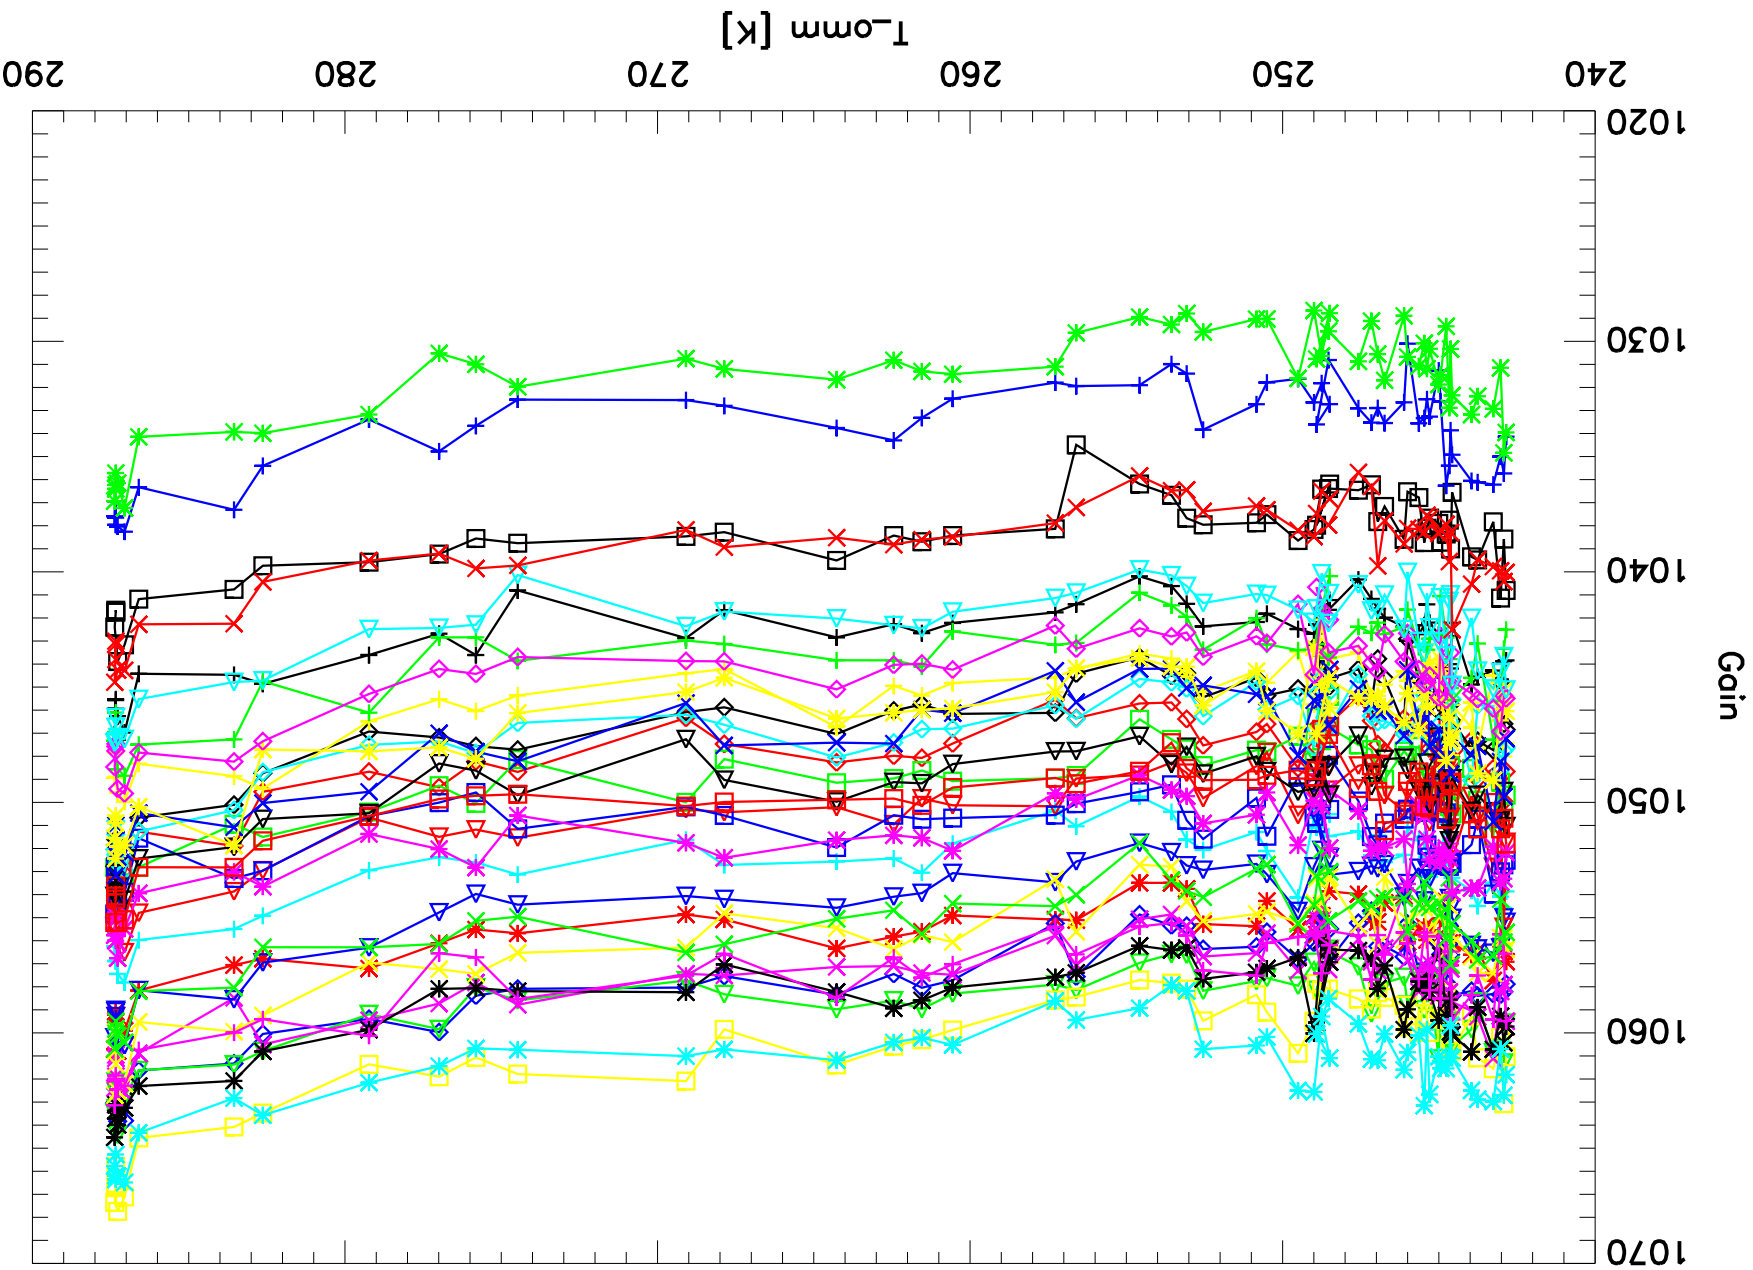



BCS Gain vs T_{omm}

14 HAM A SS2

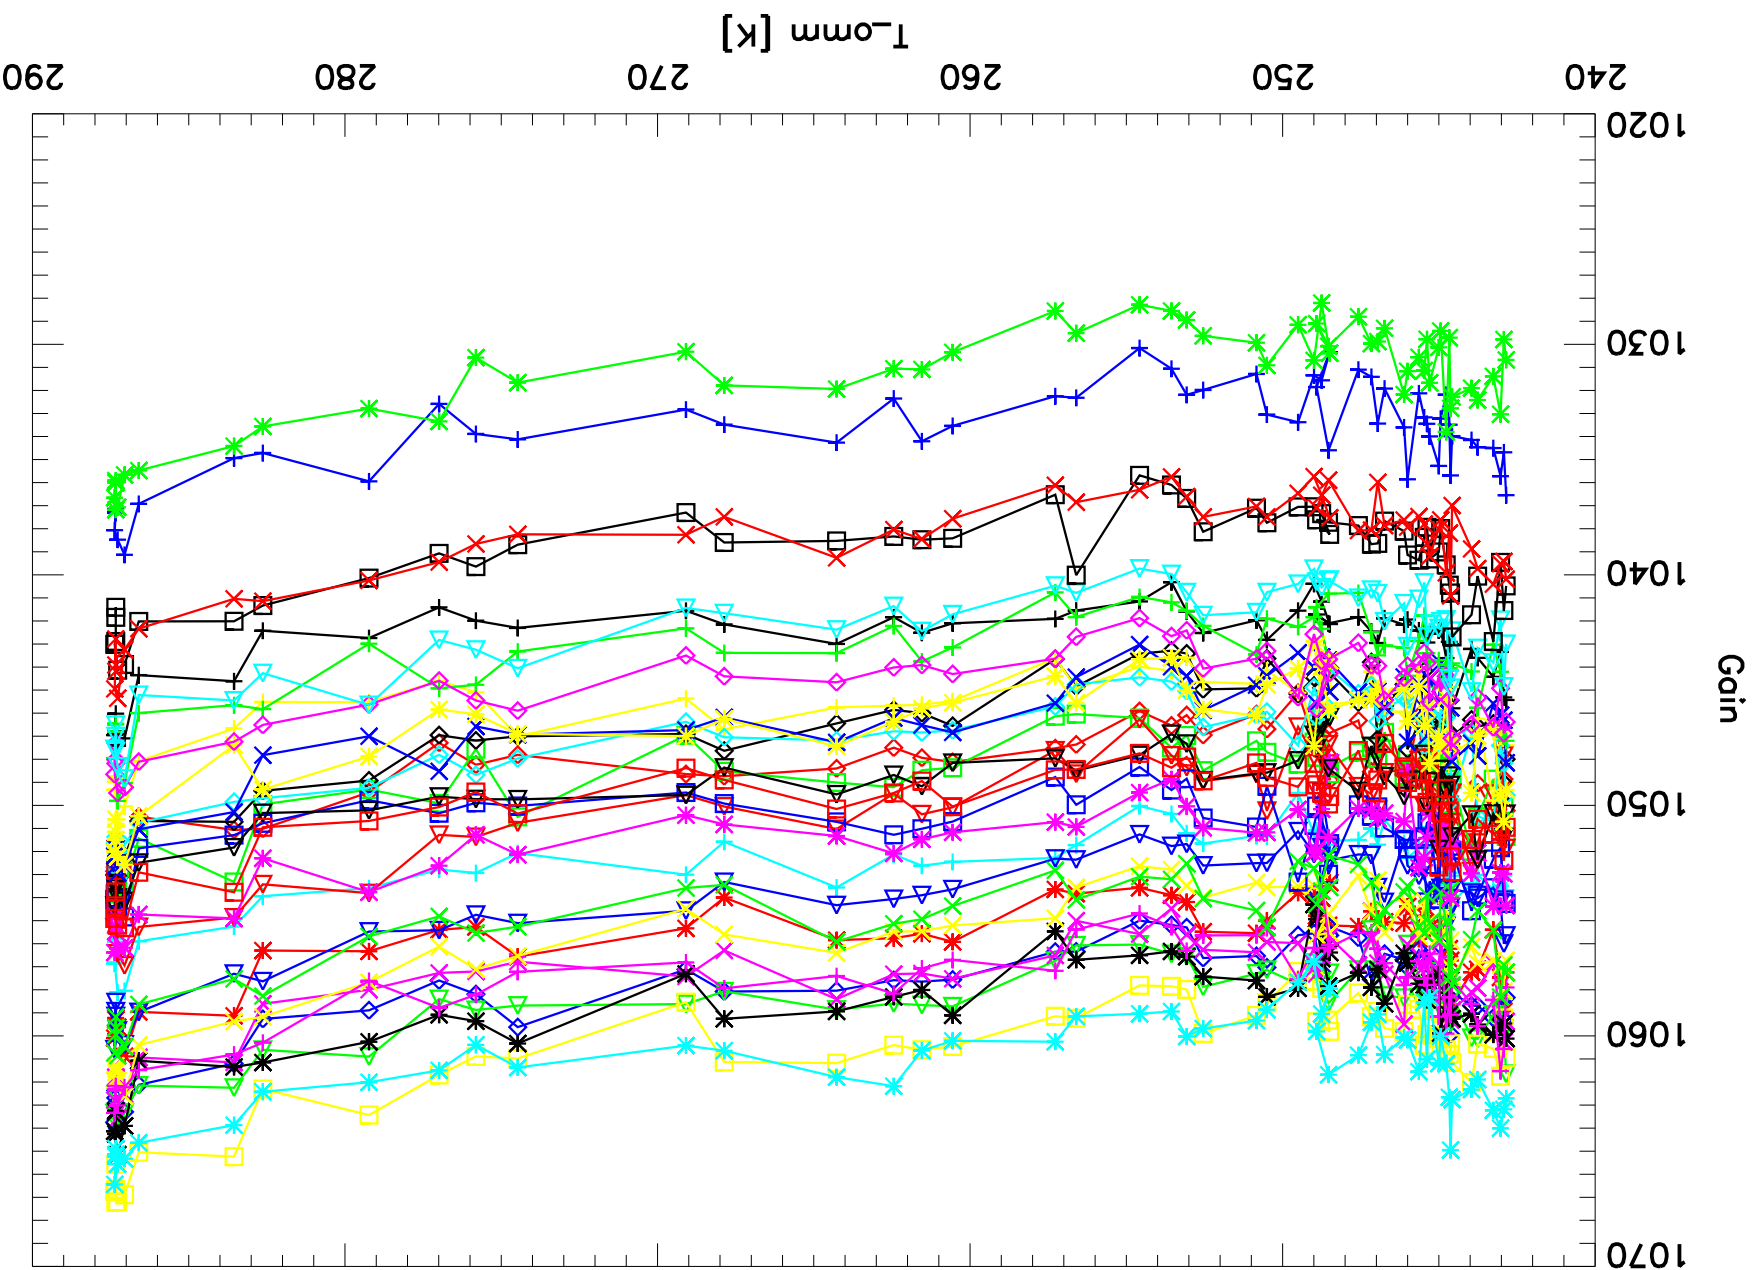



BCS Gain vs T_{omm}

14 HAM B SS1

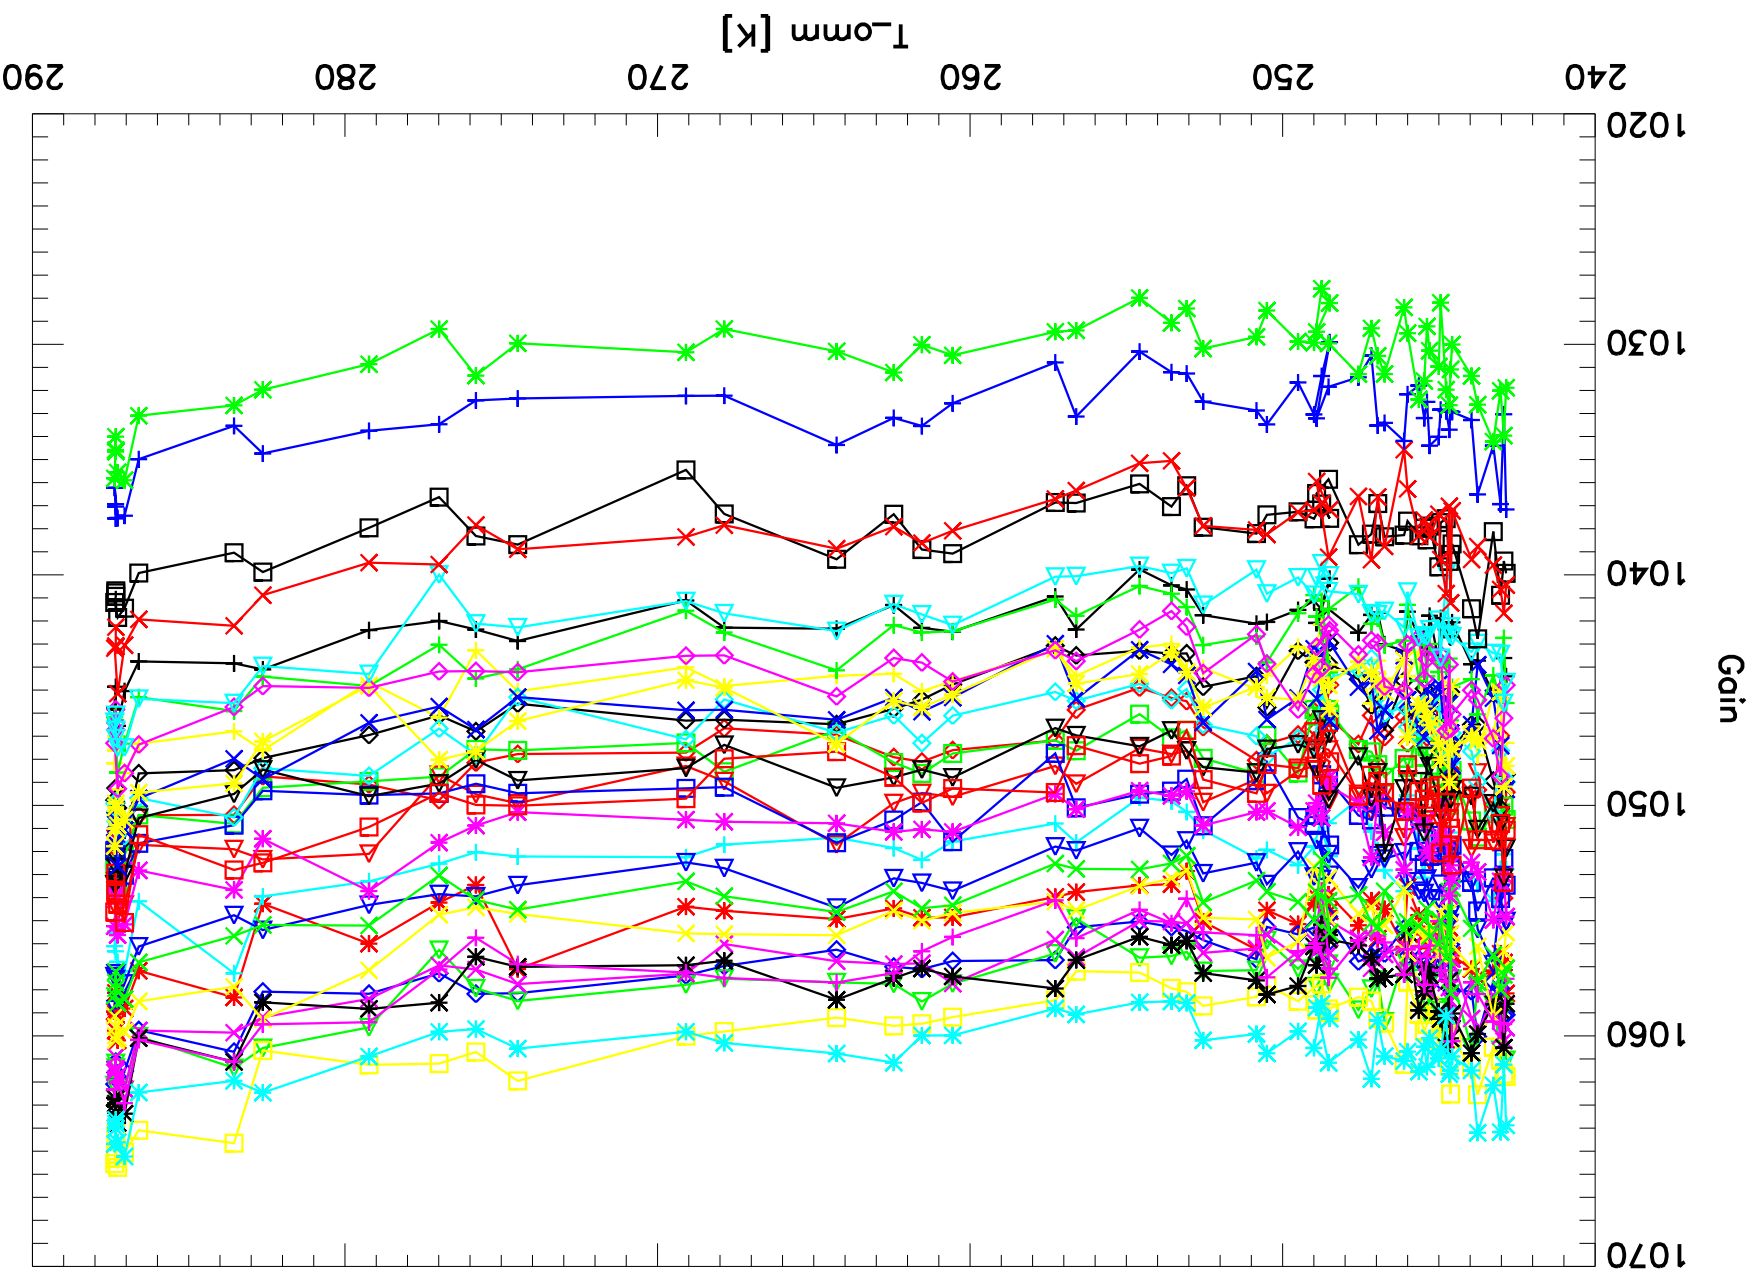



BCS Gain vs T_omm

14 HAM B SS2

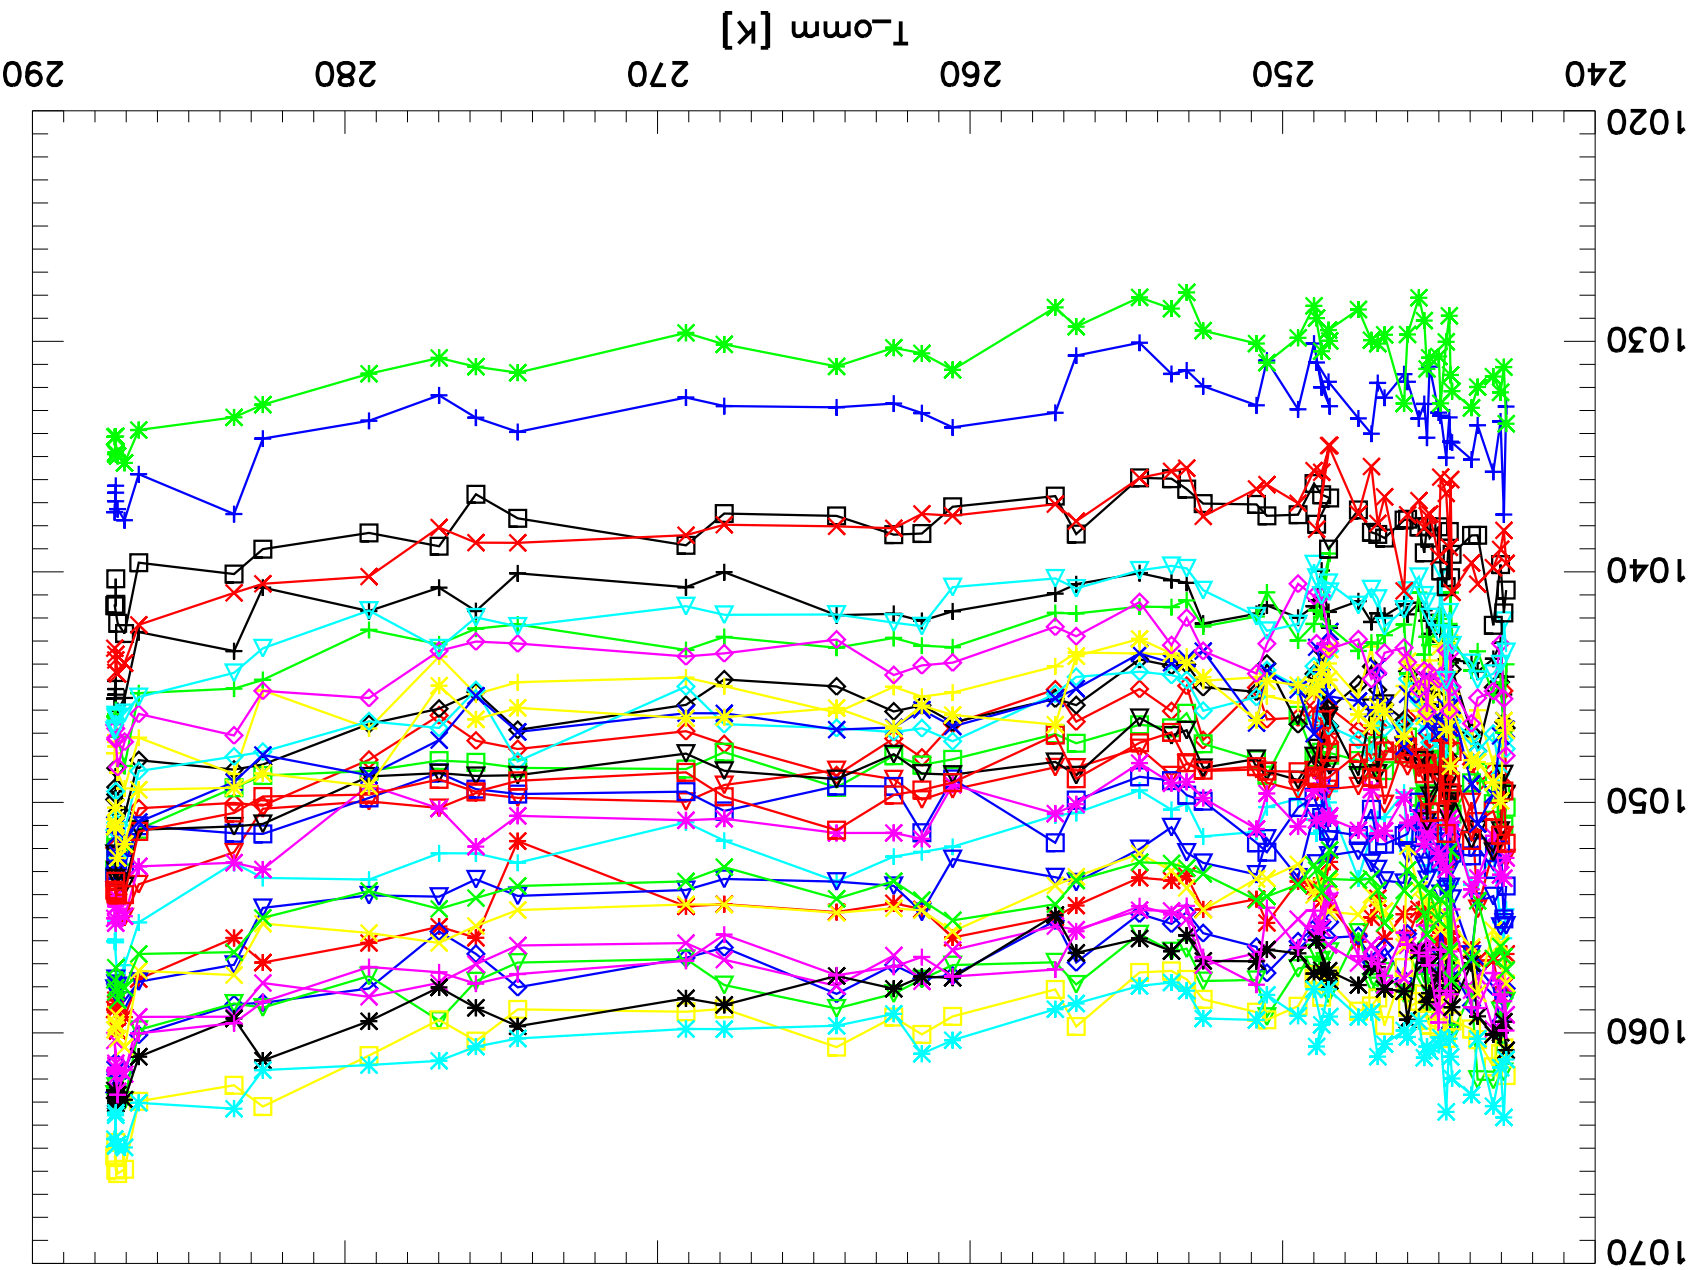


BCS Gain vs T_{omm}

15 HAM A SS1

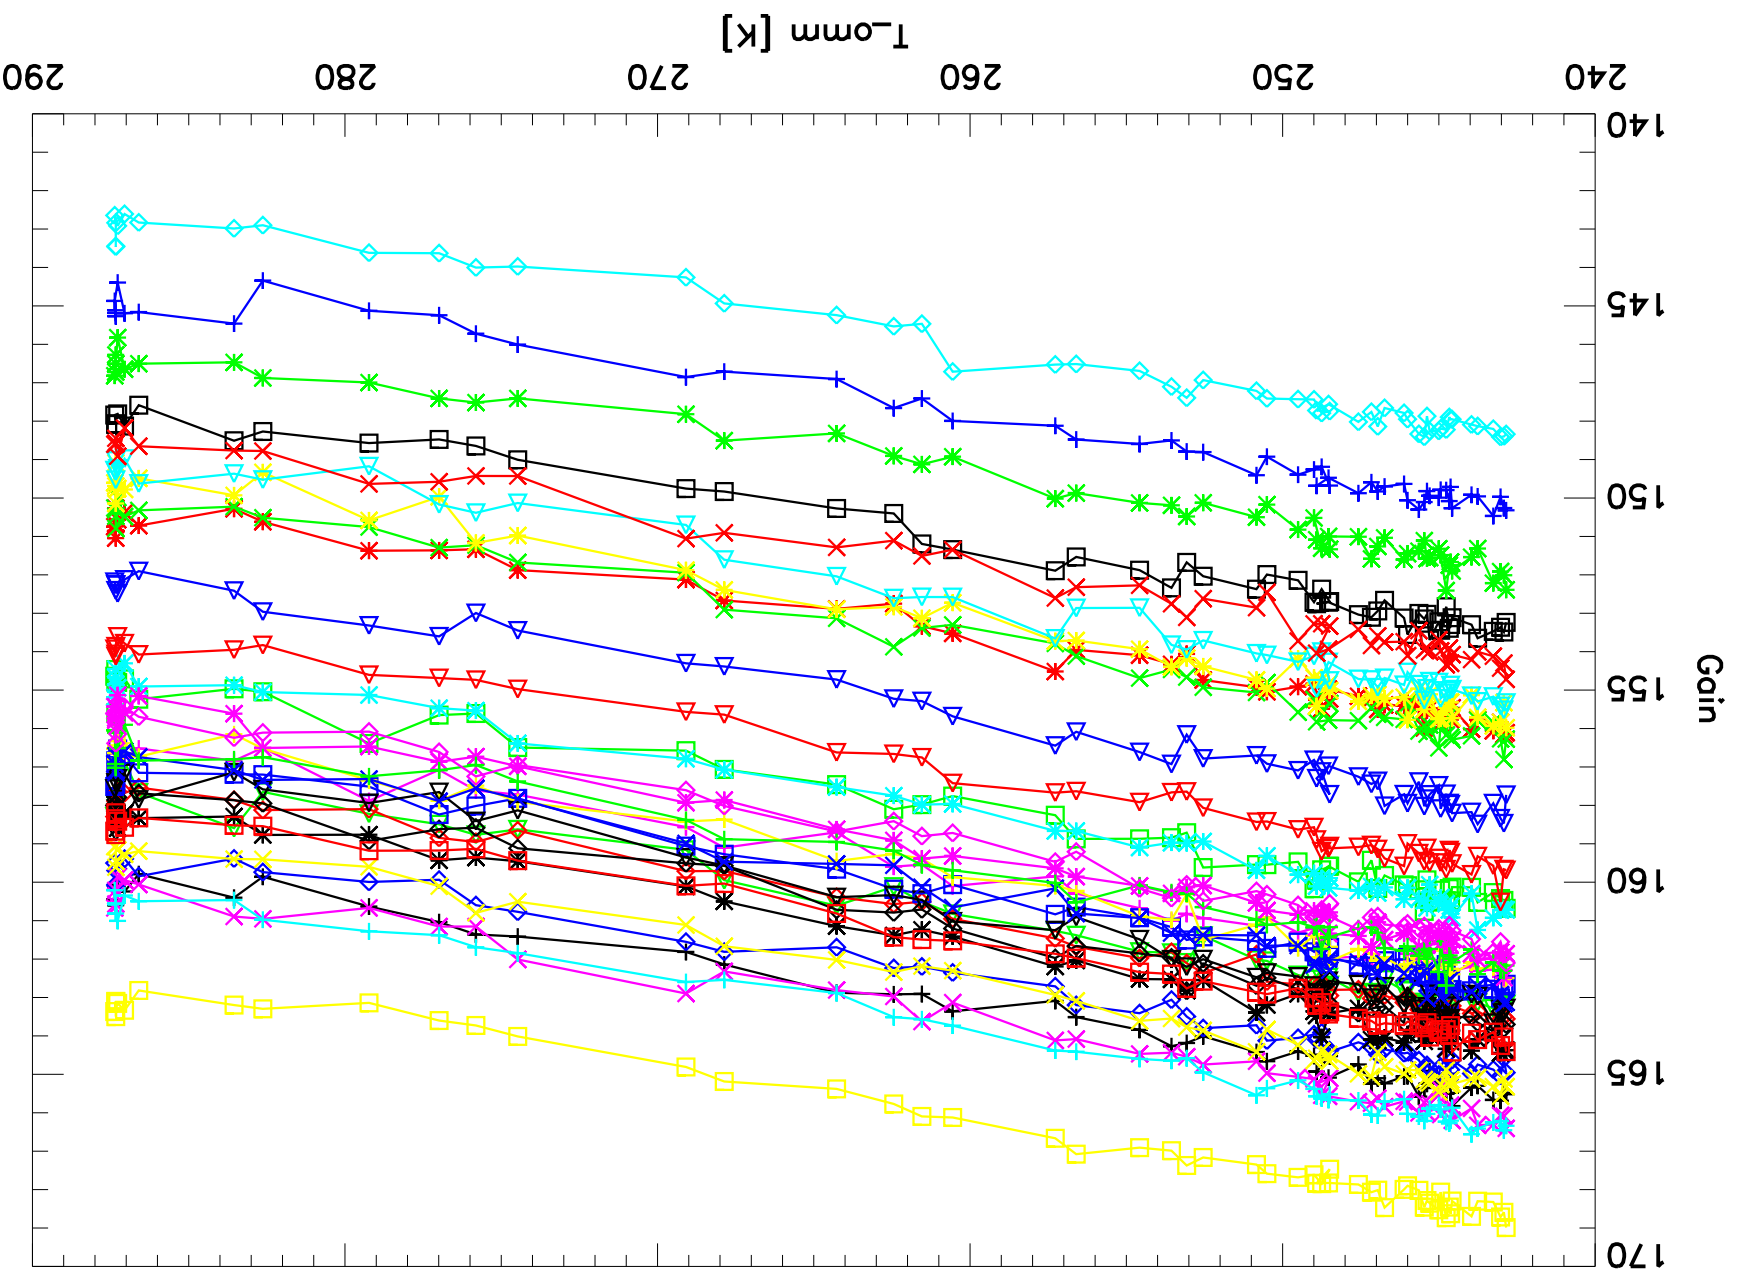


BCS Gain vs T_{omm}

15 HAM A SS2

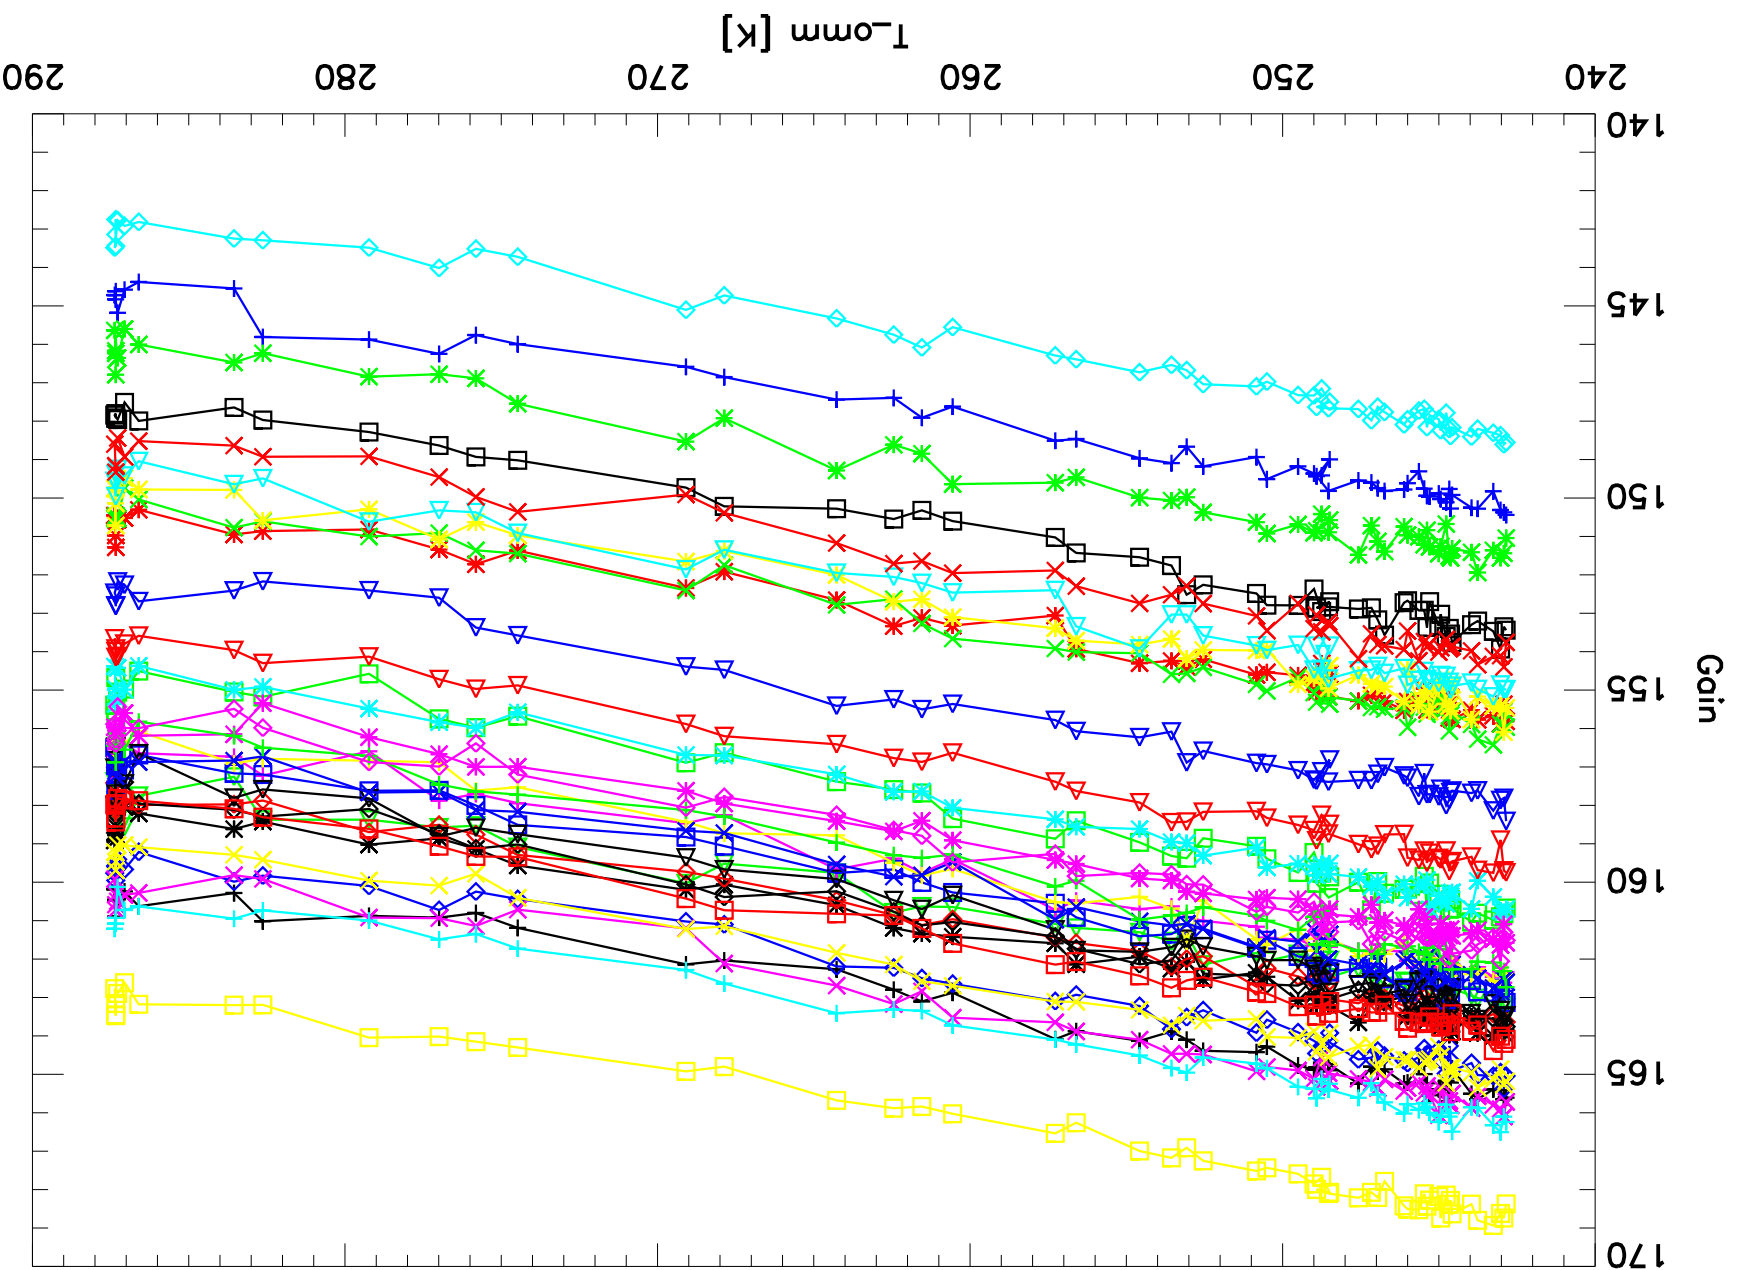


BCS Gain vs T_{omm}


15 HAM B SS1

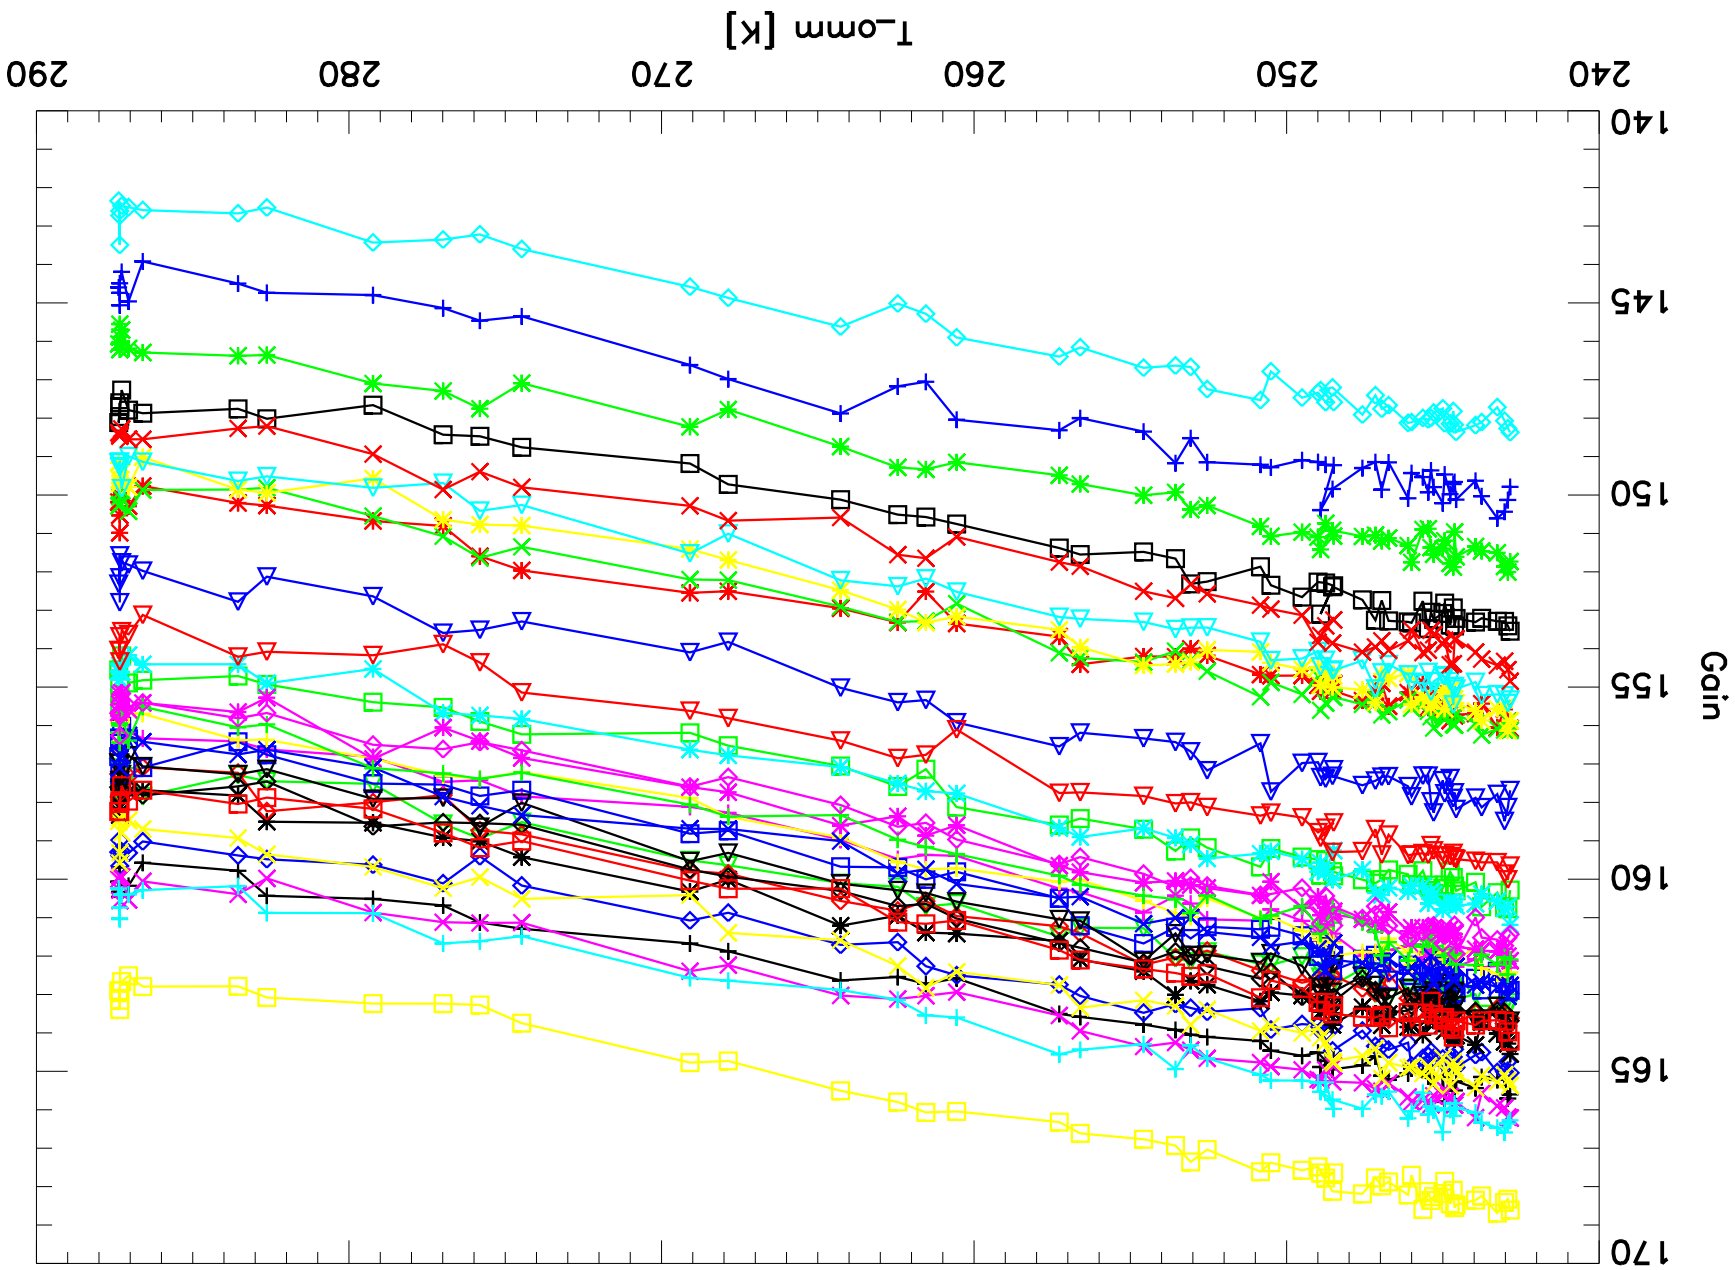

BCS Gain vs T₀mm


15 HAM B SS2

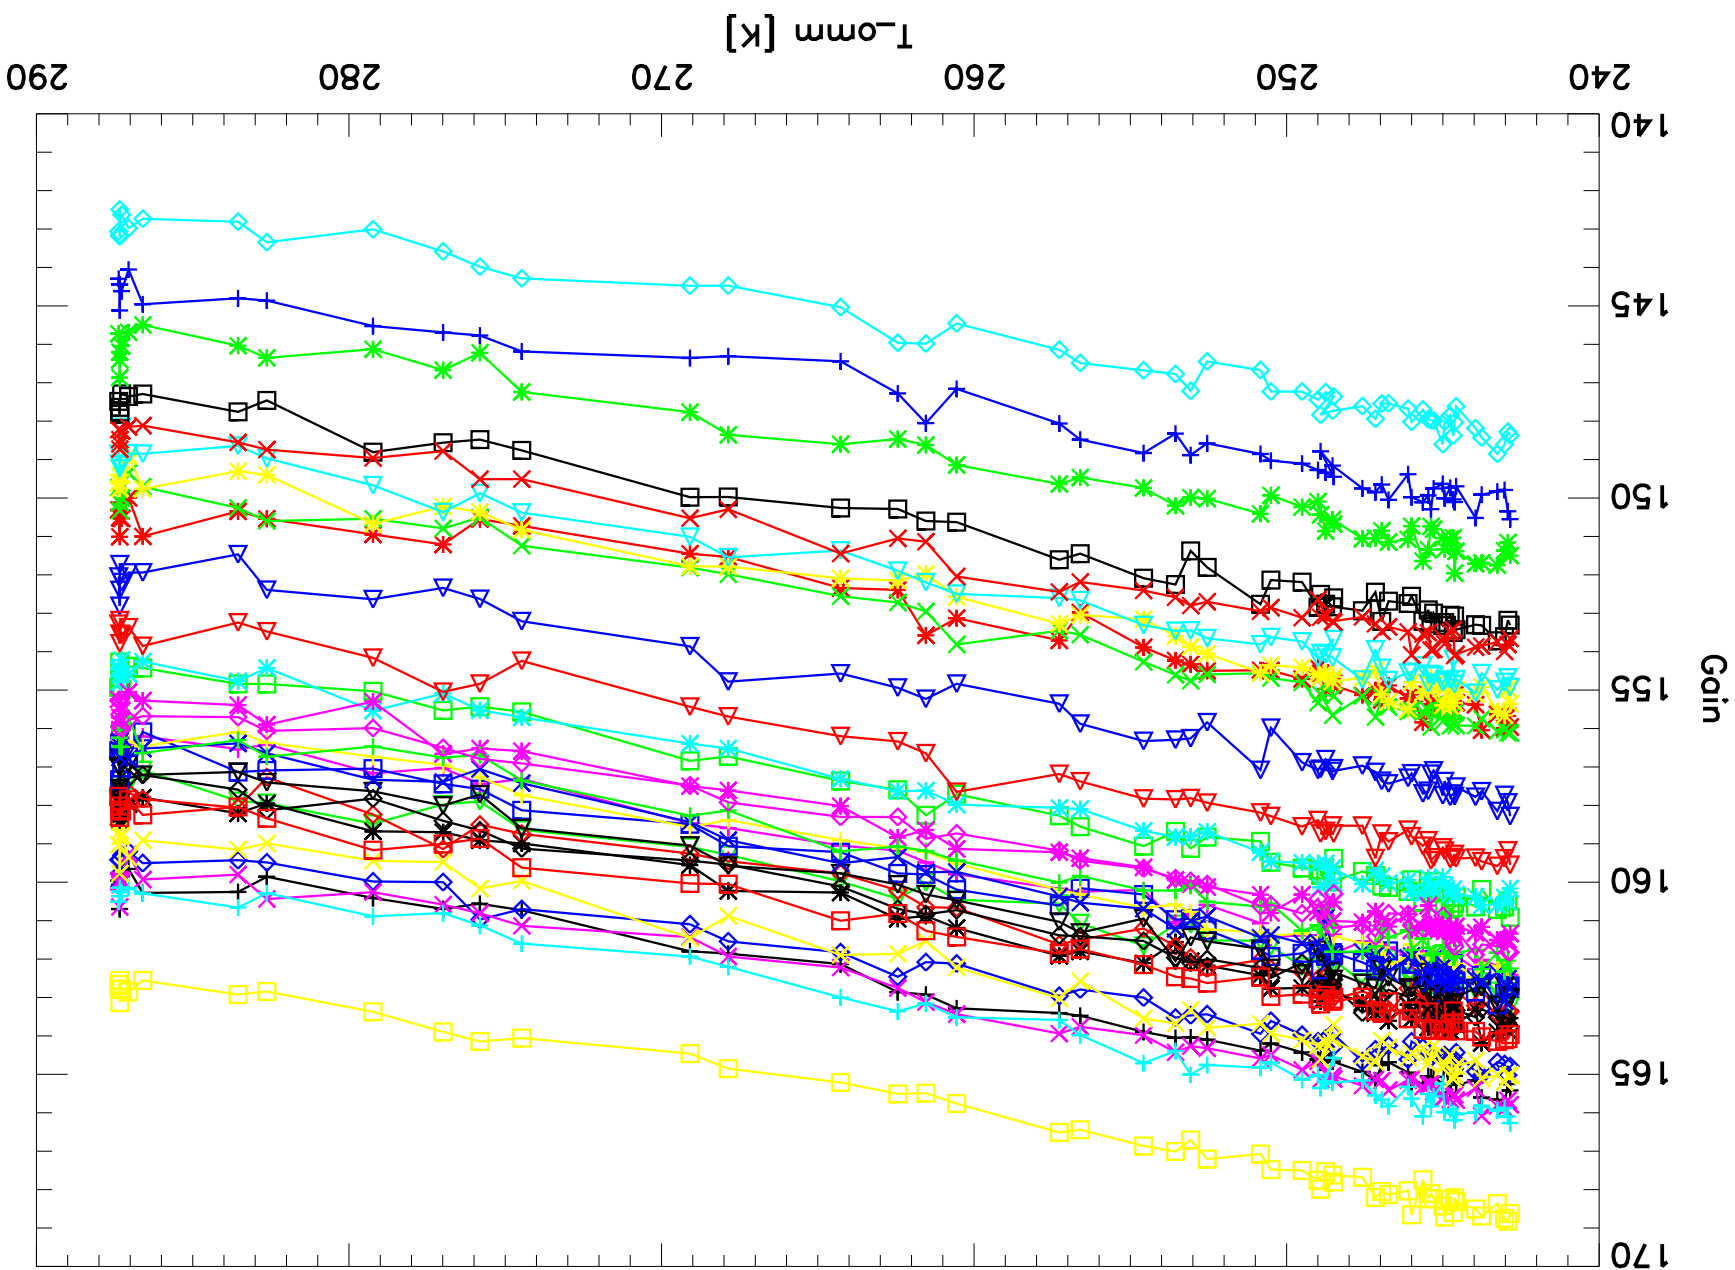


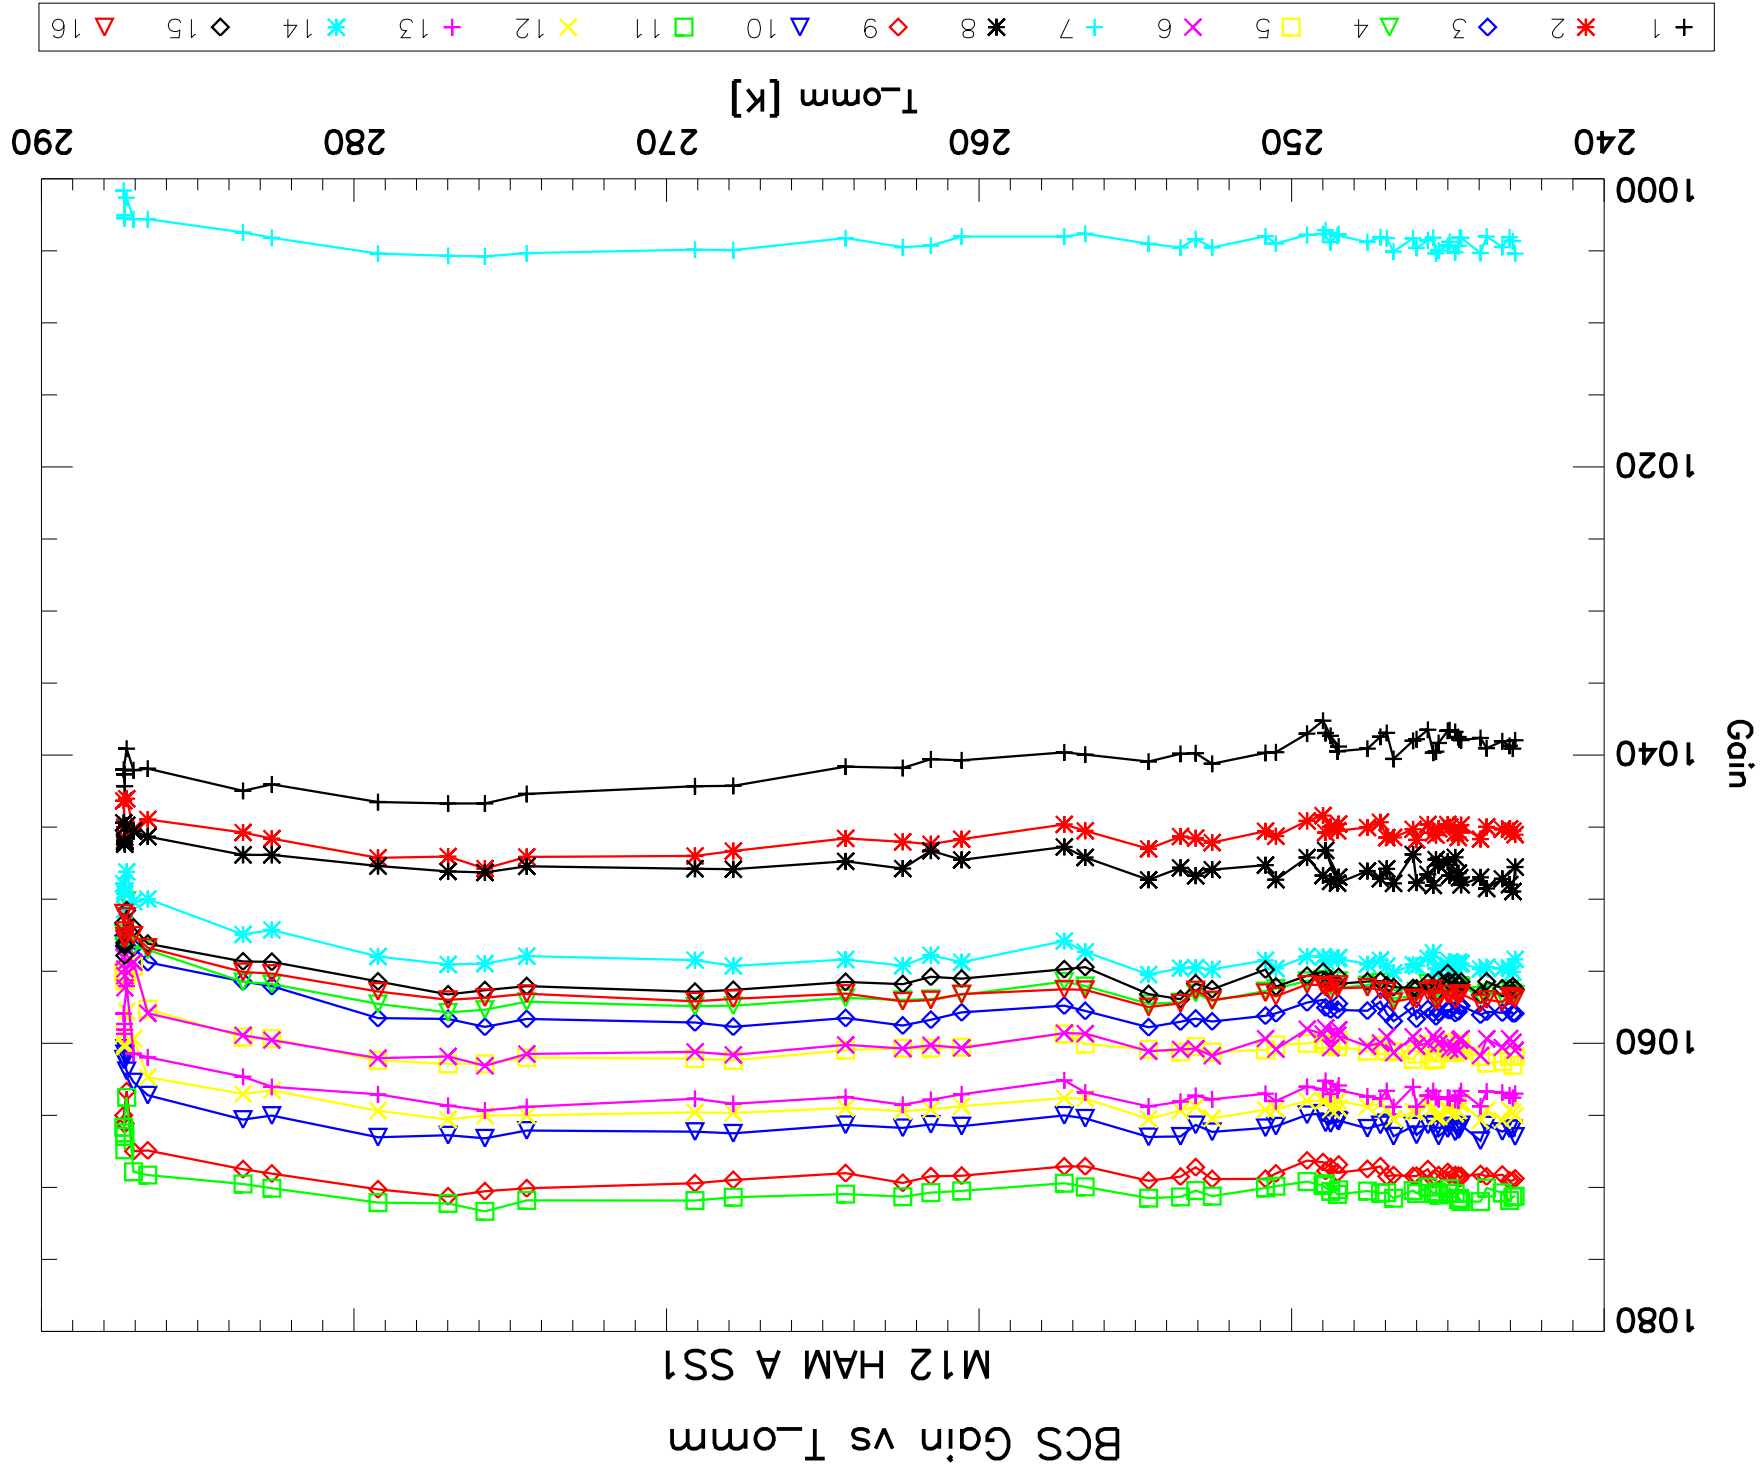



BCS Gain vs T_omm


M12 HAM B SS1

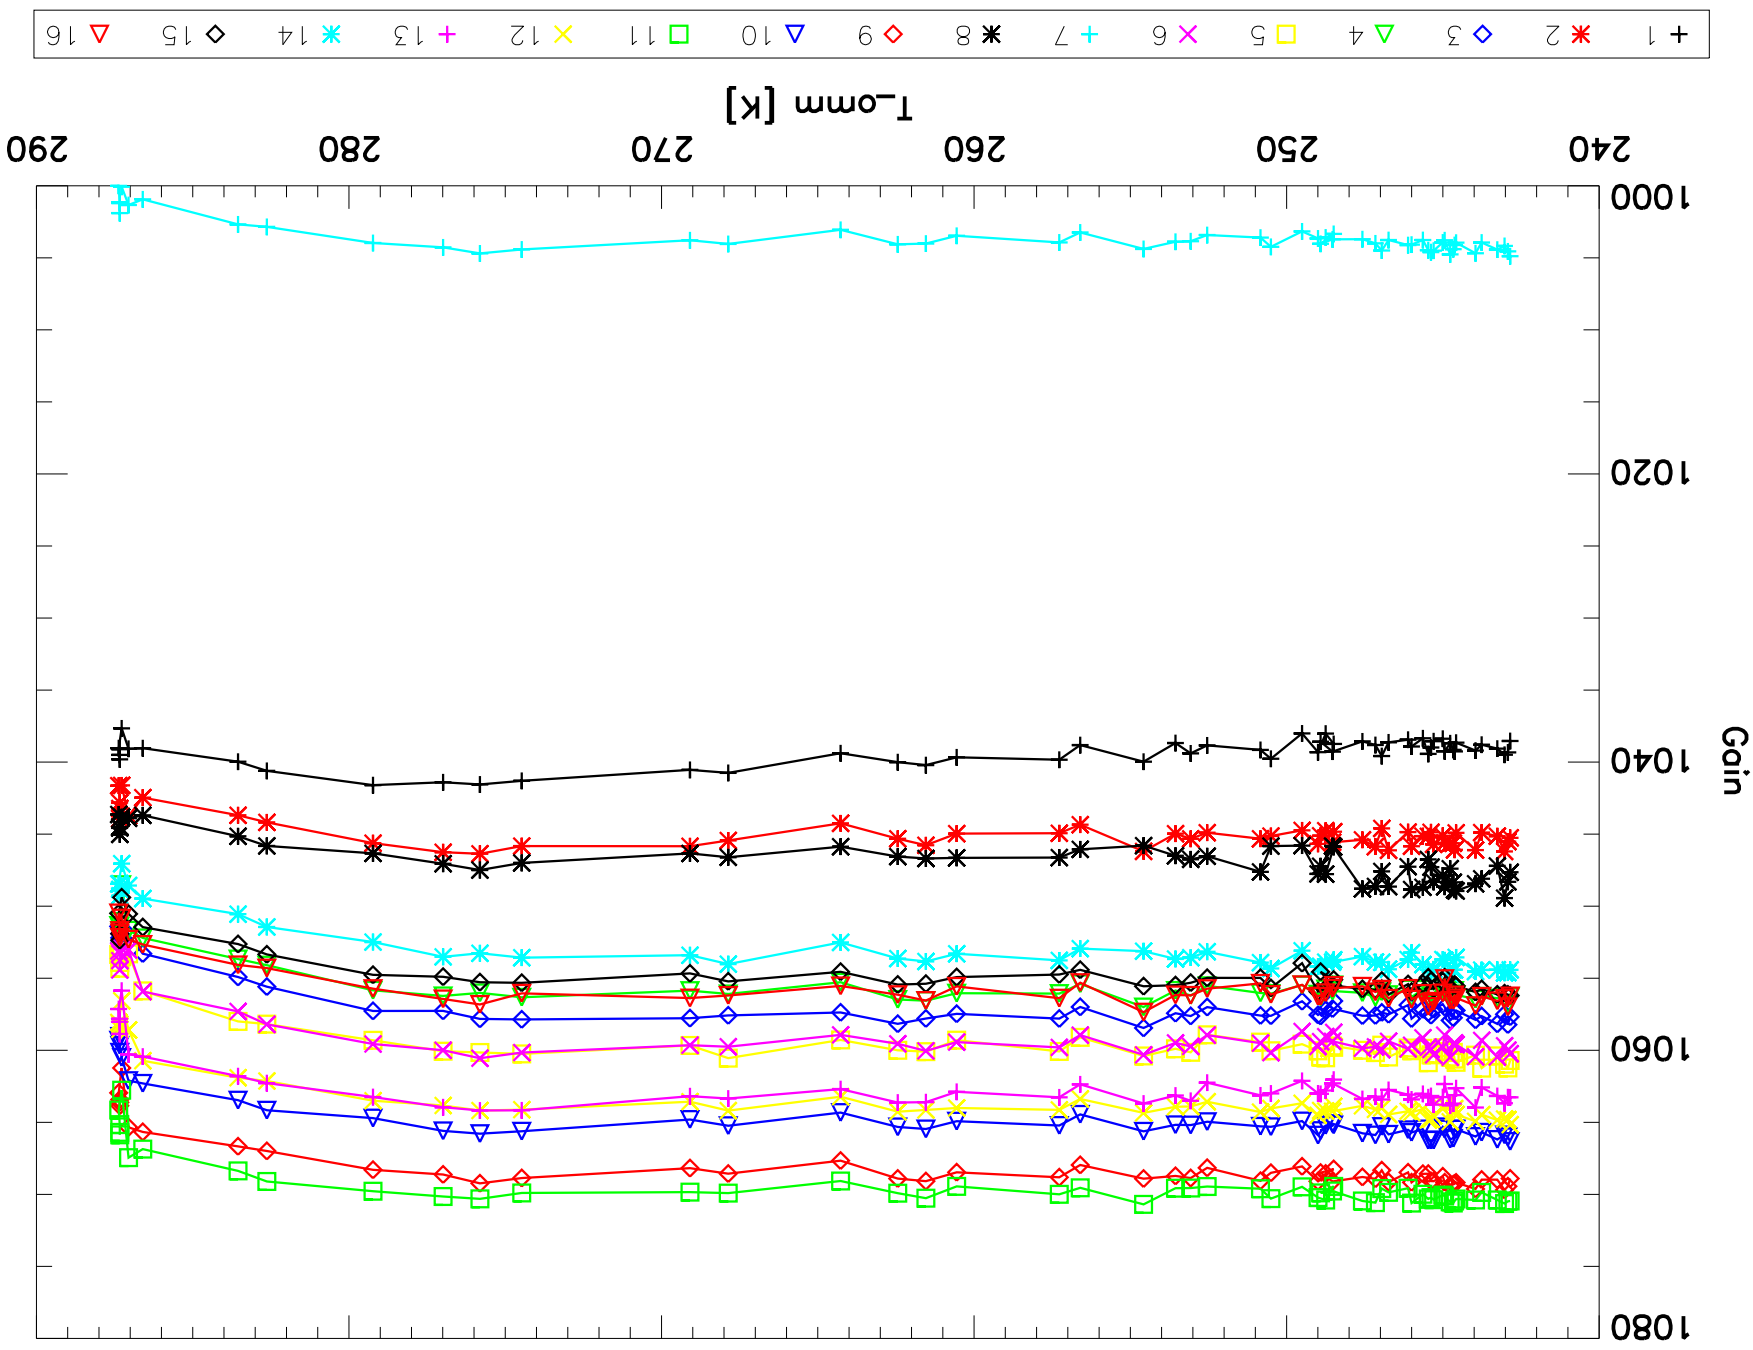

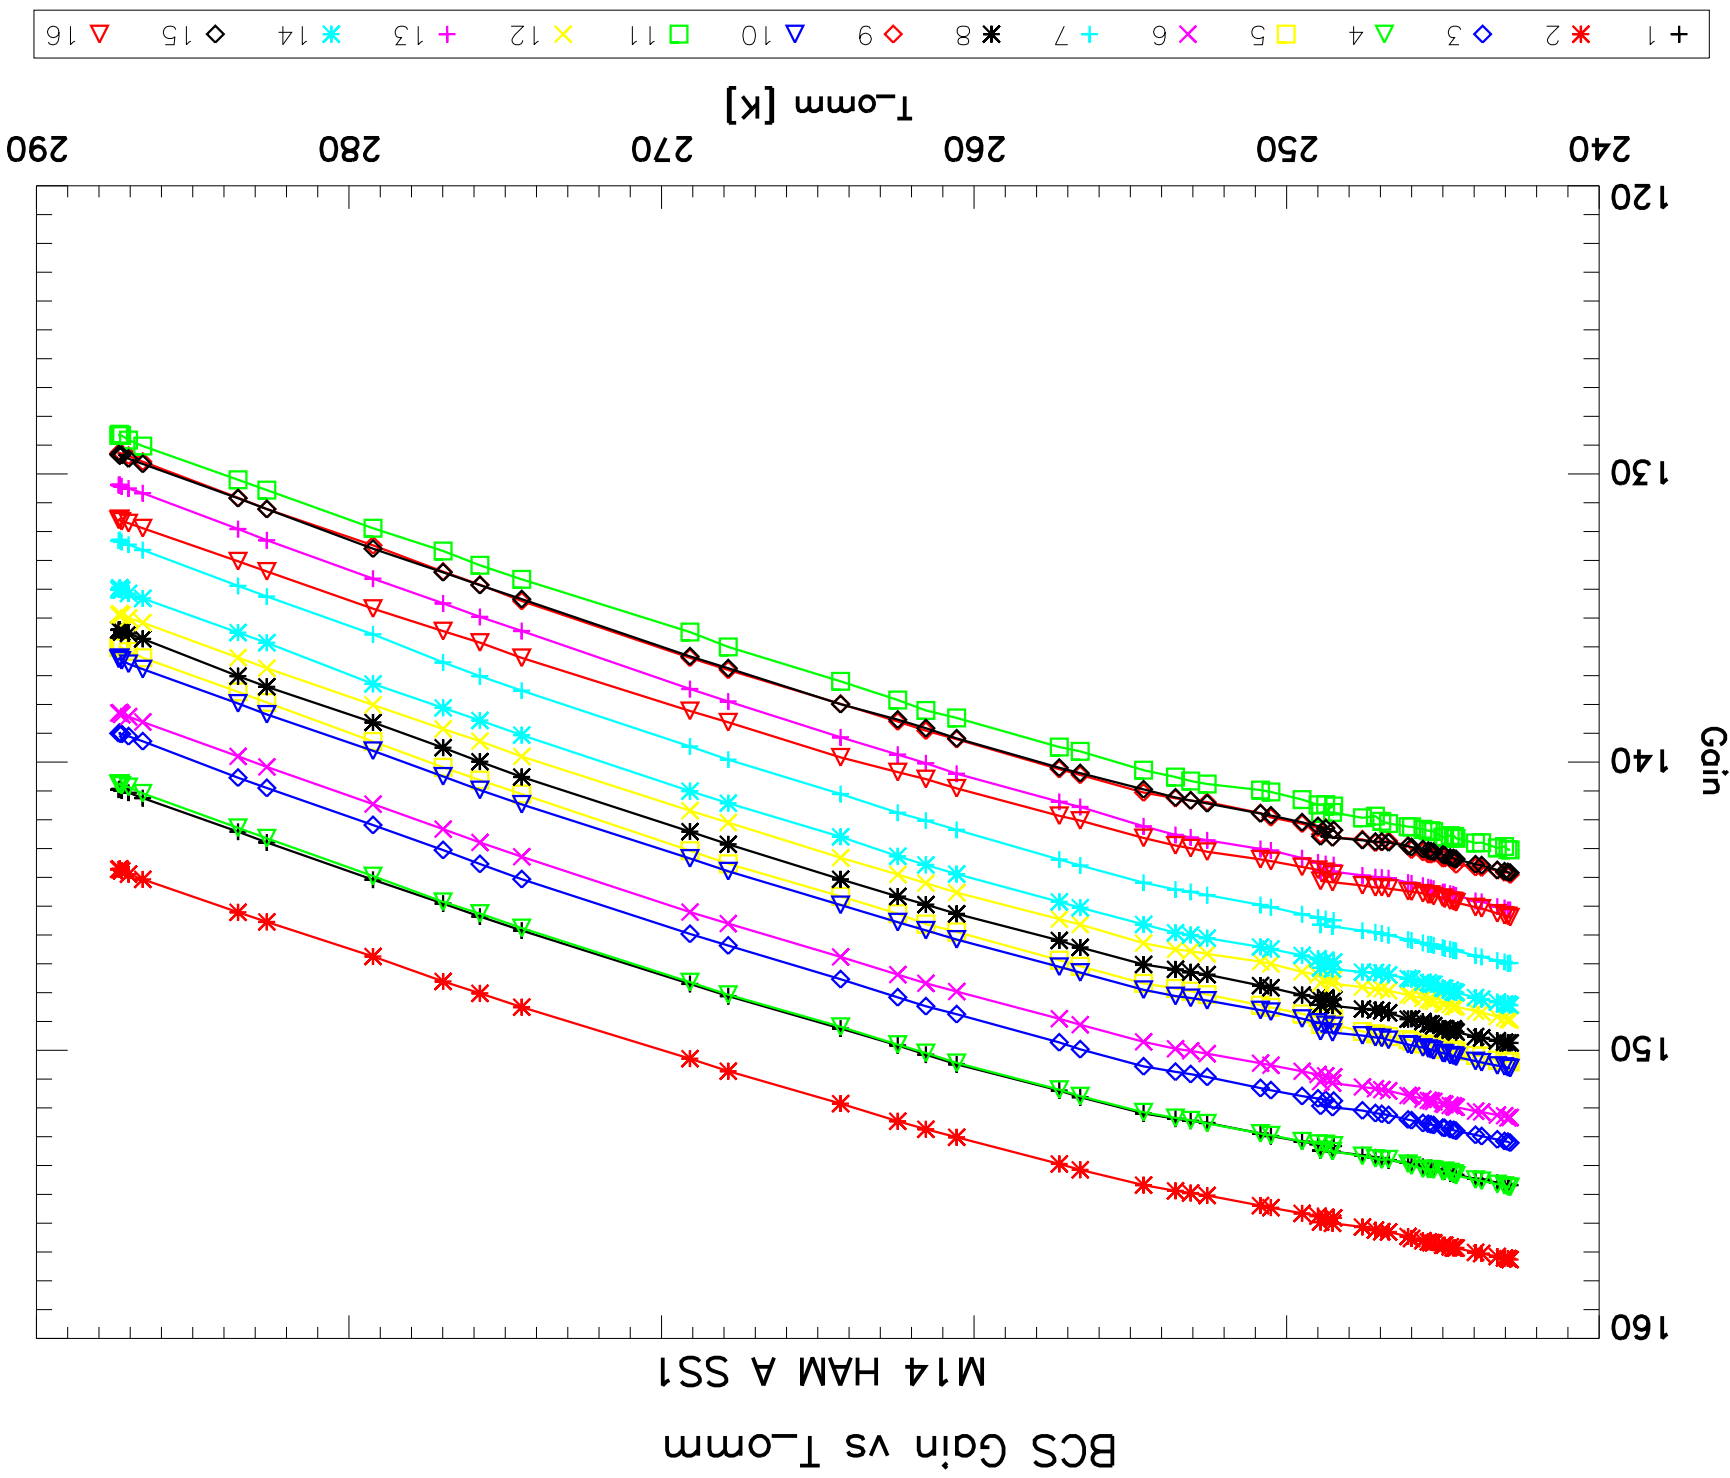

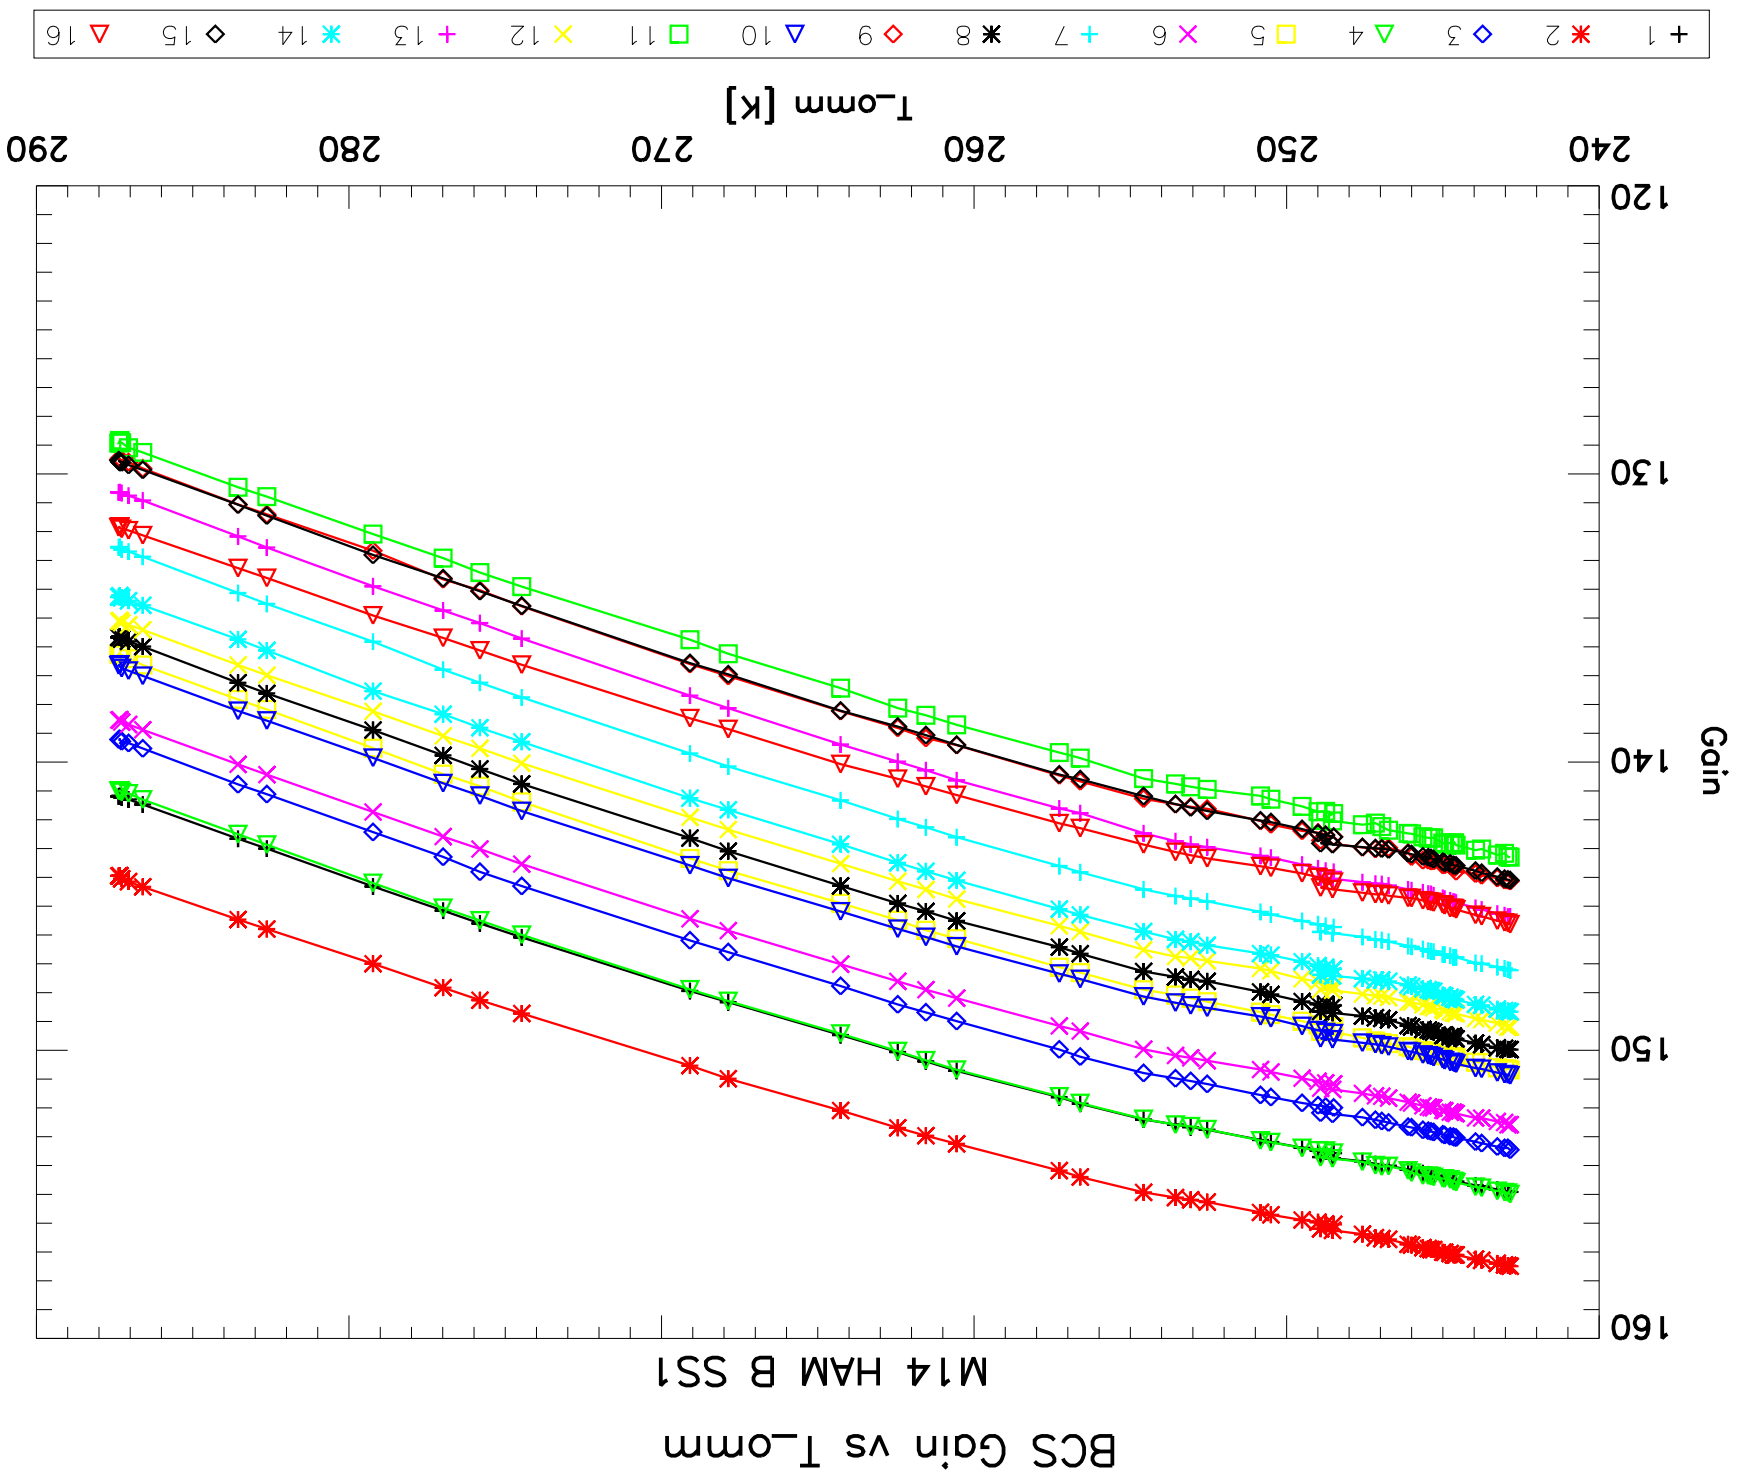


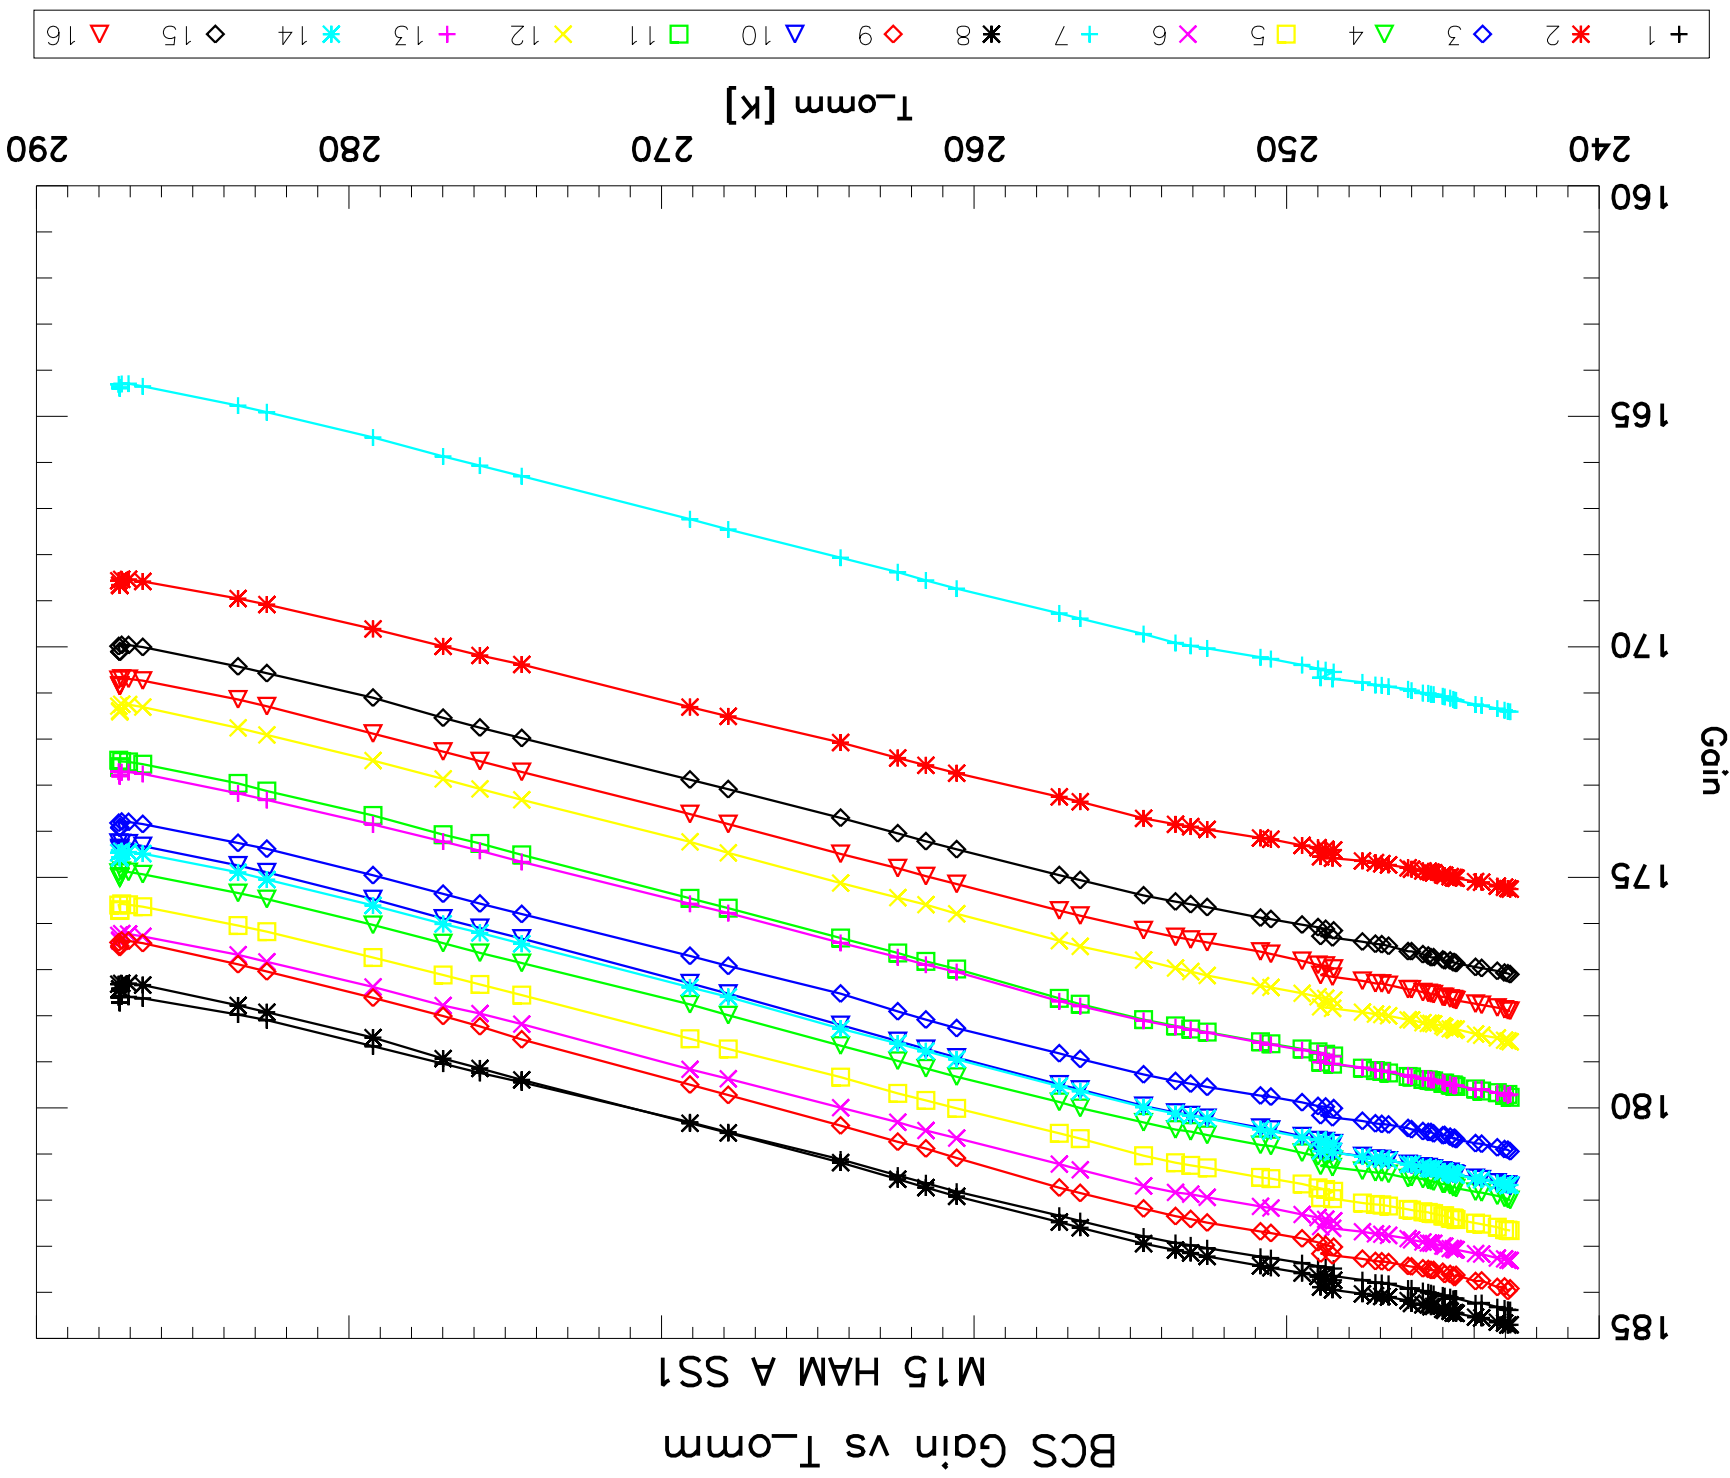


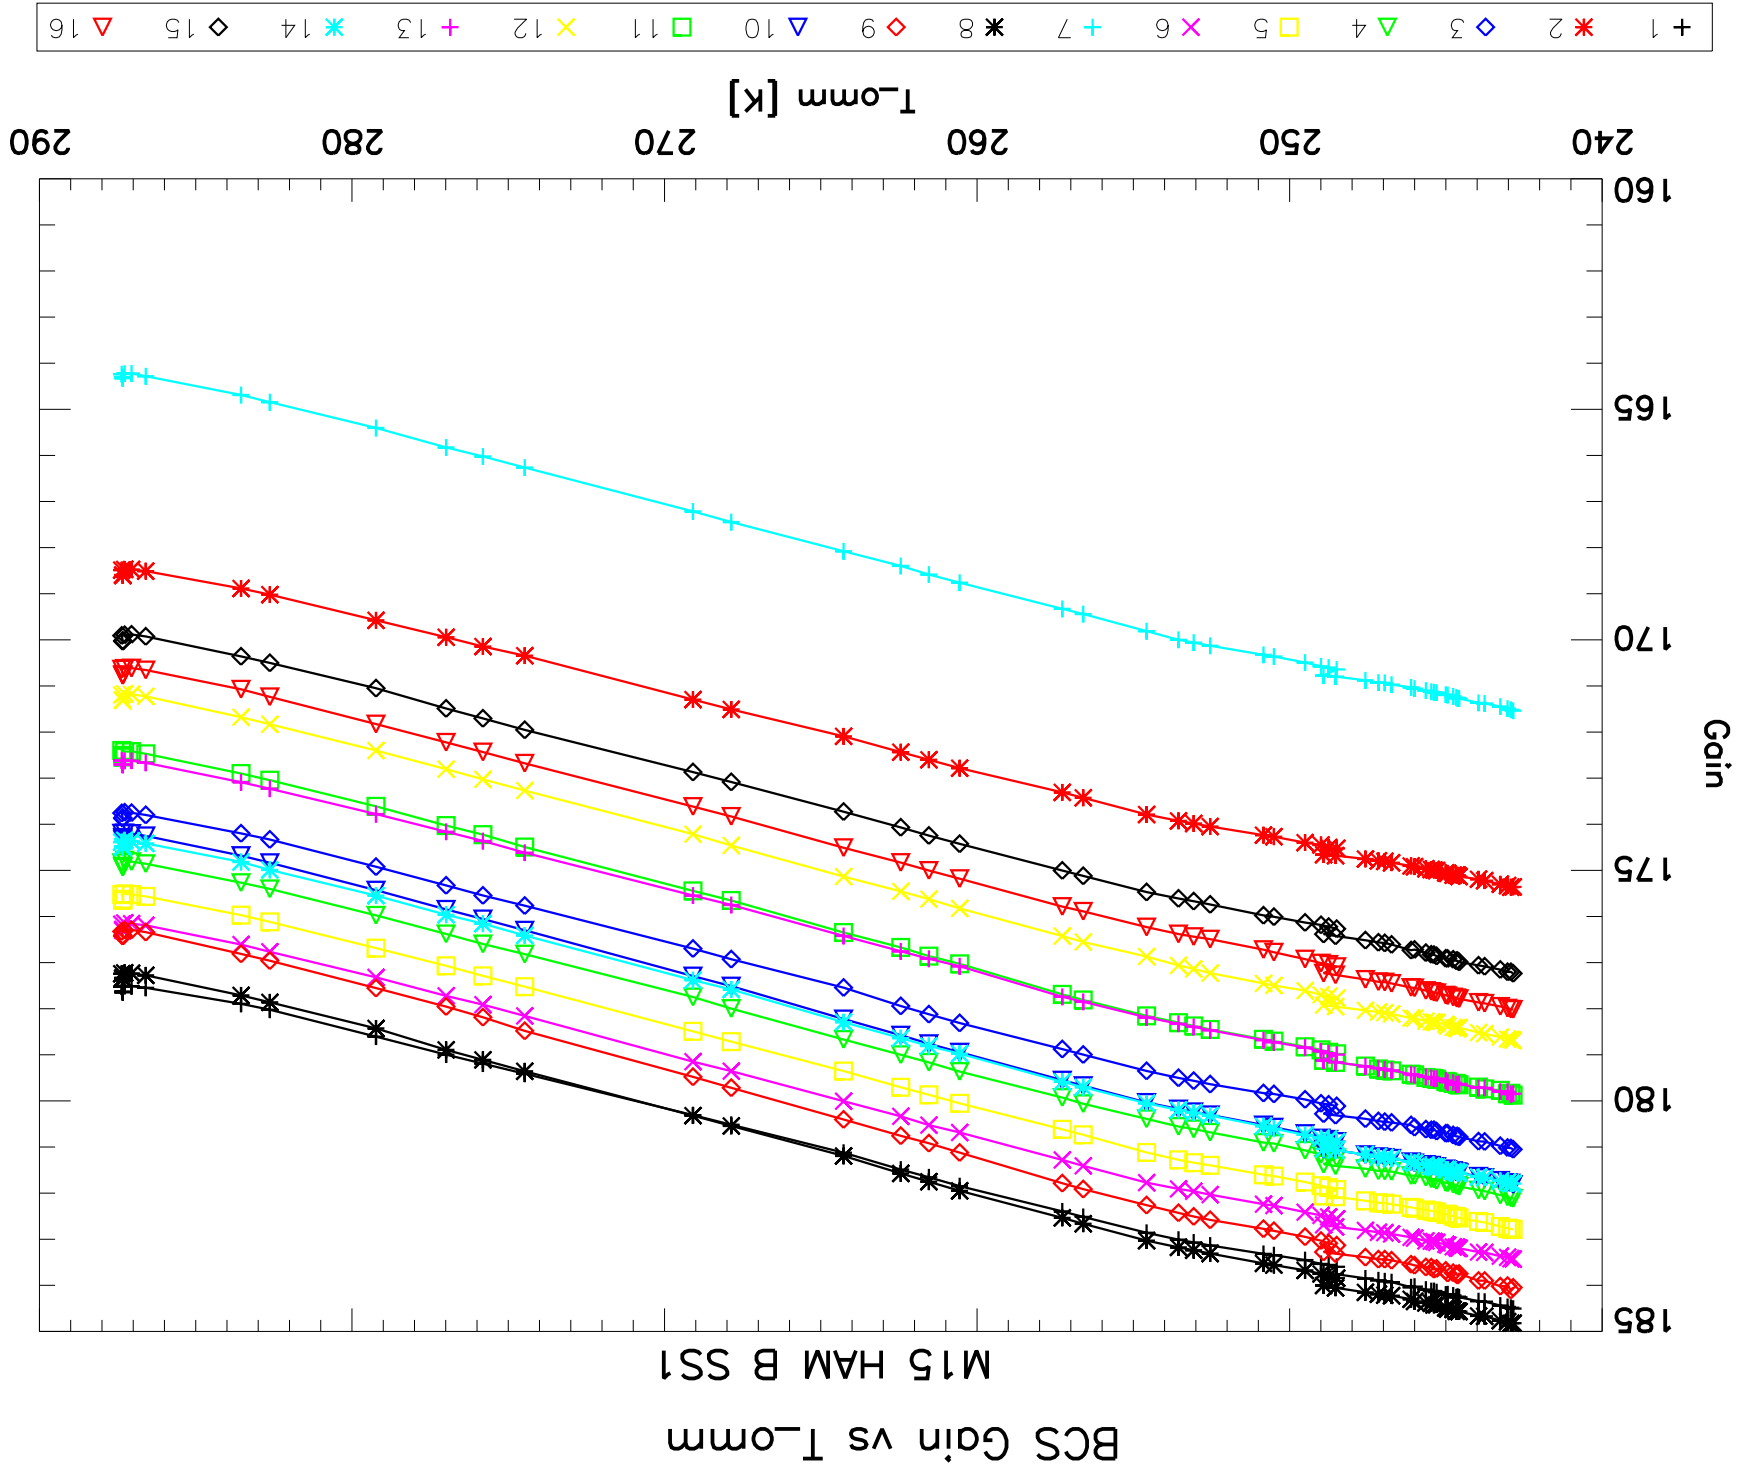

BCS Gain vs T_omm


M16 HAM A SS1

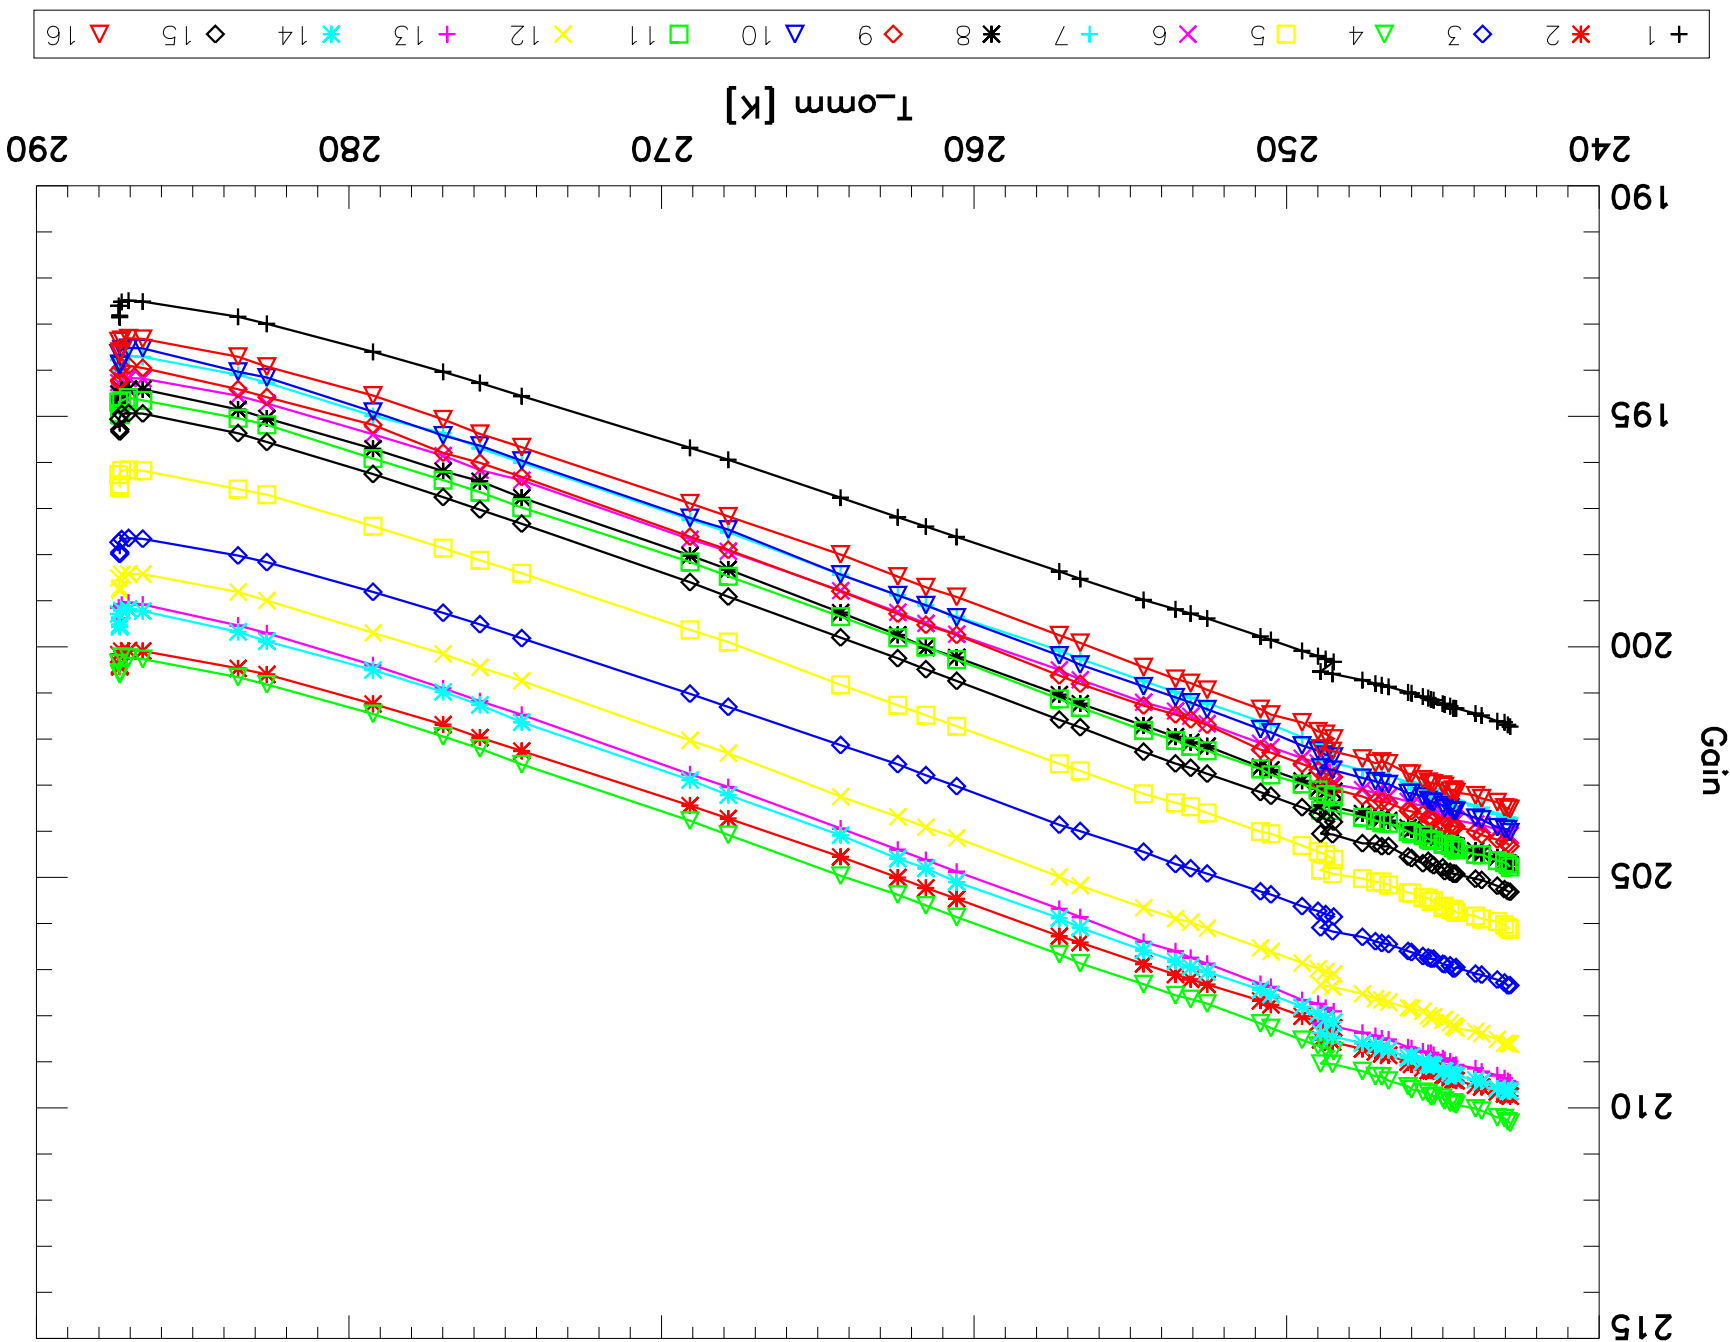

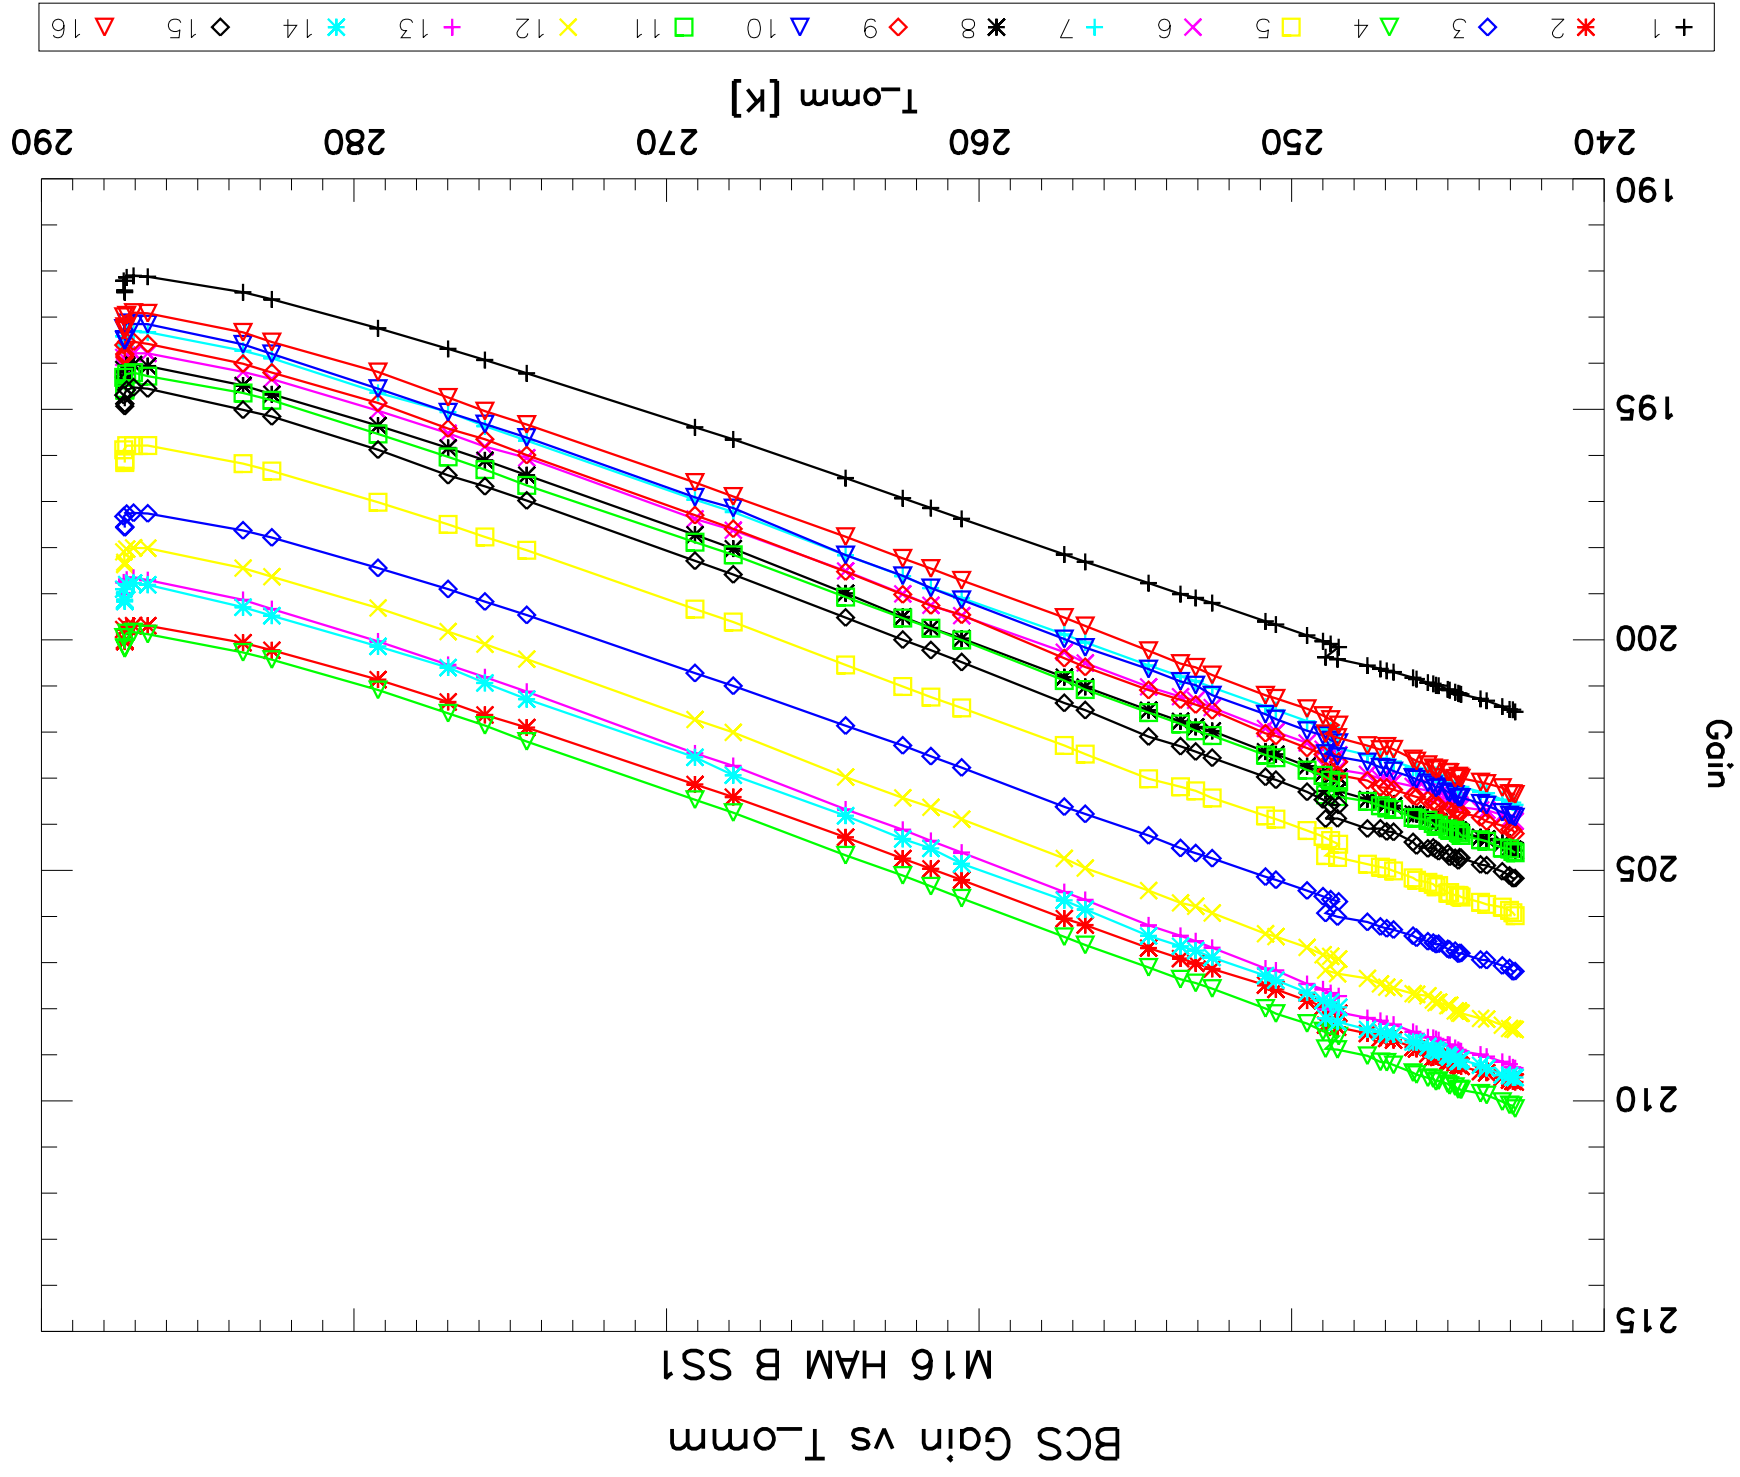


Normalized BCS Gain vs T_{omm}

14 HAM A SS1

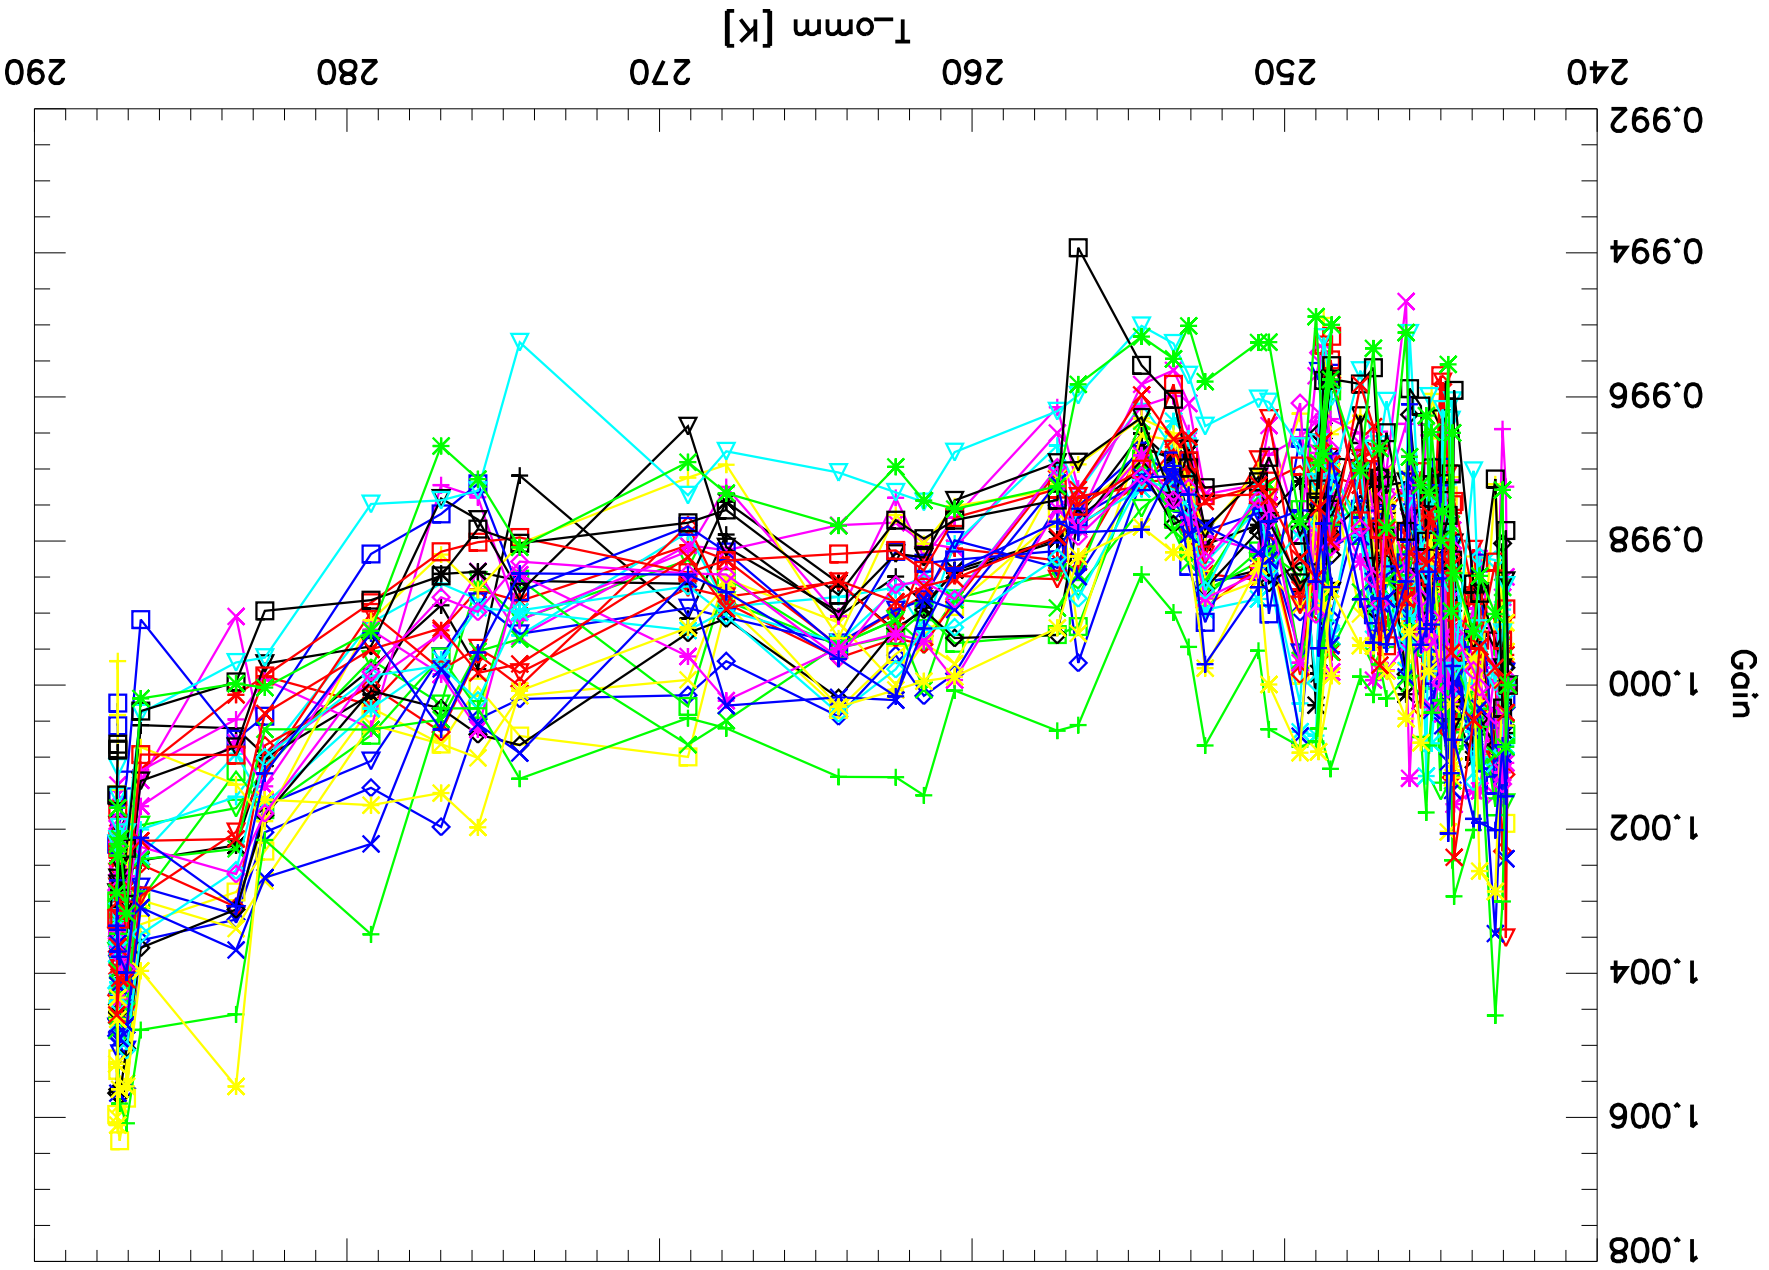



Normalized BCS Gain vs T_{omm}

14 HAM A SS2

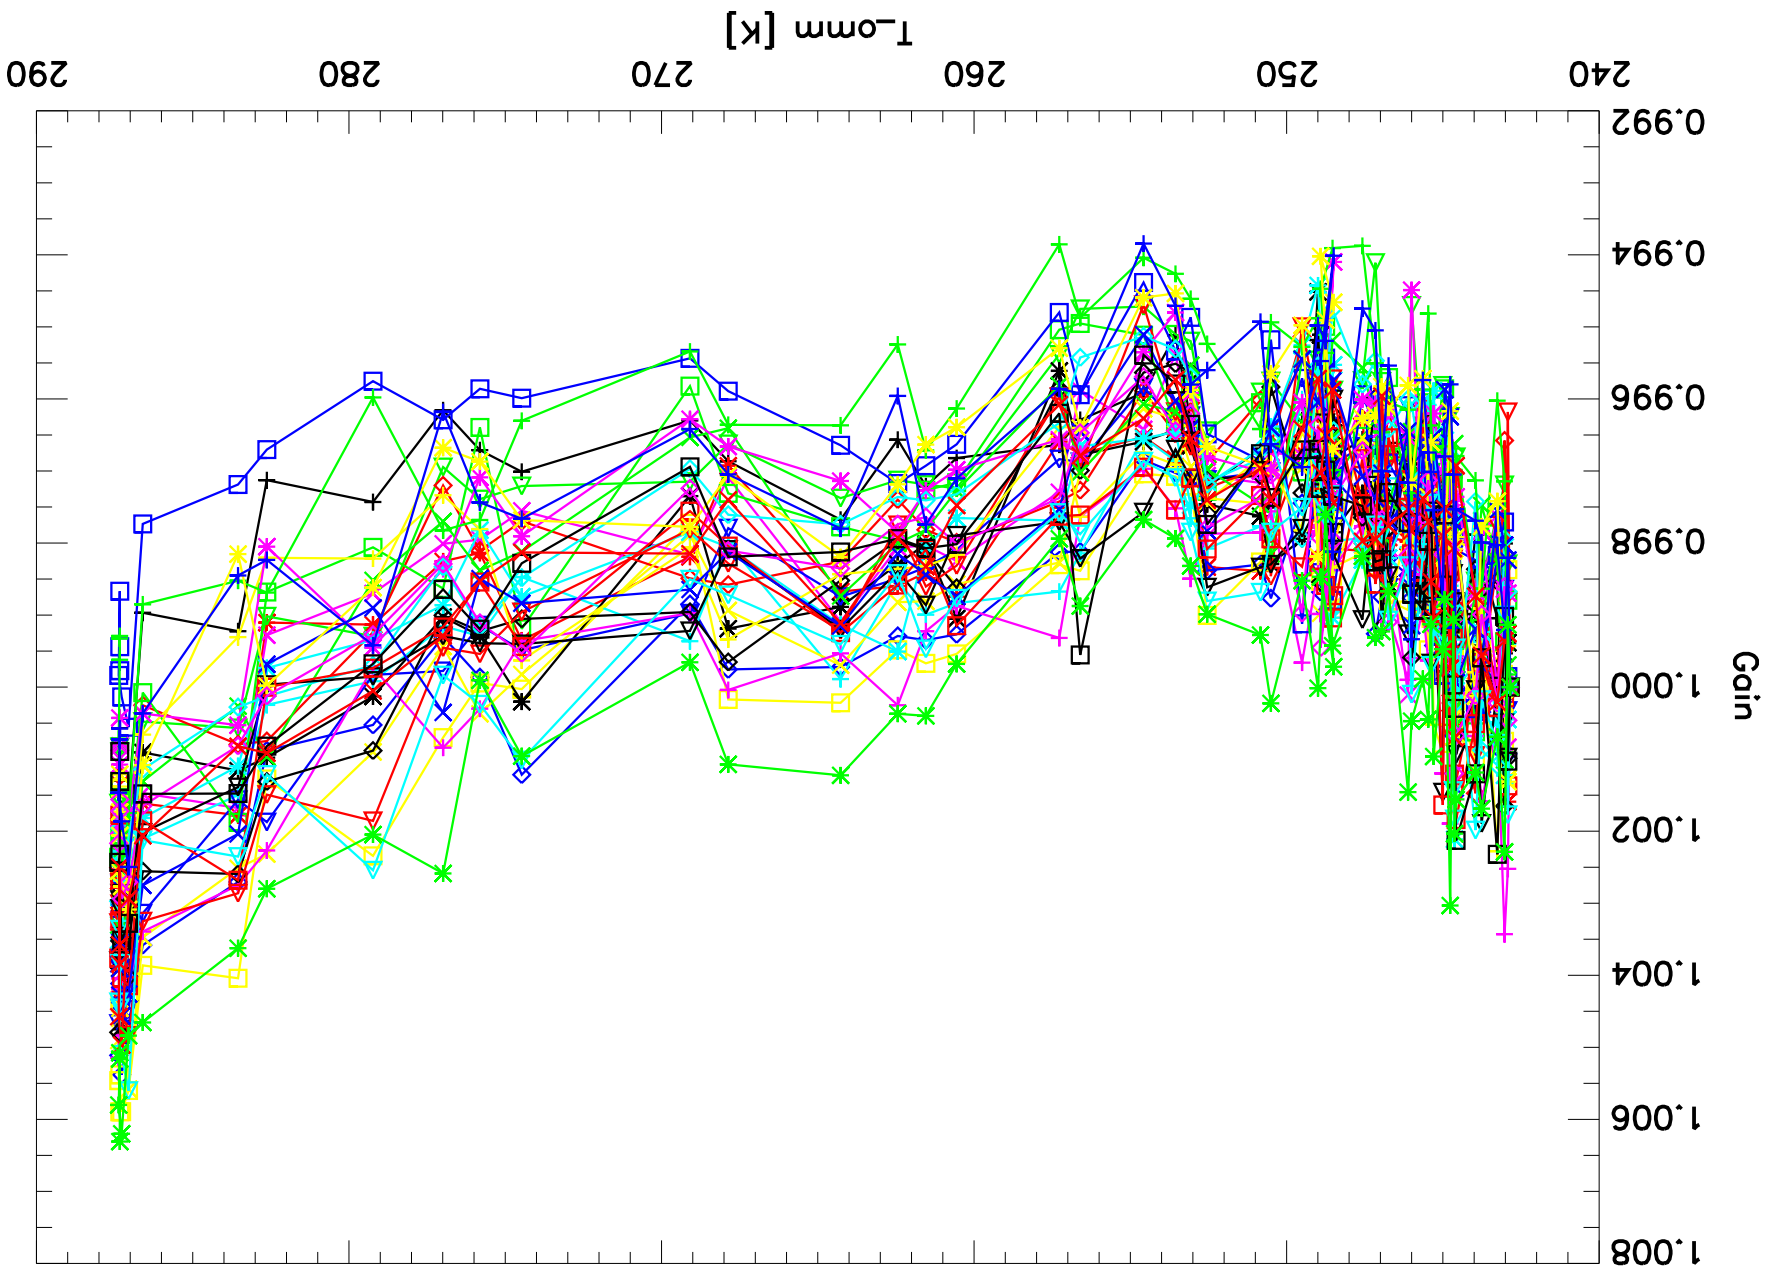


Normalized BCS Gain vs T_{omm}

14 HAM B SS1

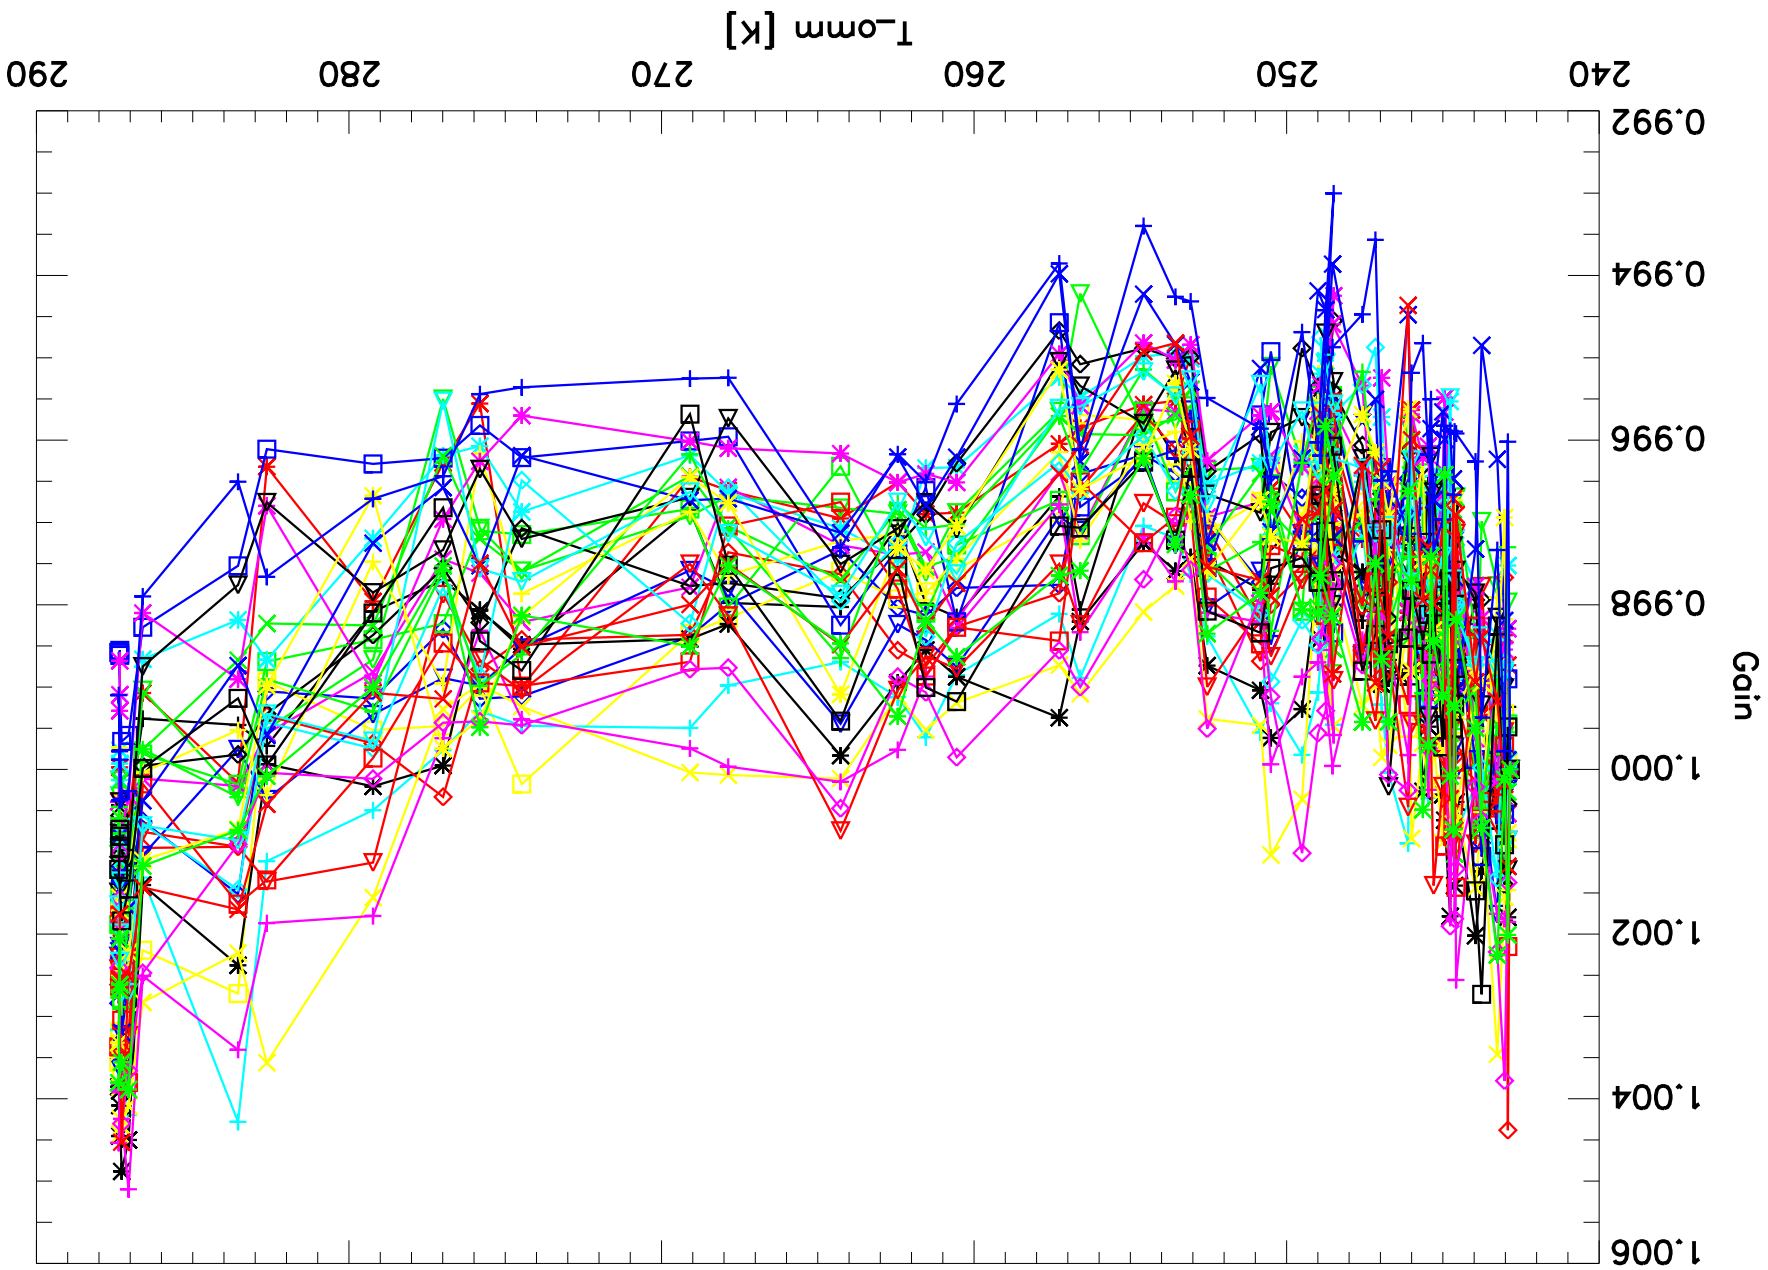


Normalized BCS Gain vs T_{0mm}

14 HAM B SS2

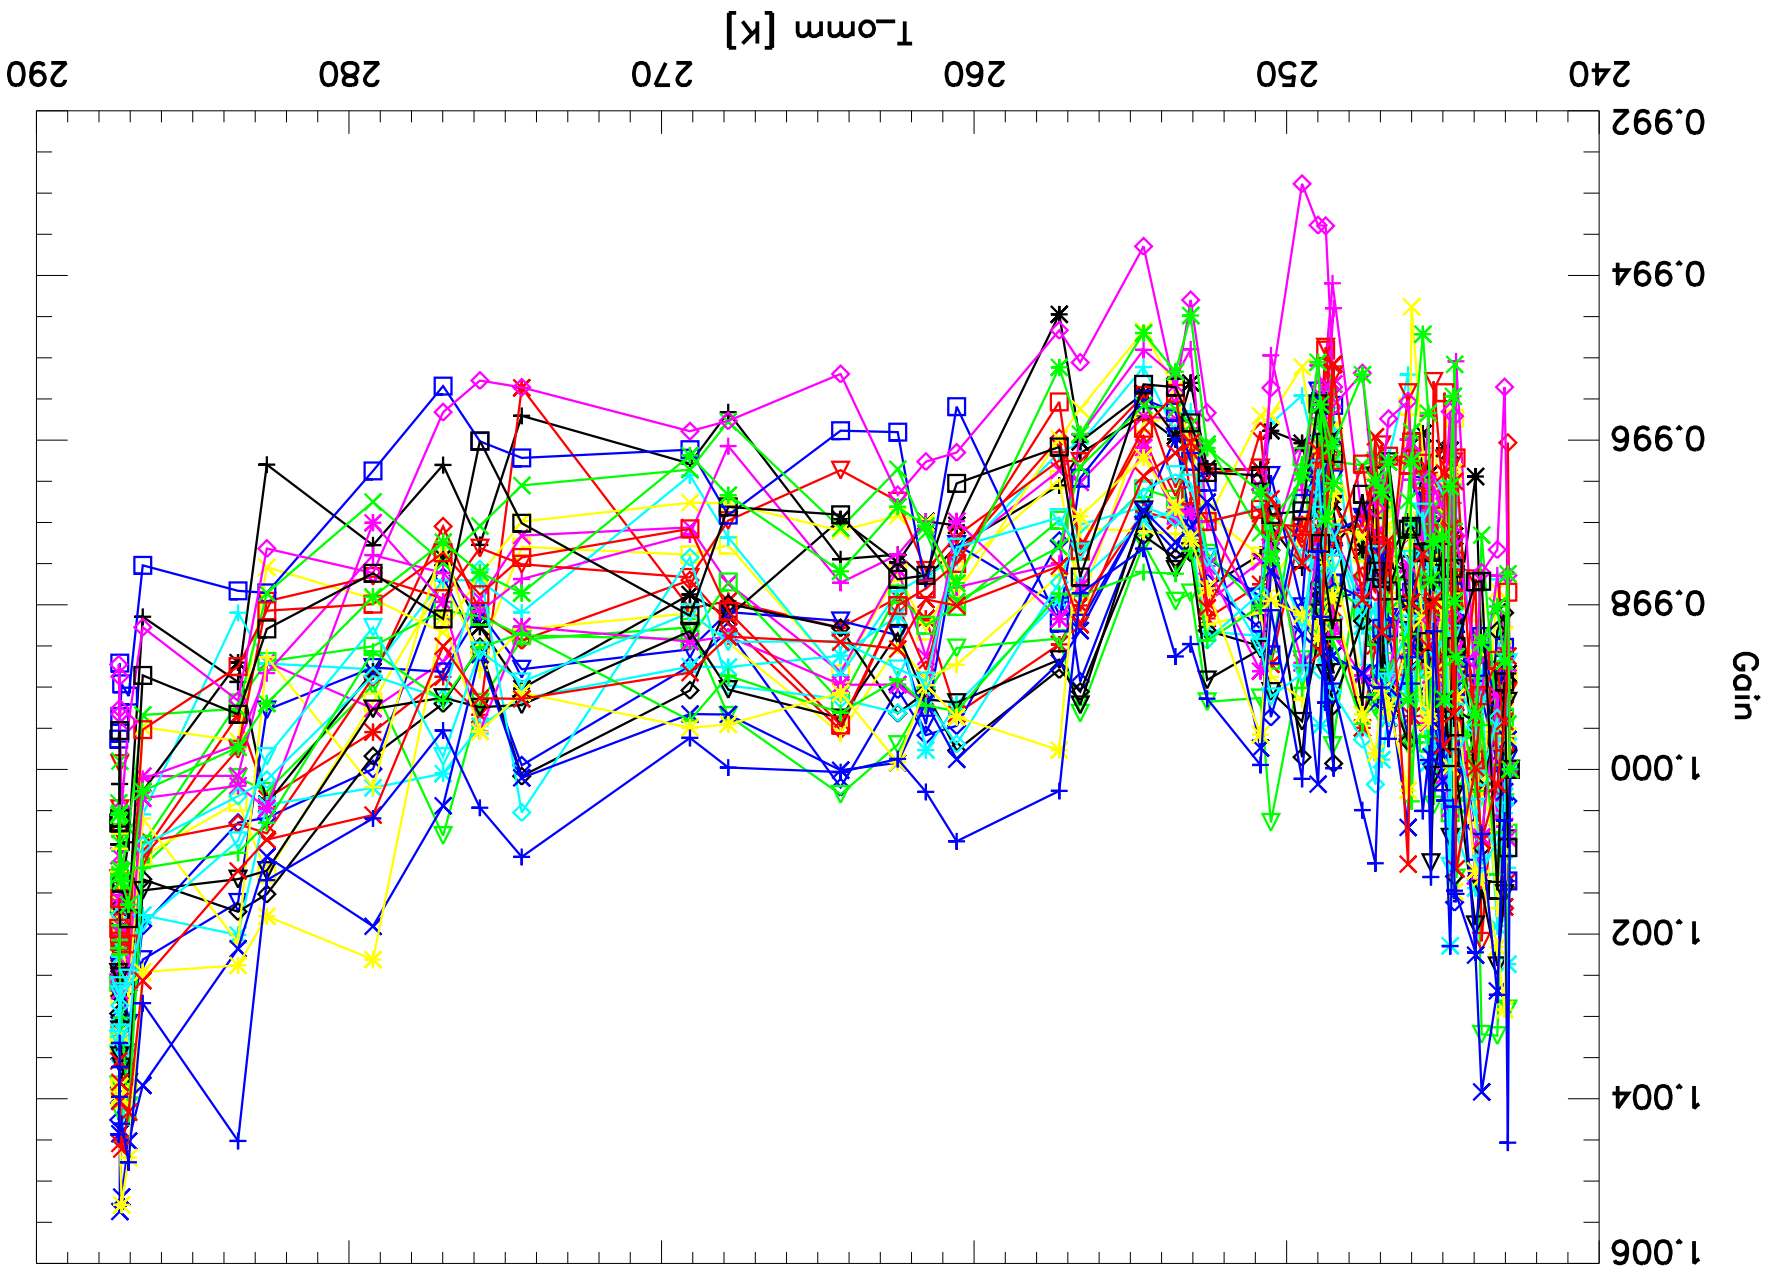


Normalized BCS Gain vs T_{omm}

15 HAM A SS1

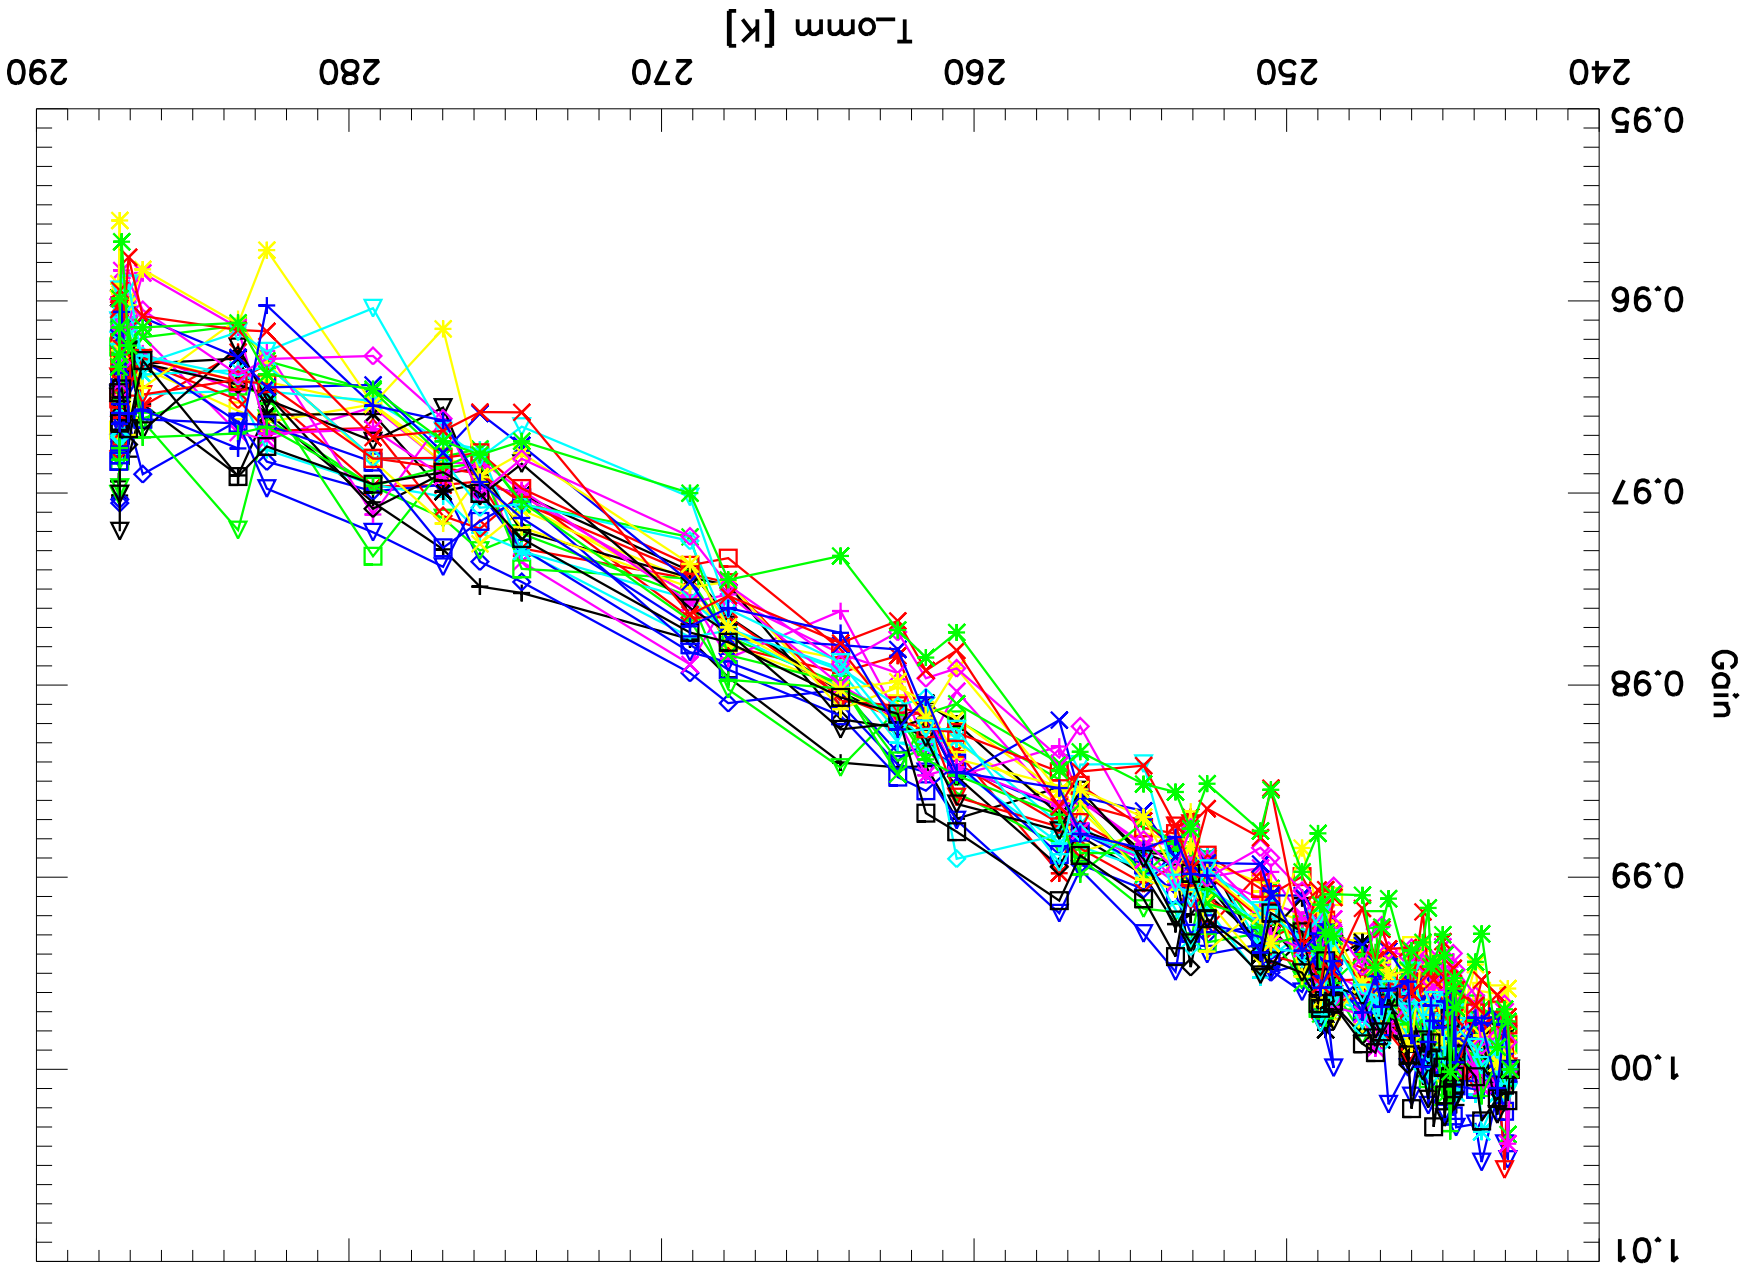


Normalized BCS Gain vs T_{omm}


15 HAM A SS2

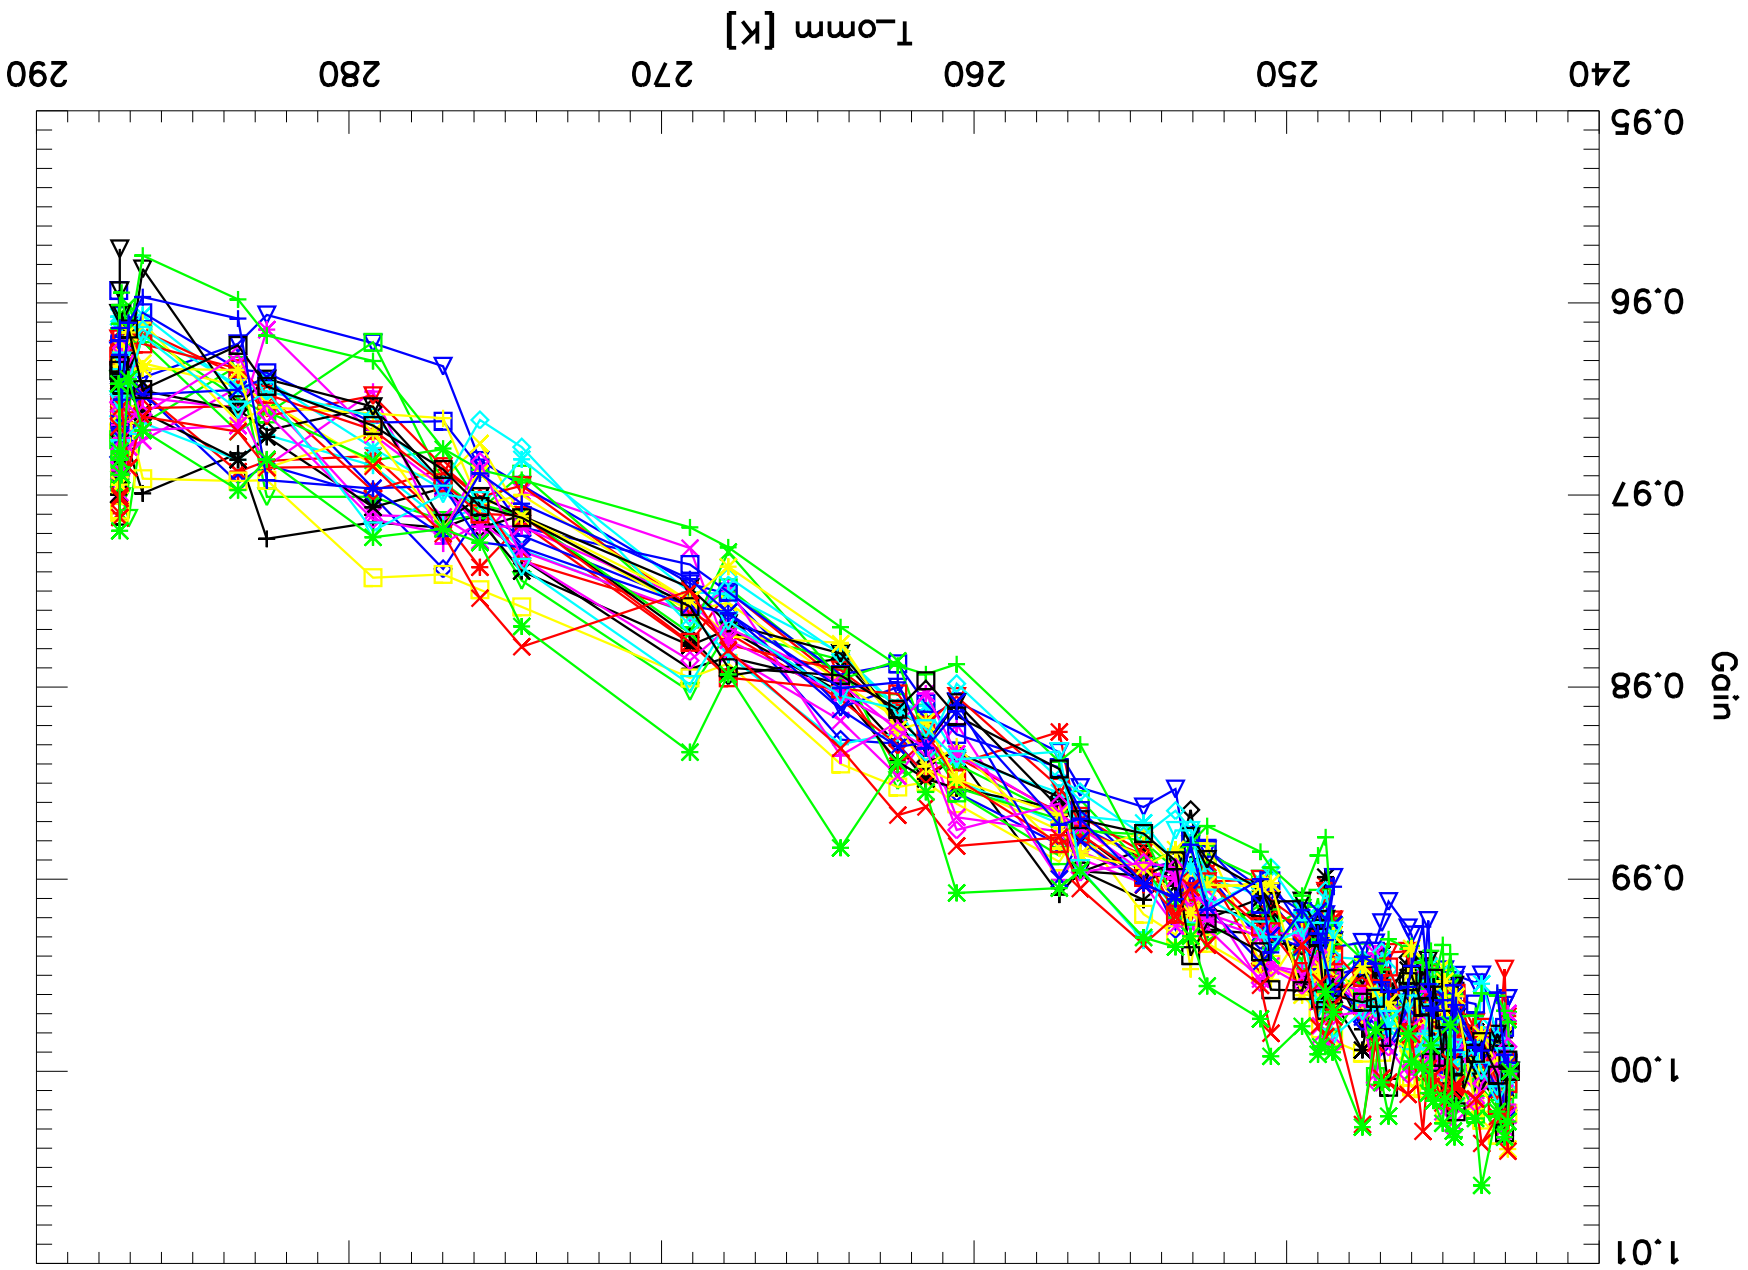



Normalized BCS Gain vs T_{omm}


15 HAM B SS1

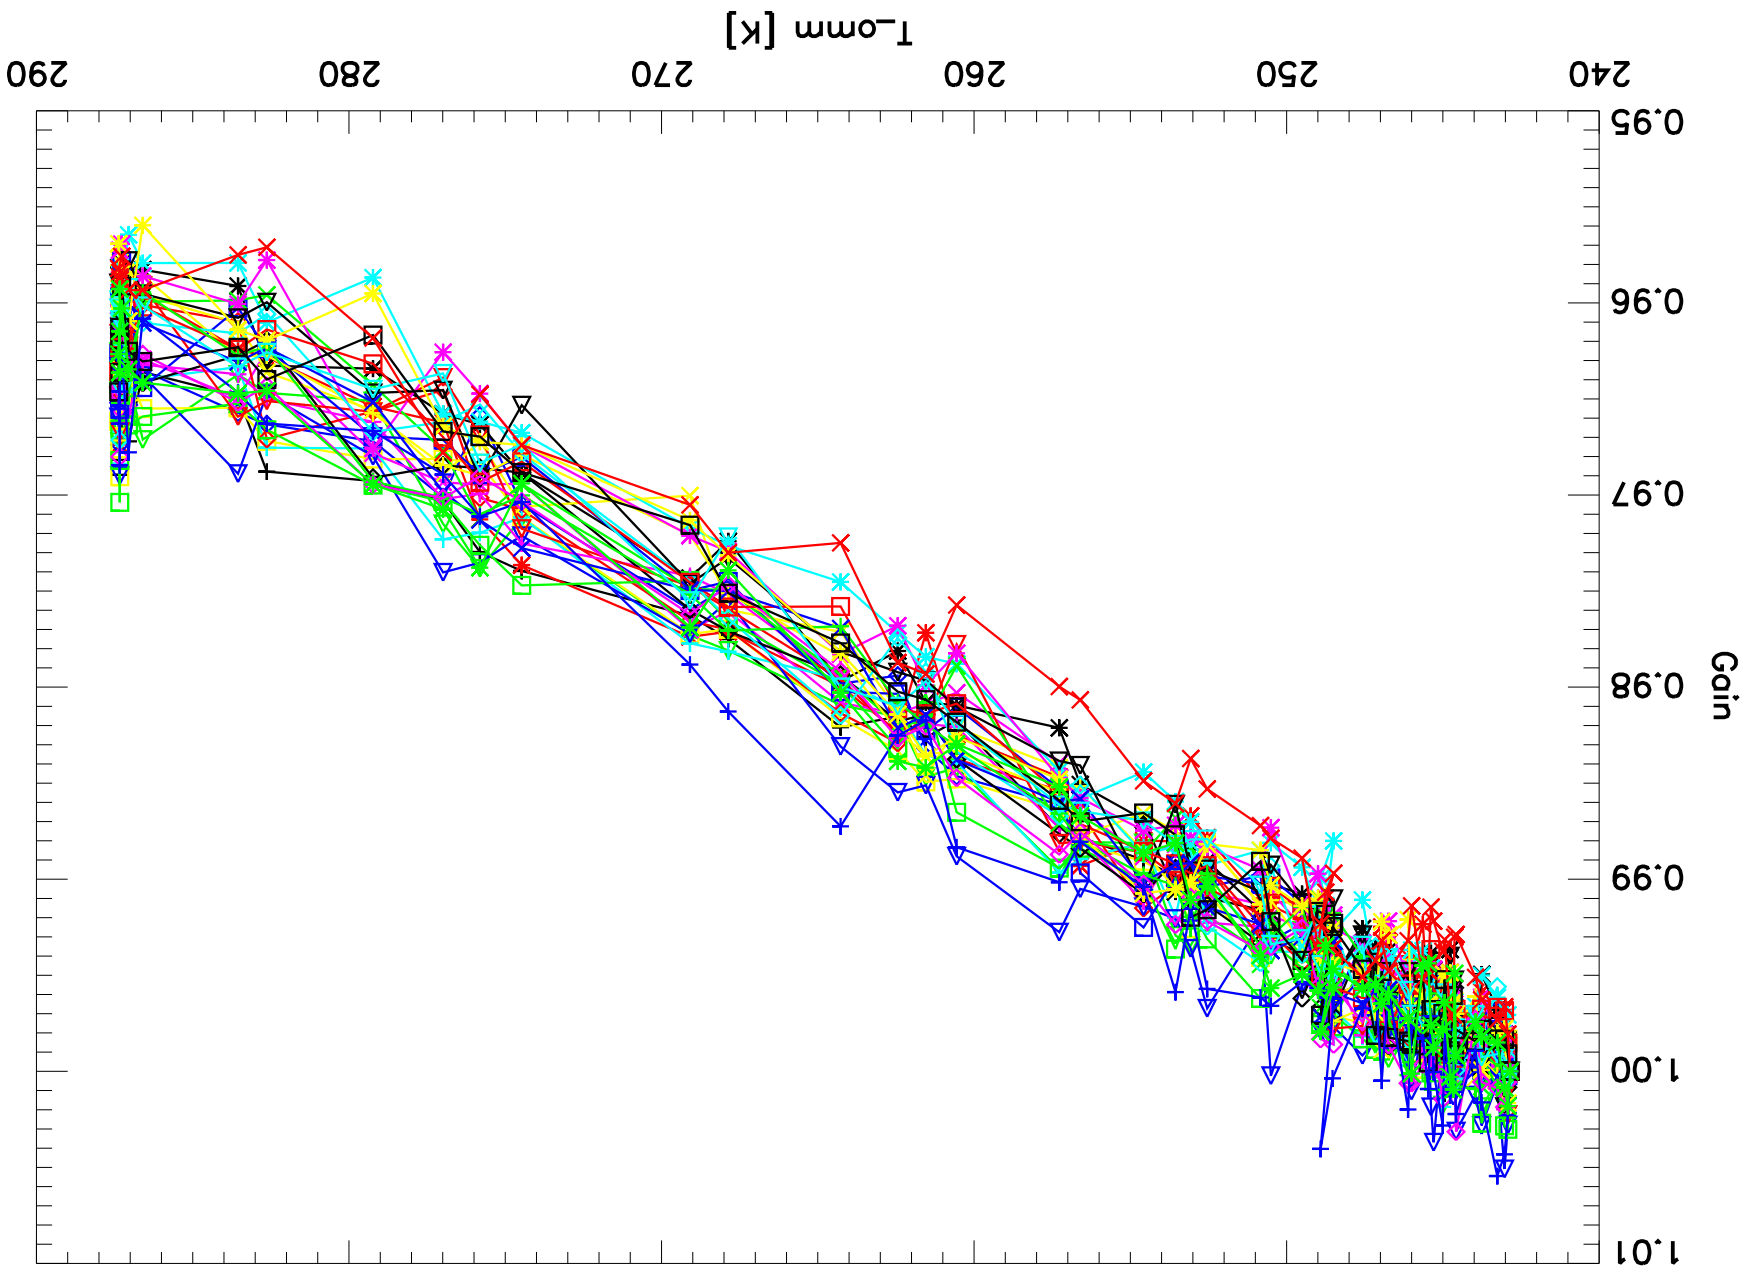


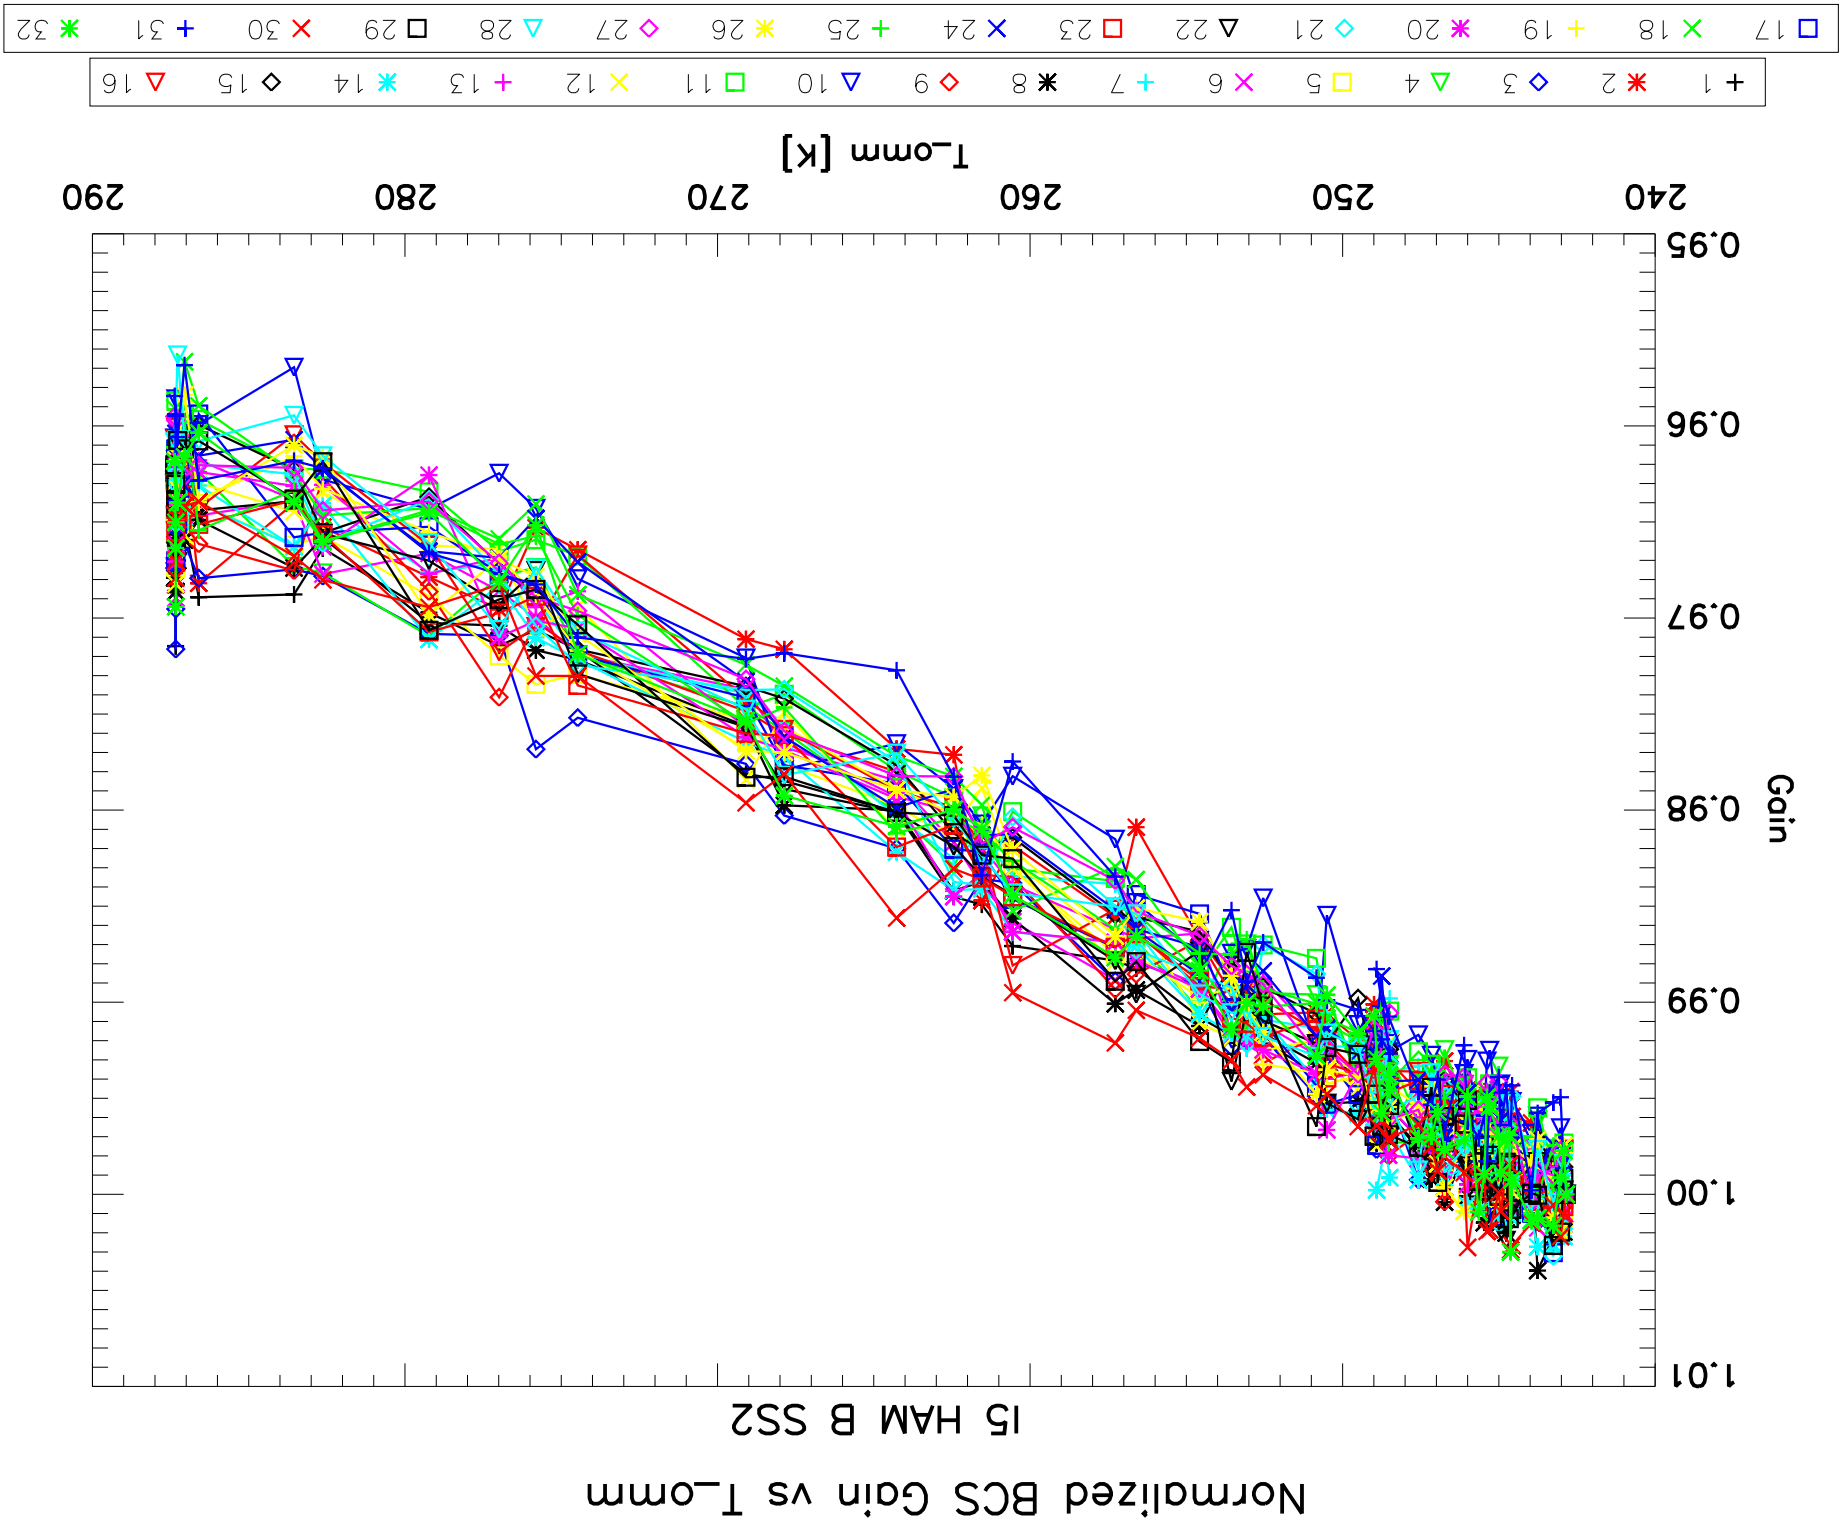


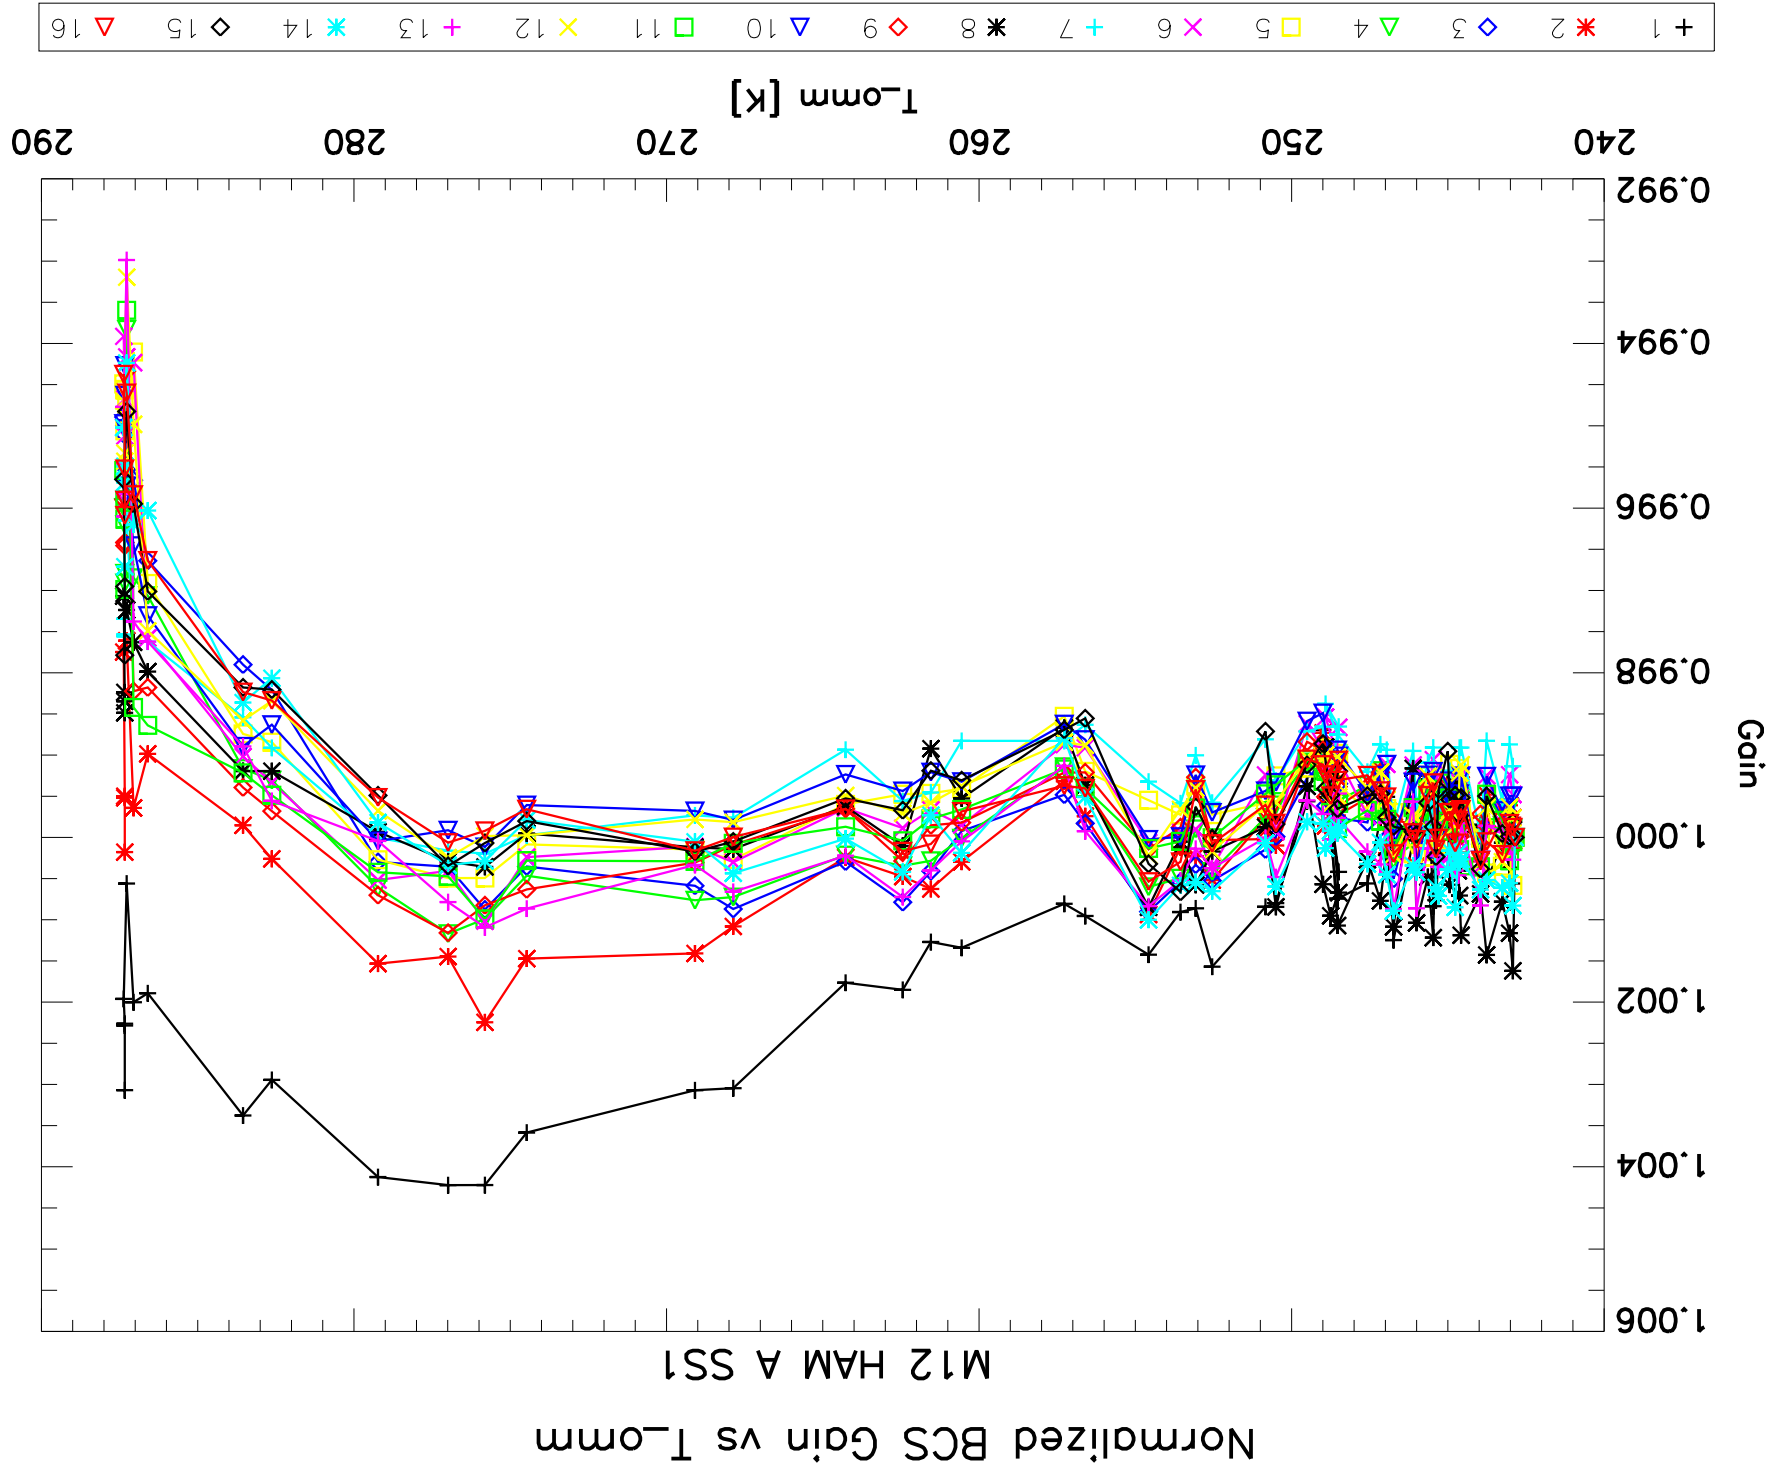


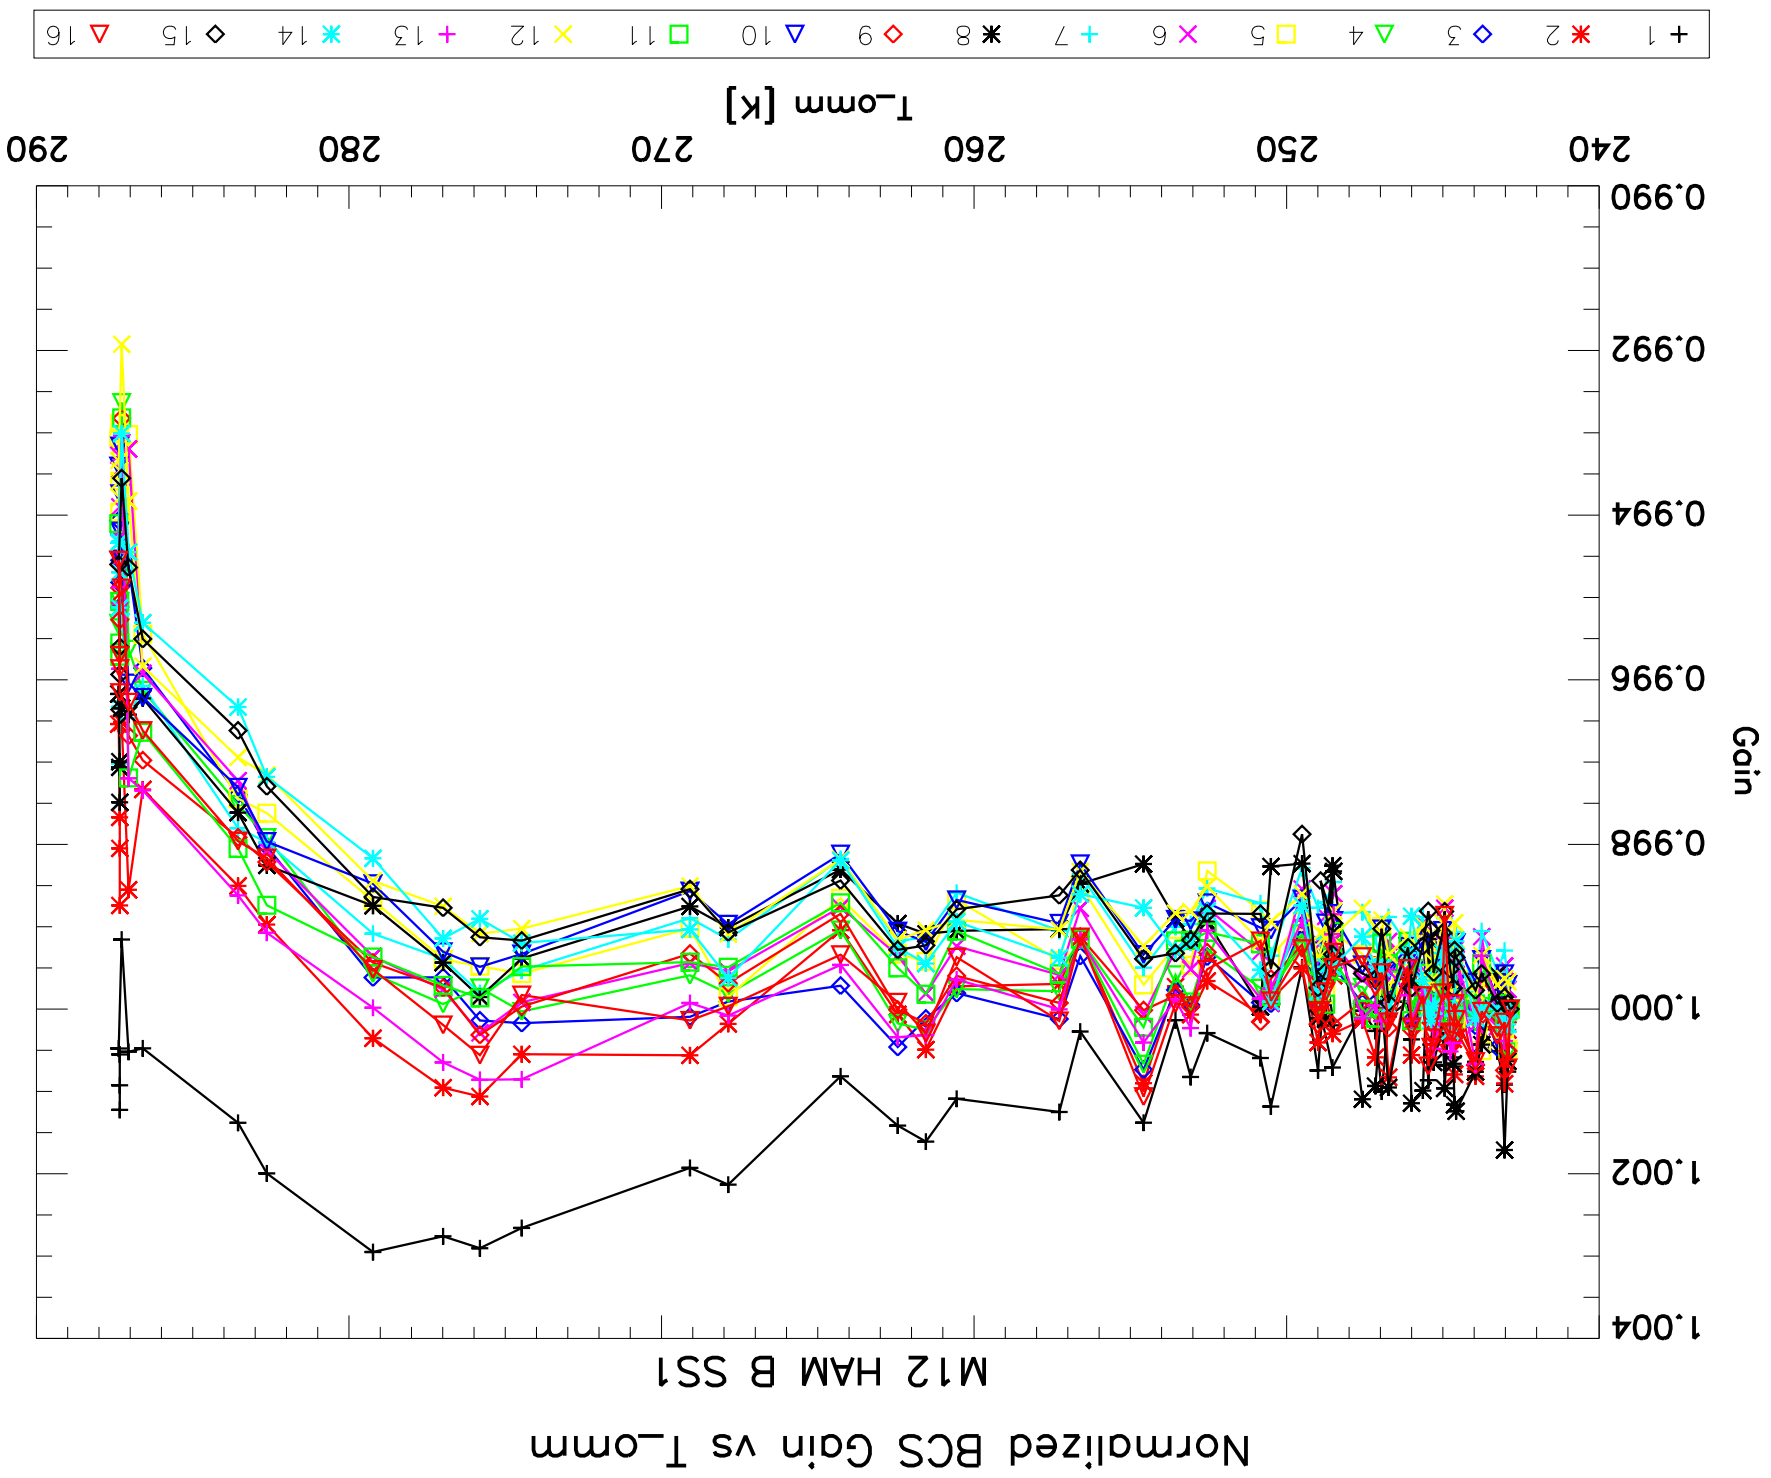


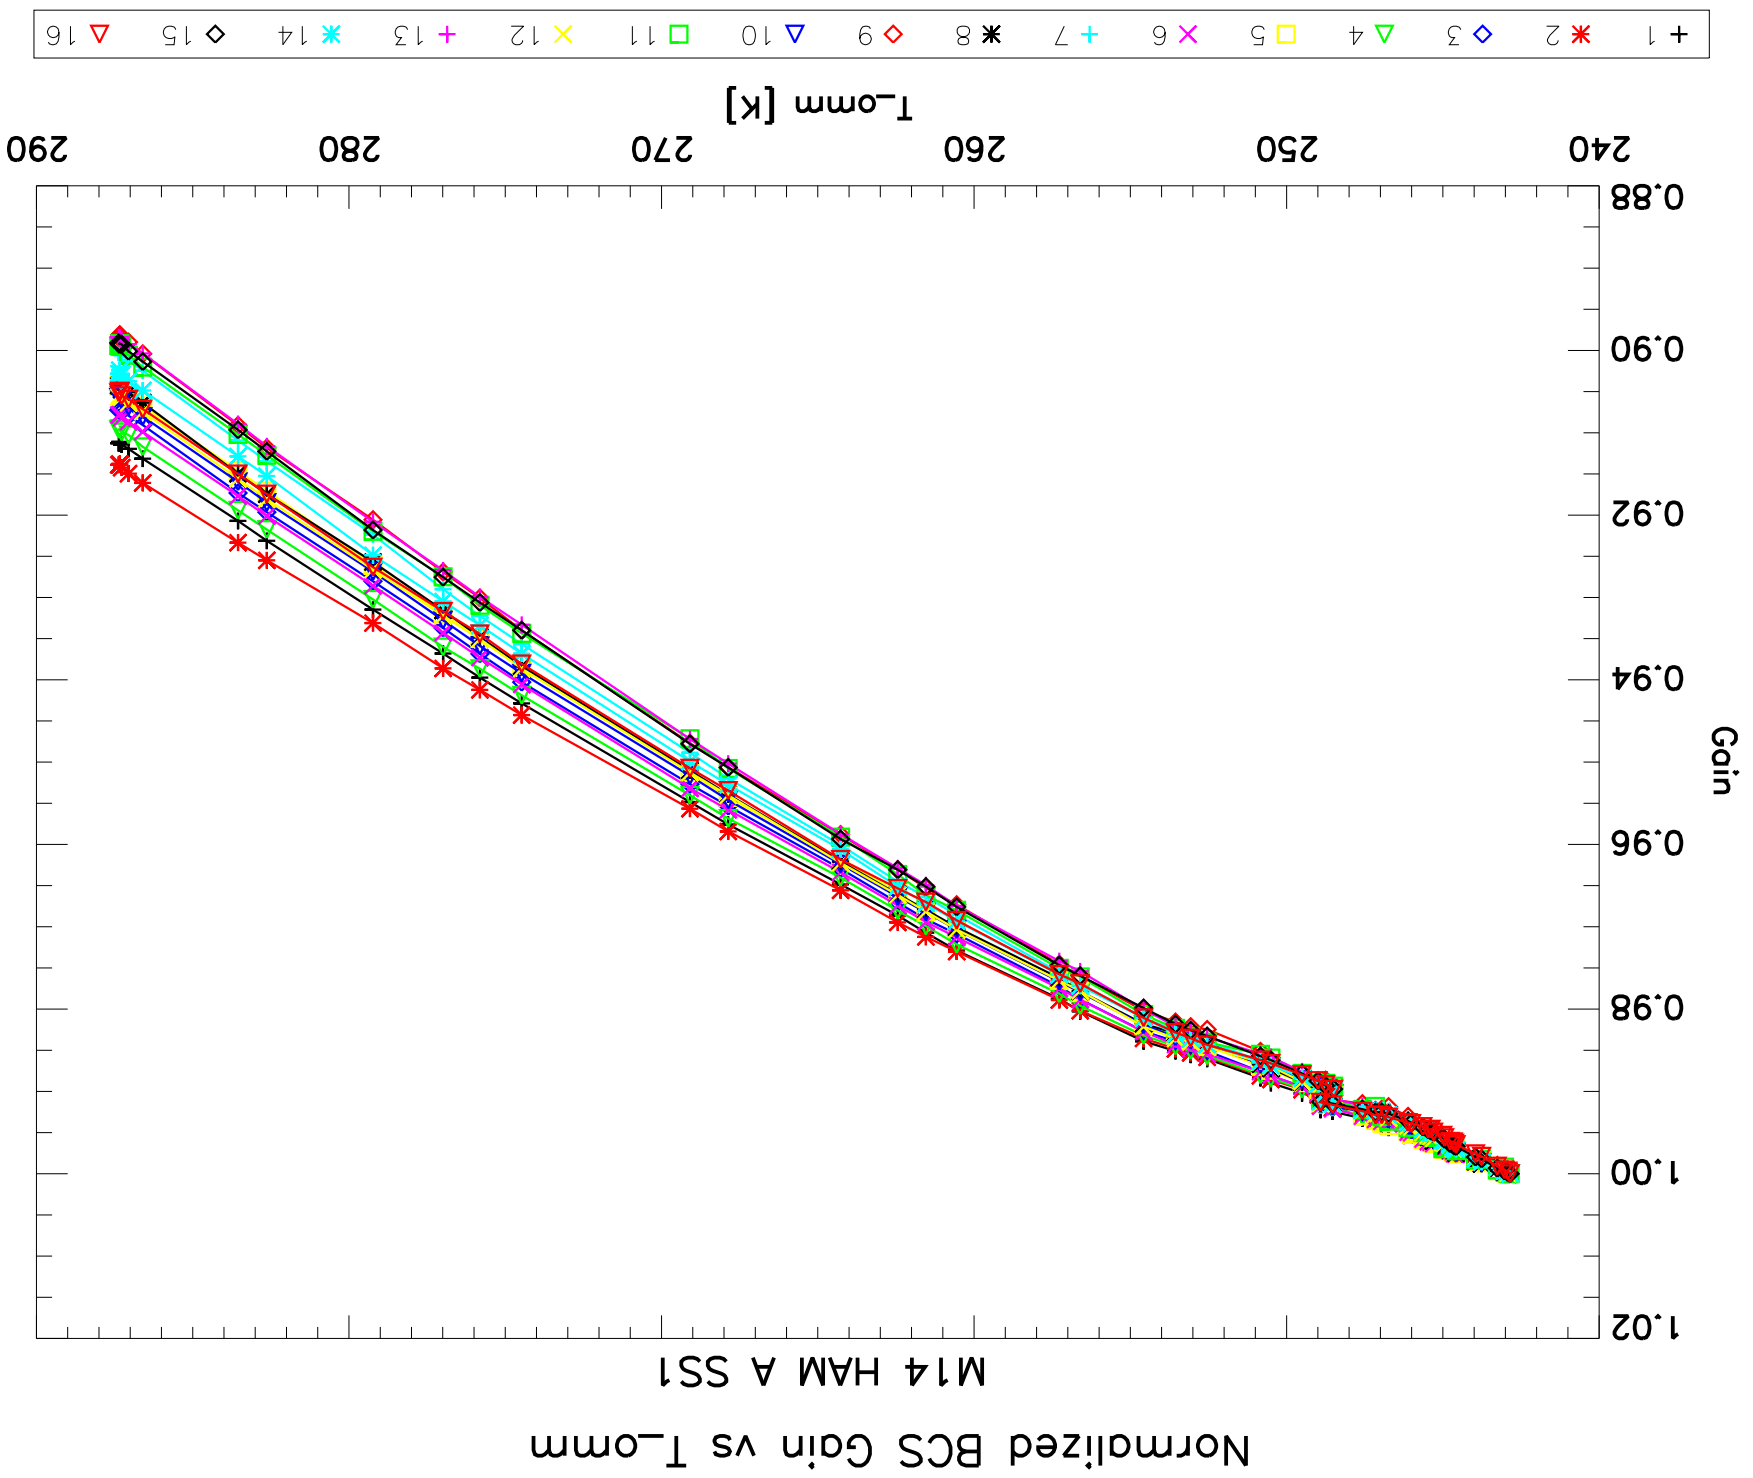


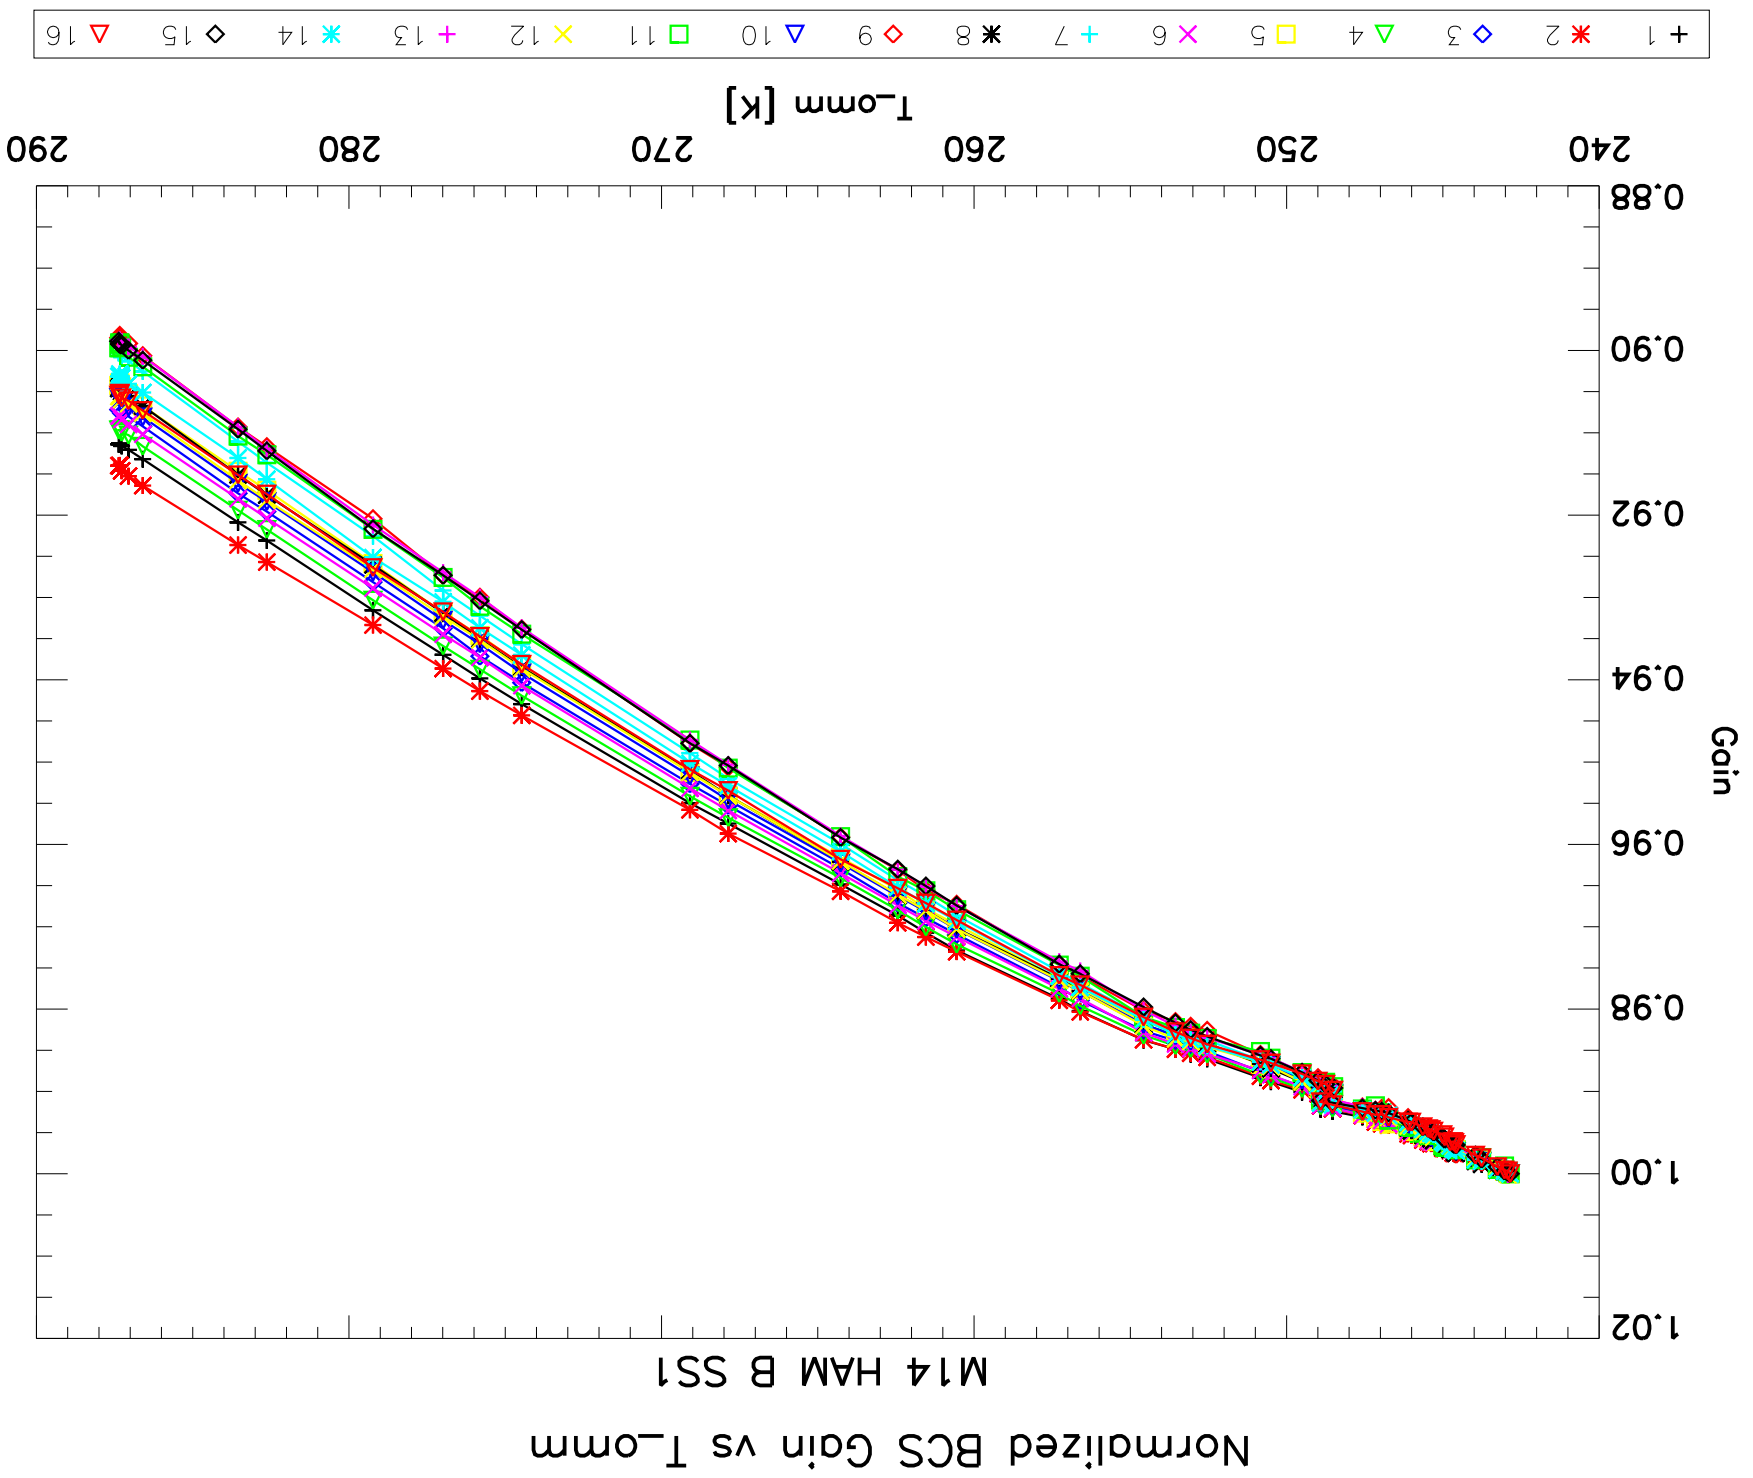

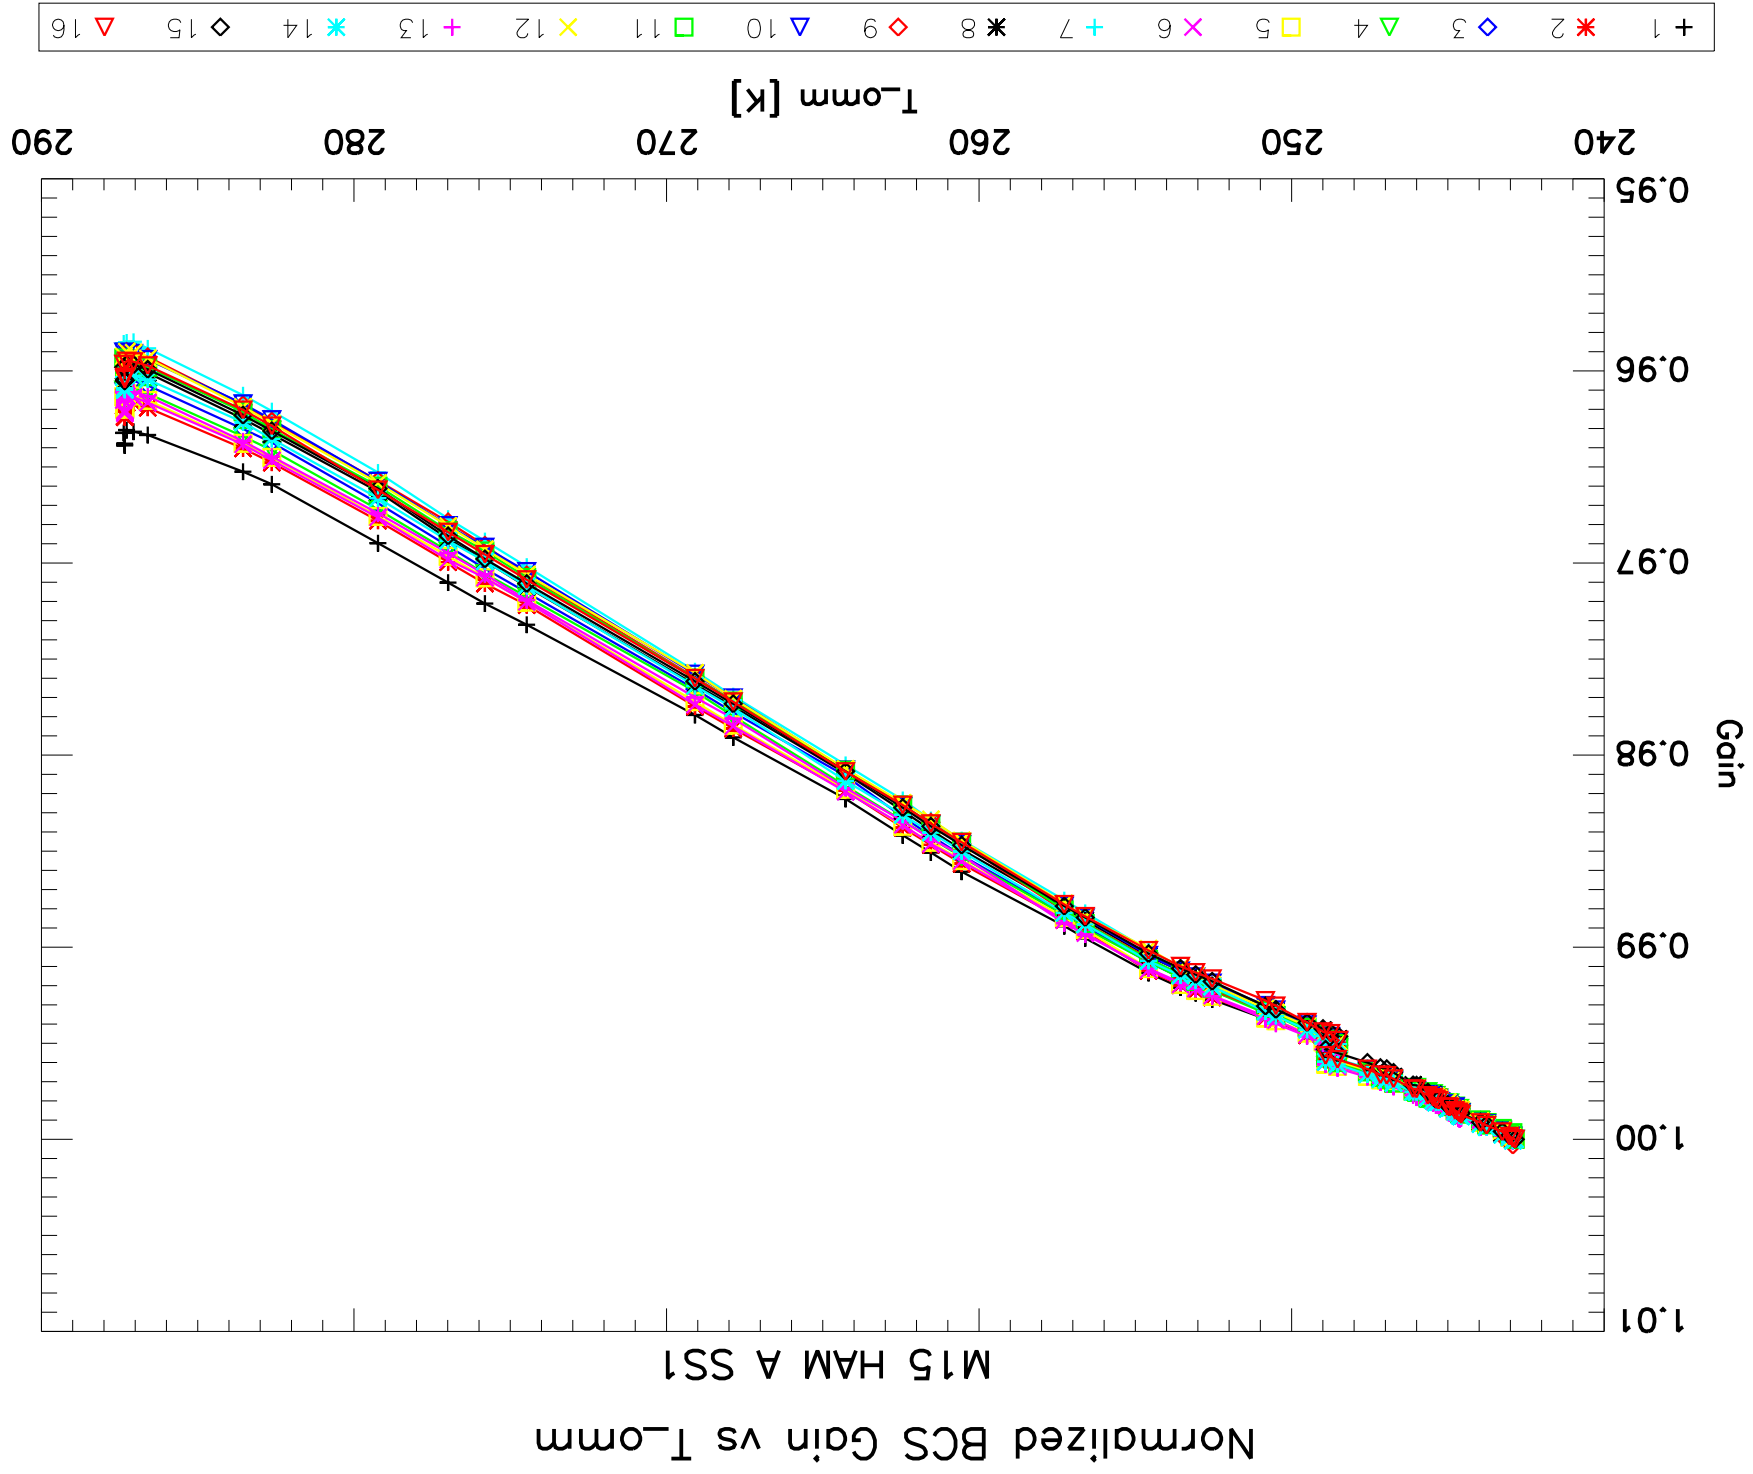


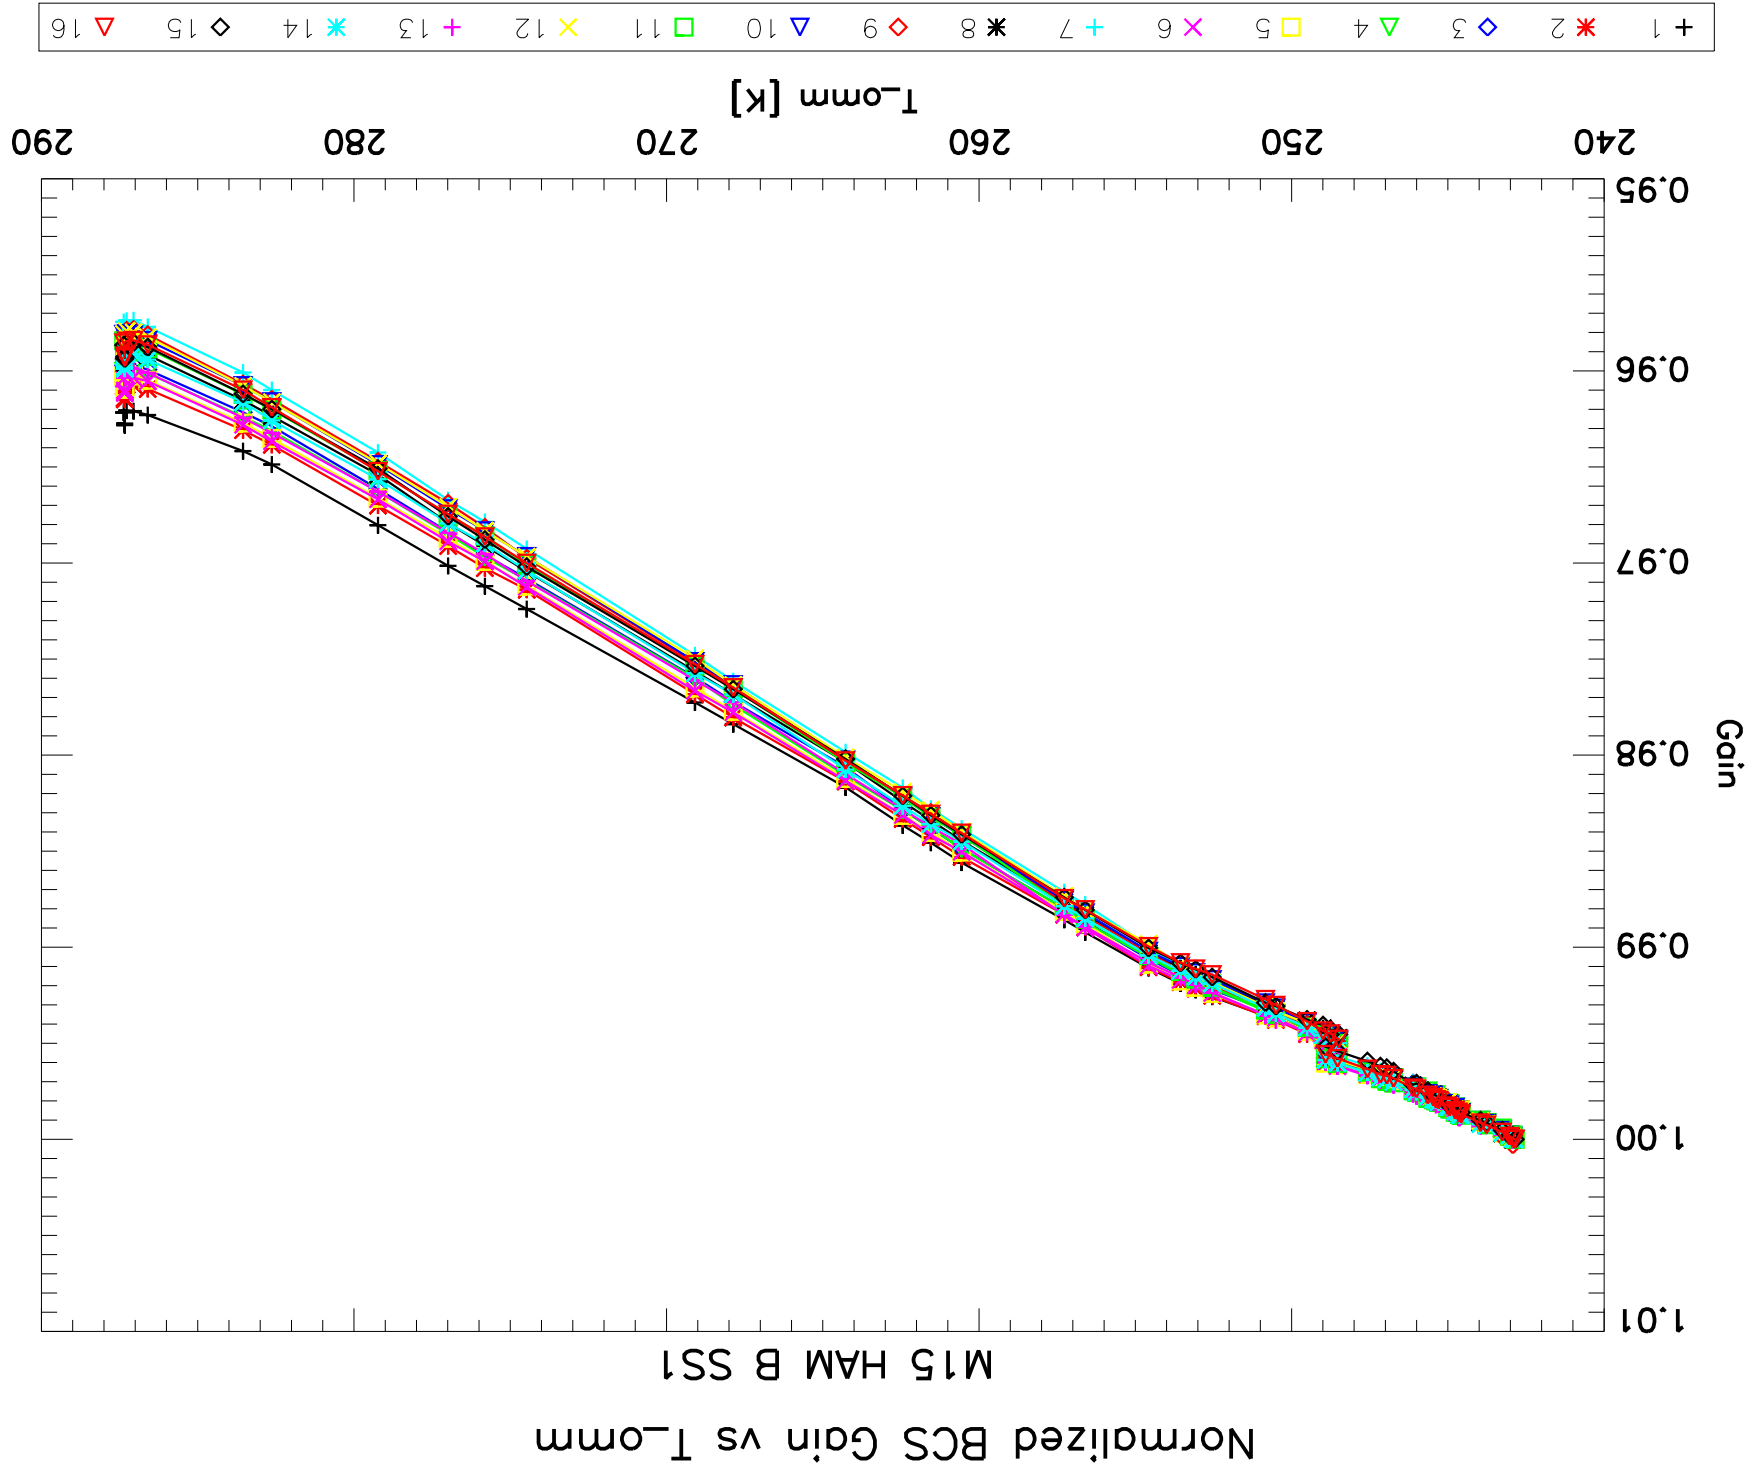


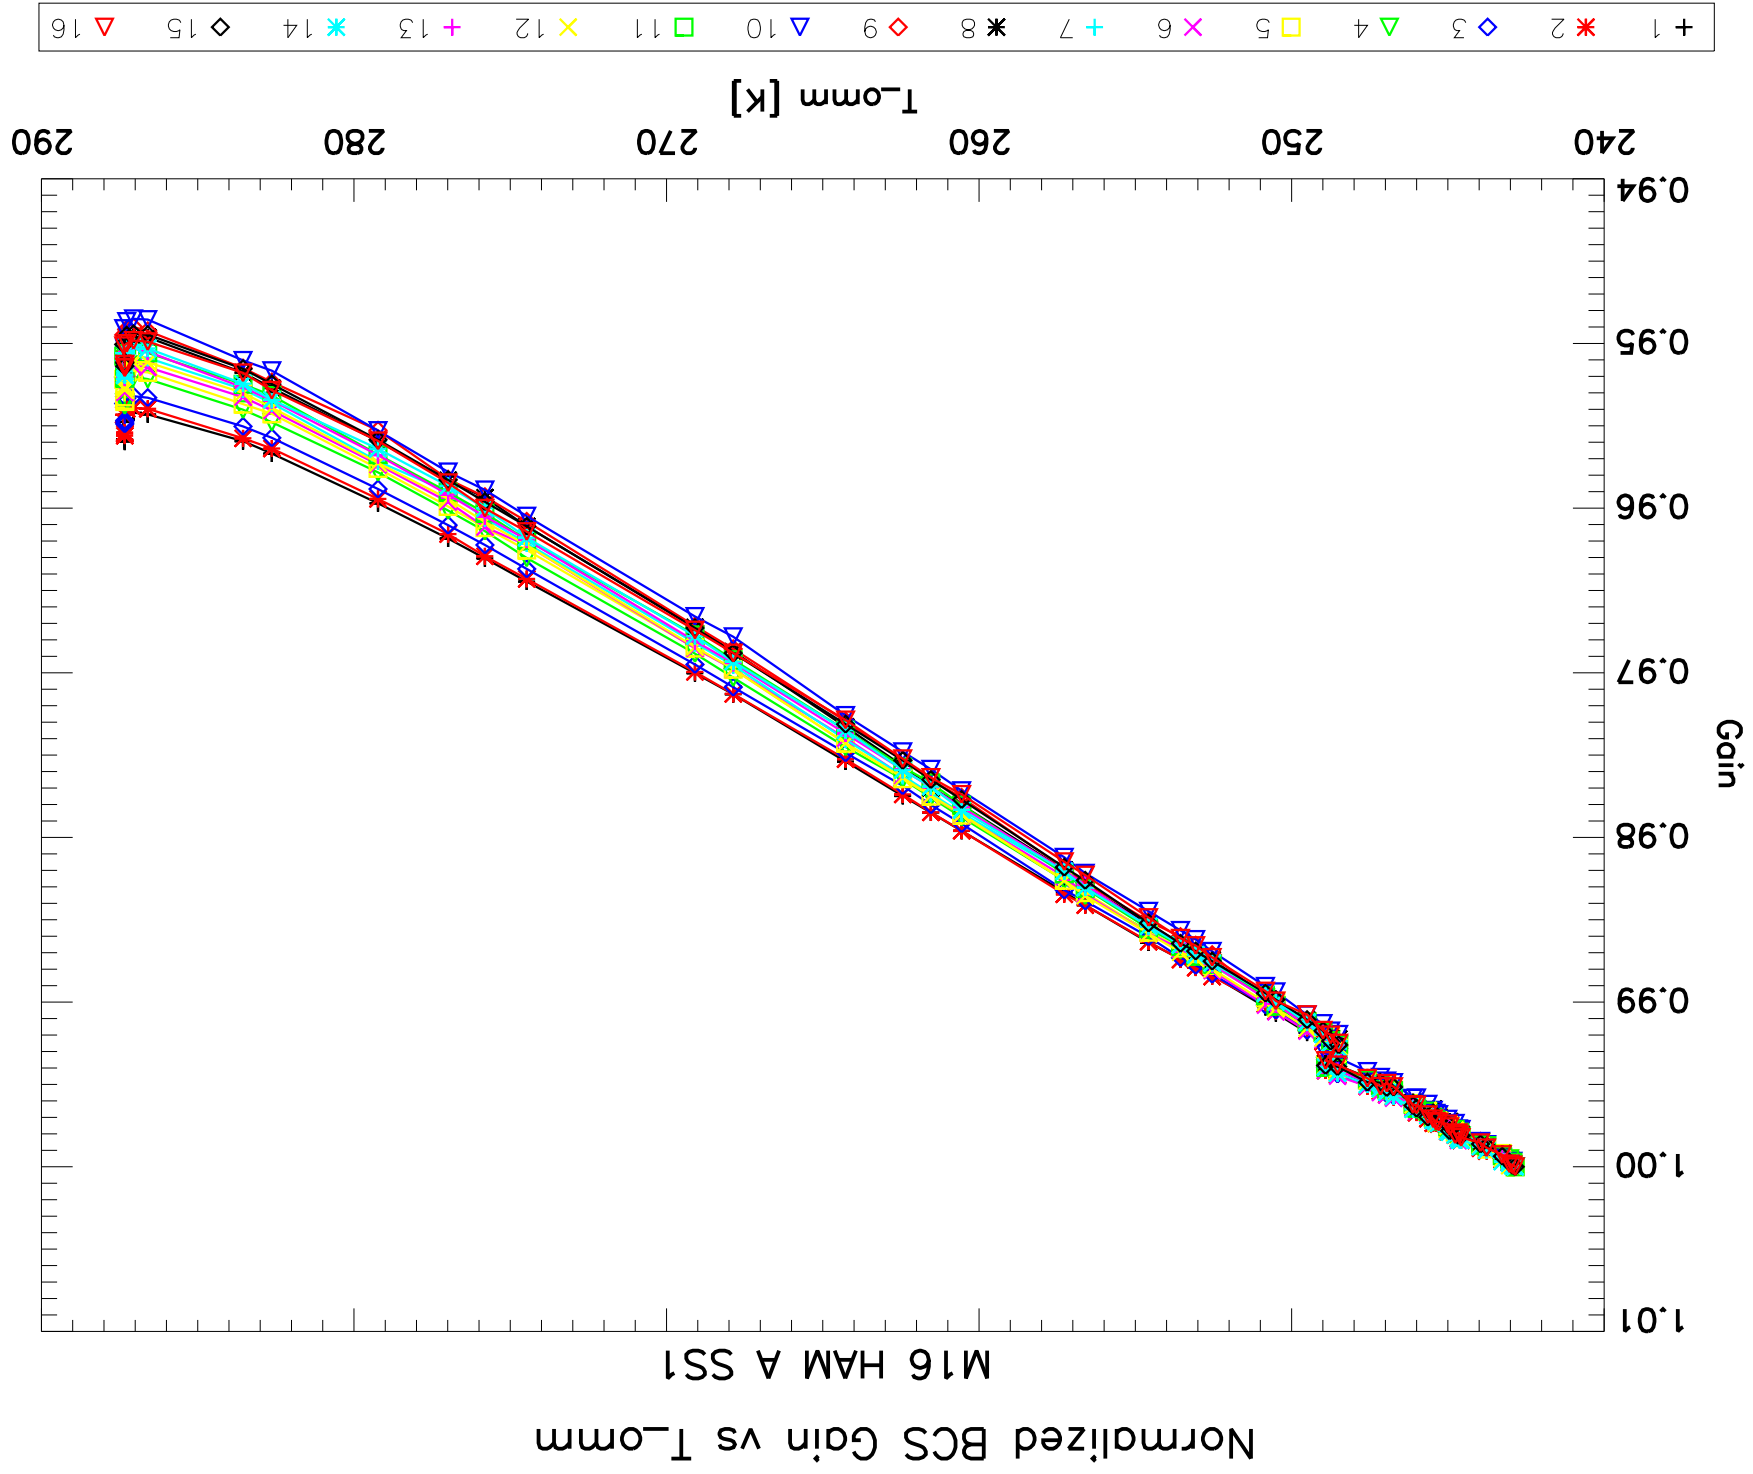

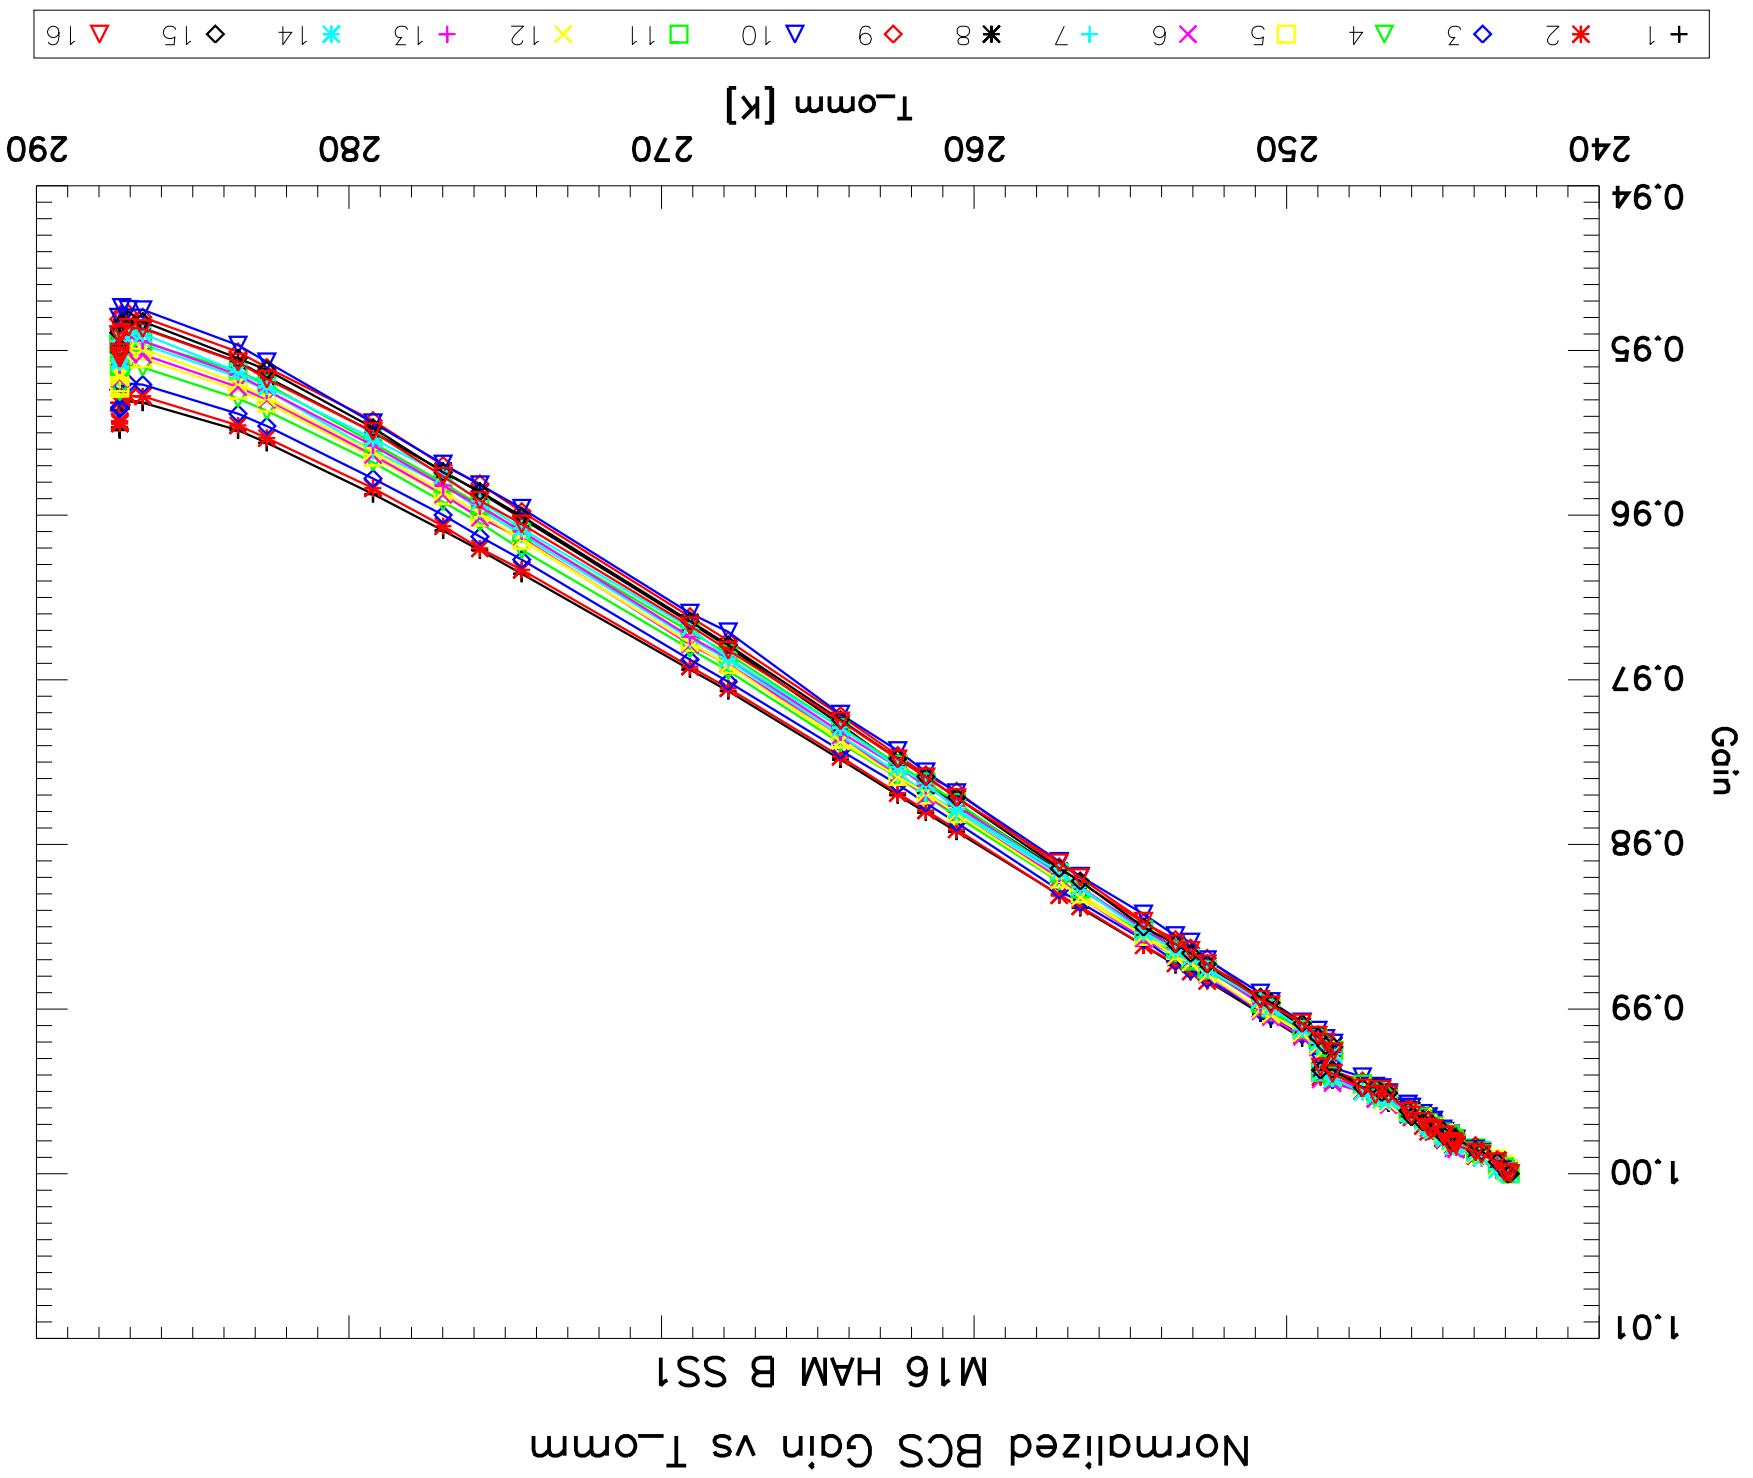



BCS NEDT vs T_{0mm}

14 HAM A SS1

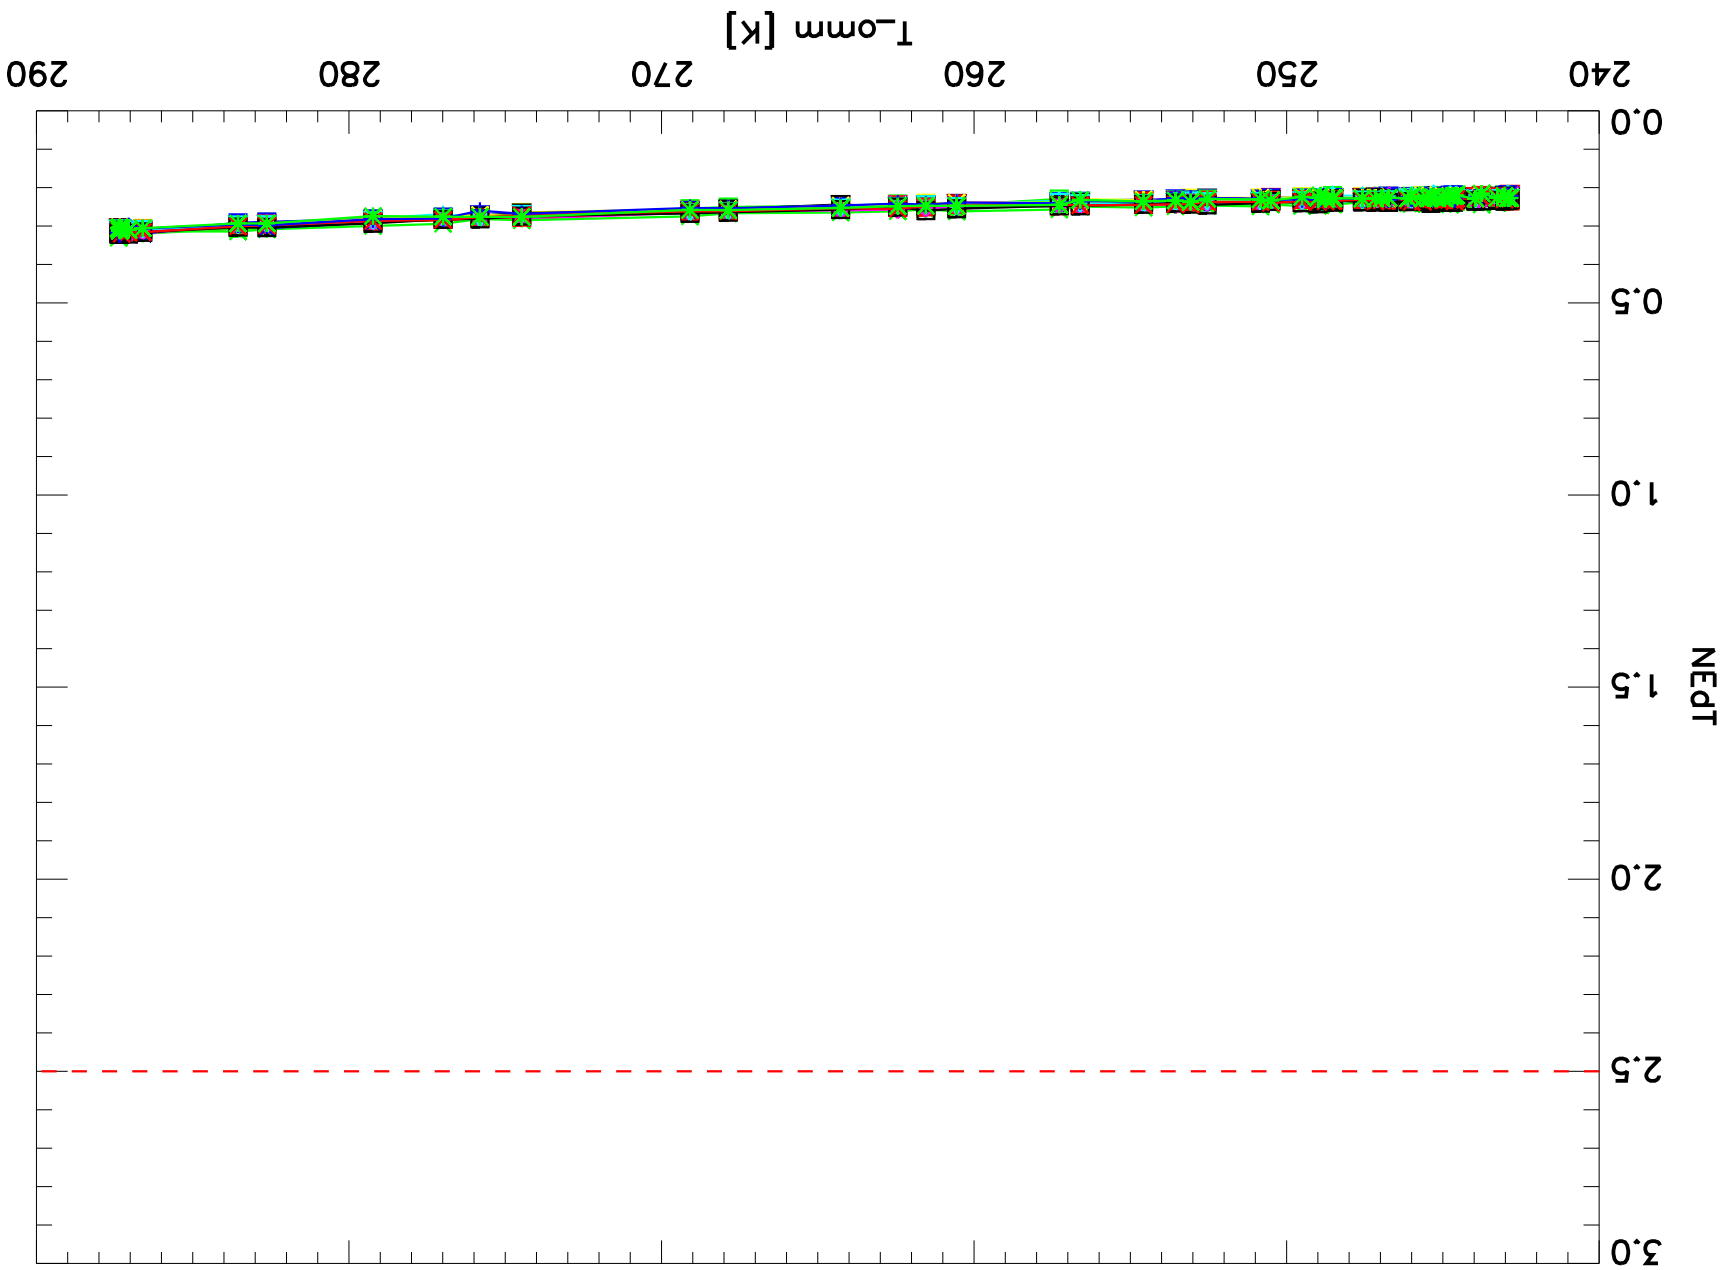



BCS NEDT vs T_{0mm}

14 HAM A SS2

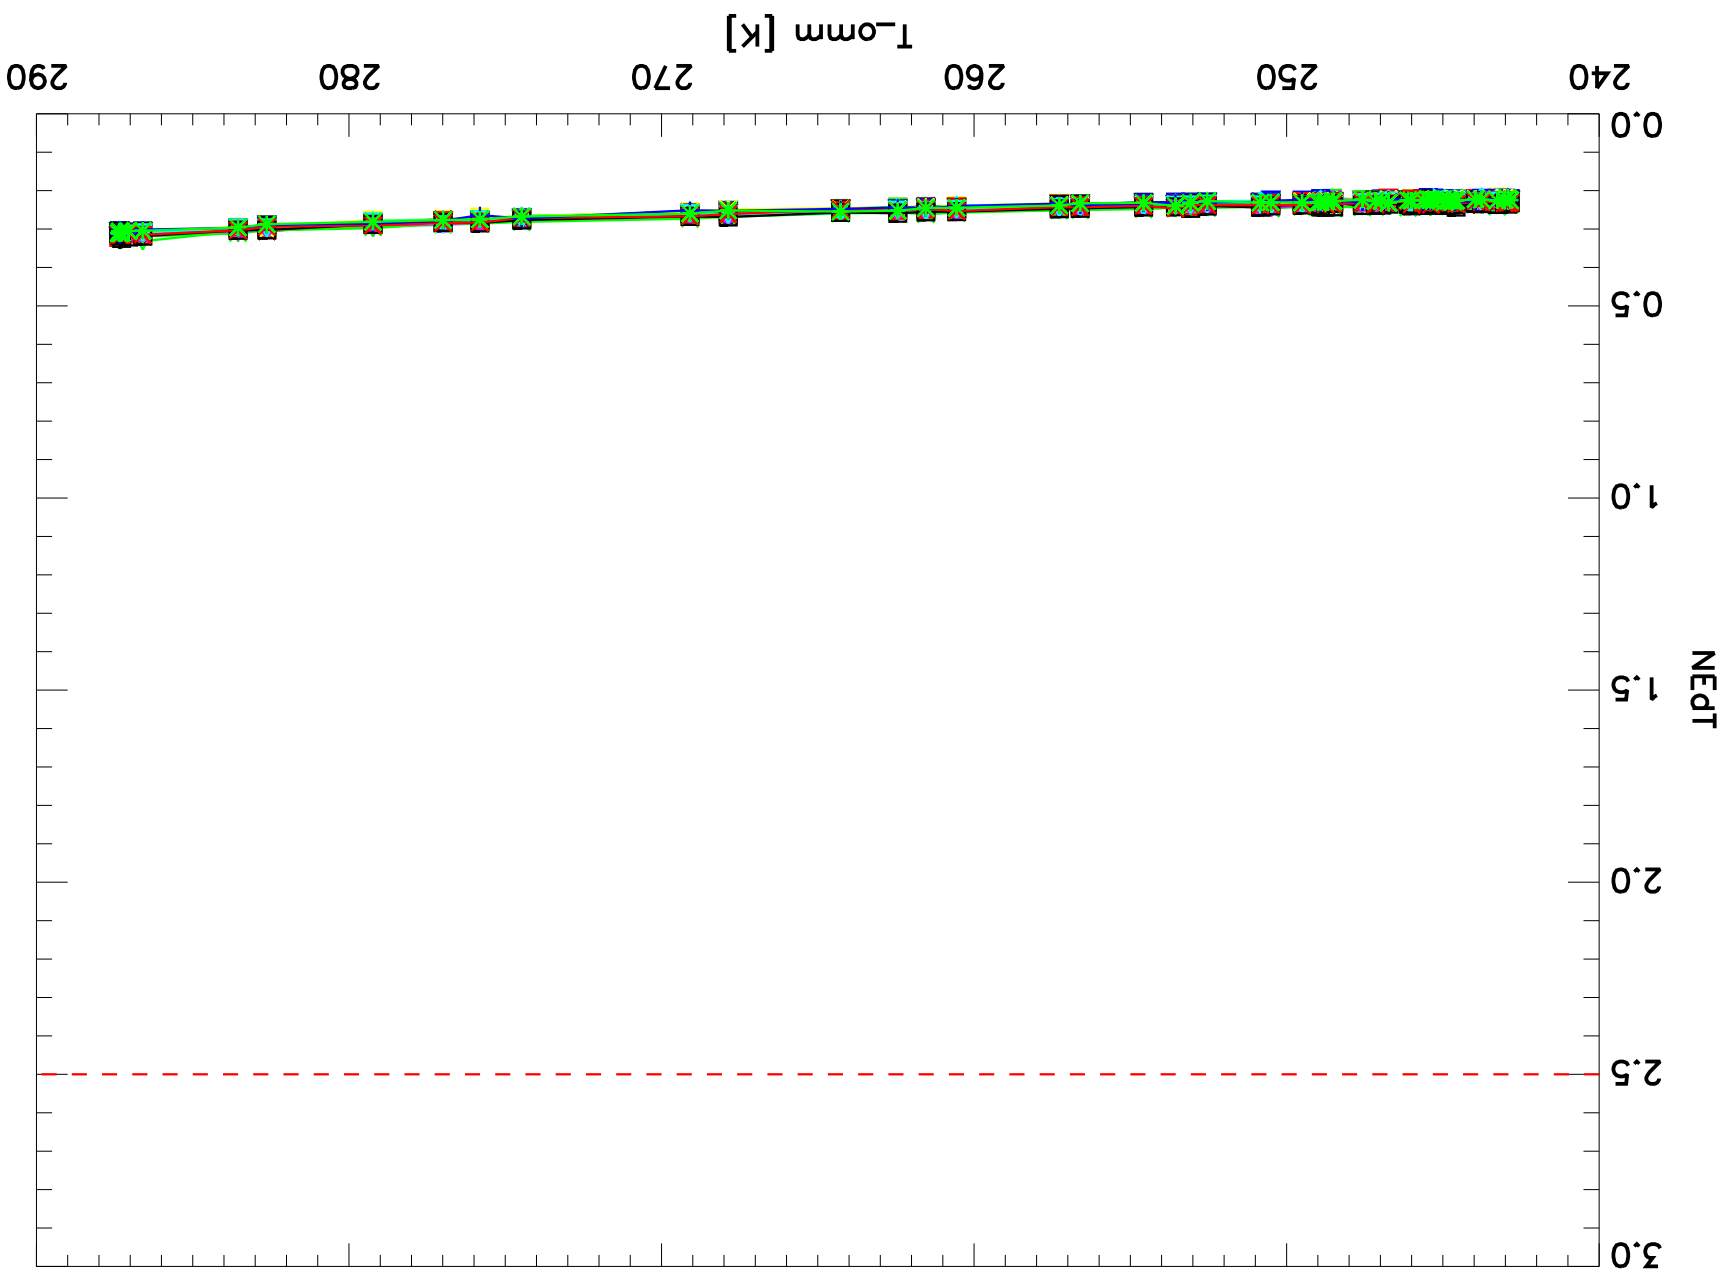



BCS NEDT vs T_{0mm}

14 HAM B SS1

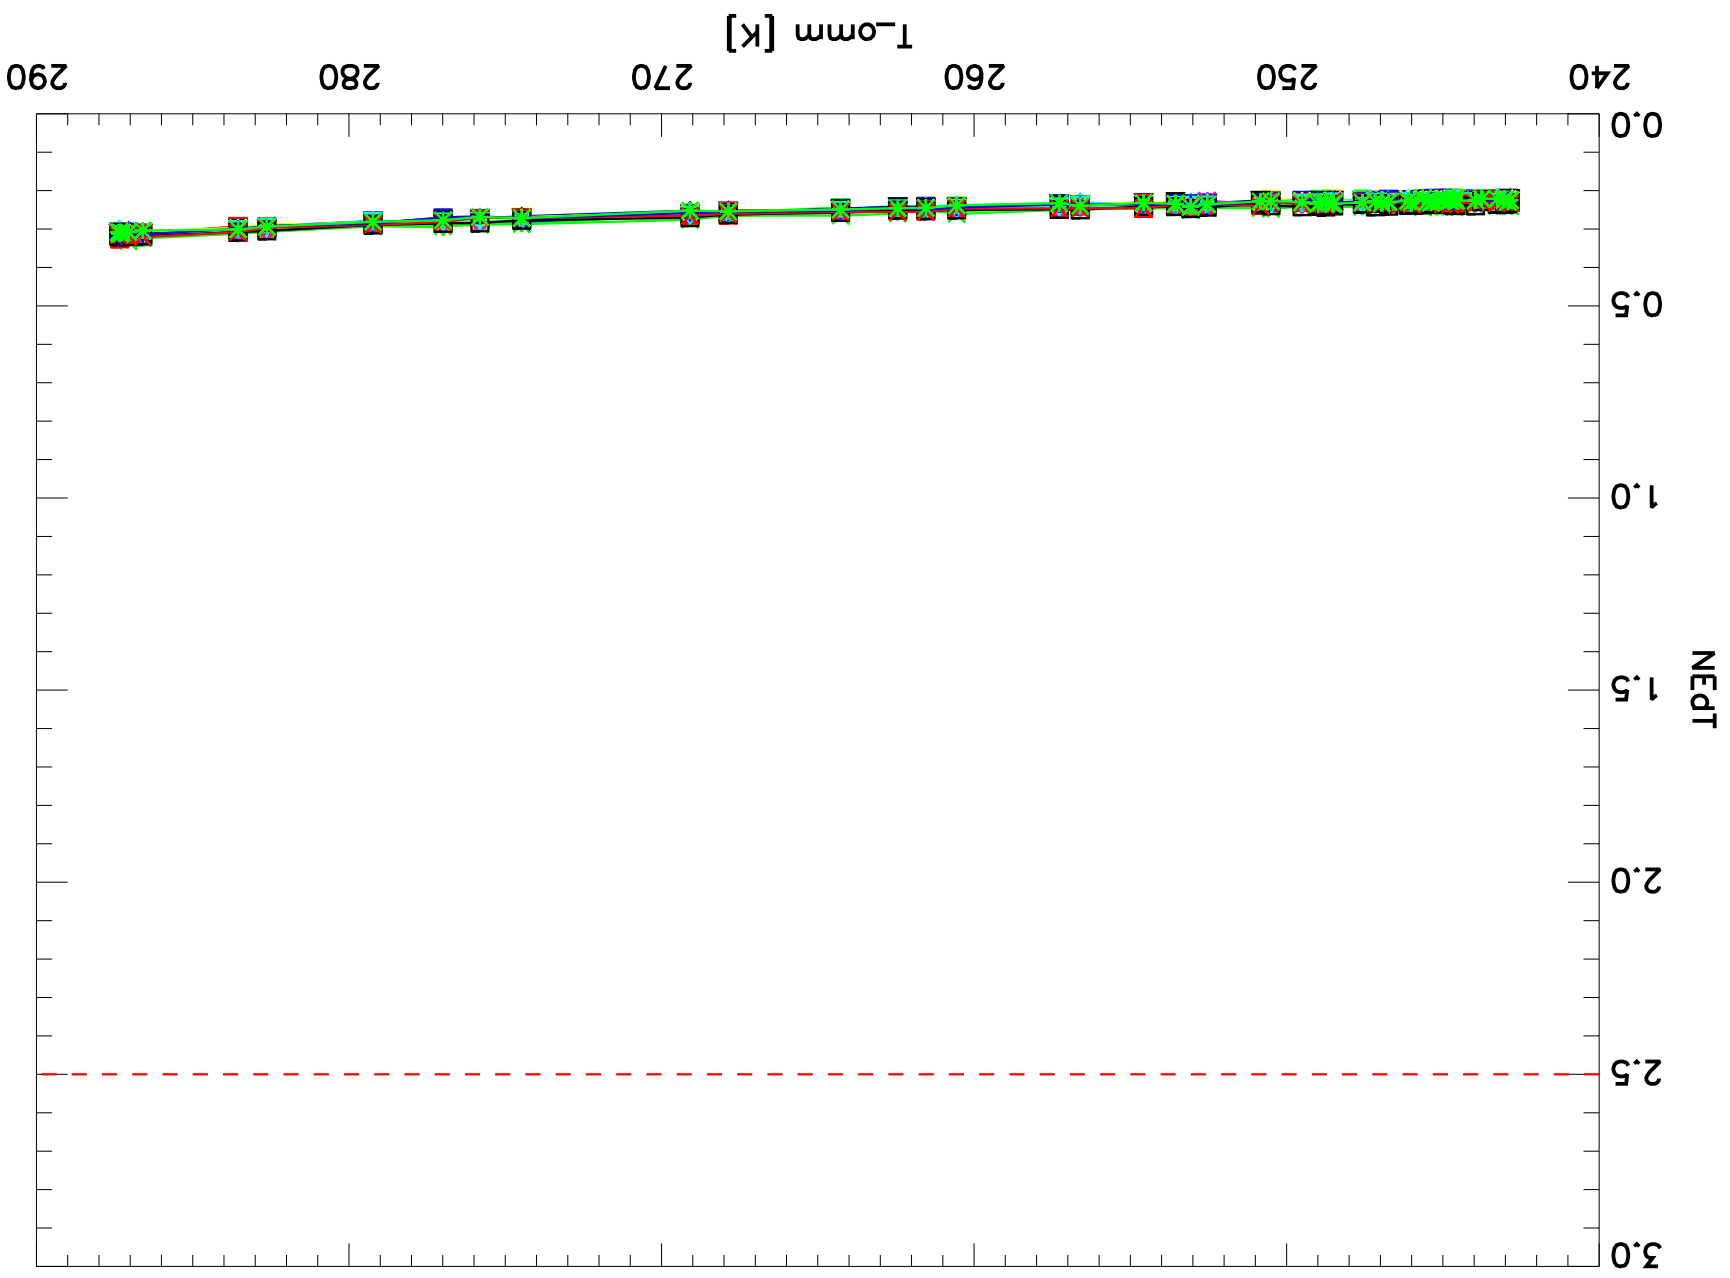



BCS NEDT vs T_{0mm}

14 HAM B SS2

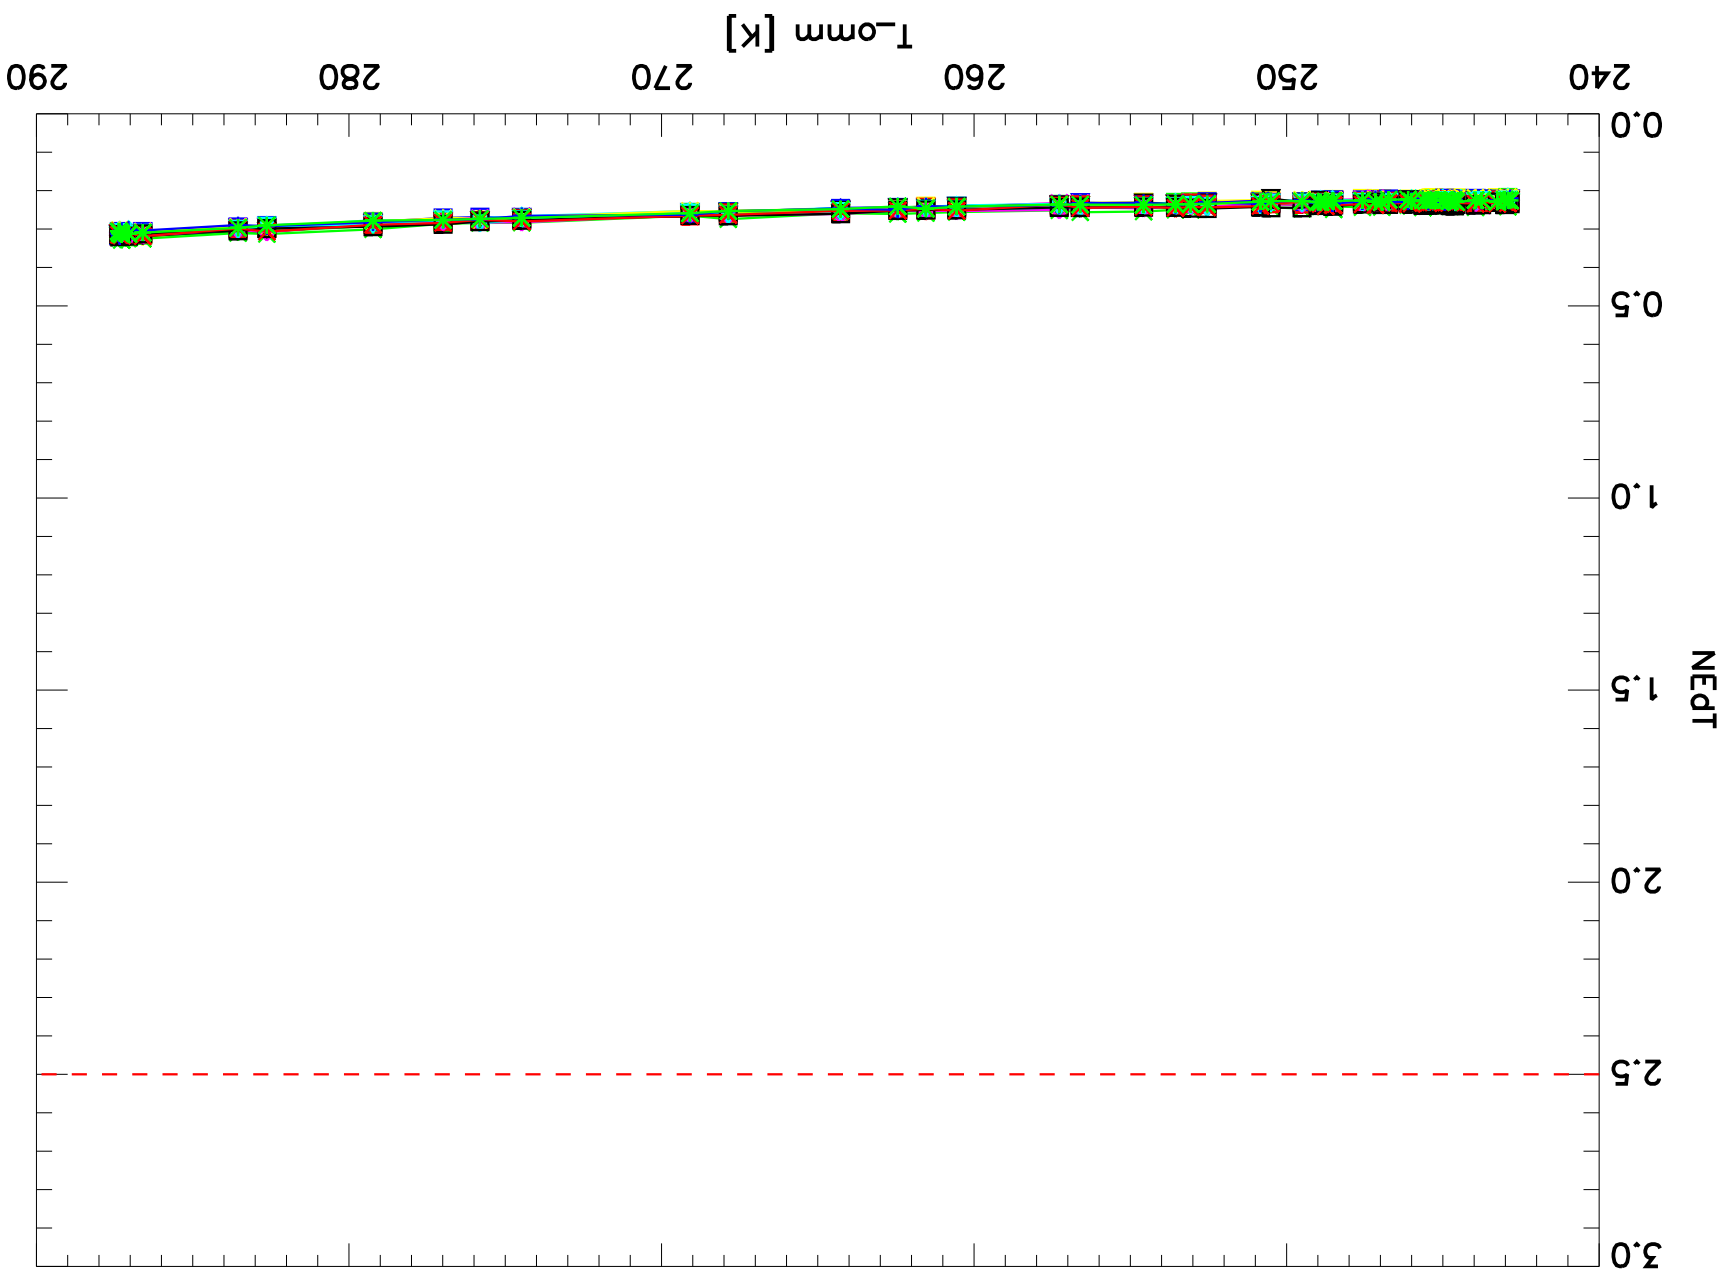



BCS NEDT vs T_{0mm}

IS HAM A SS1

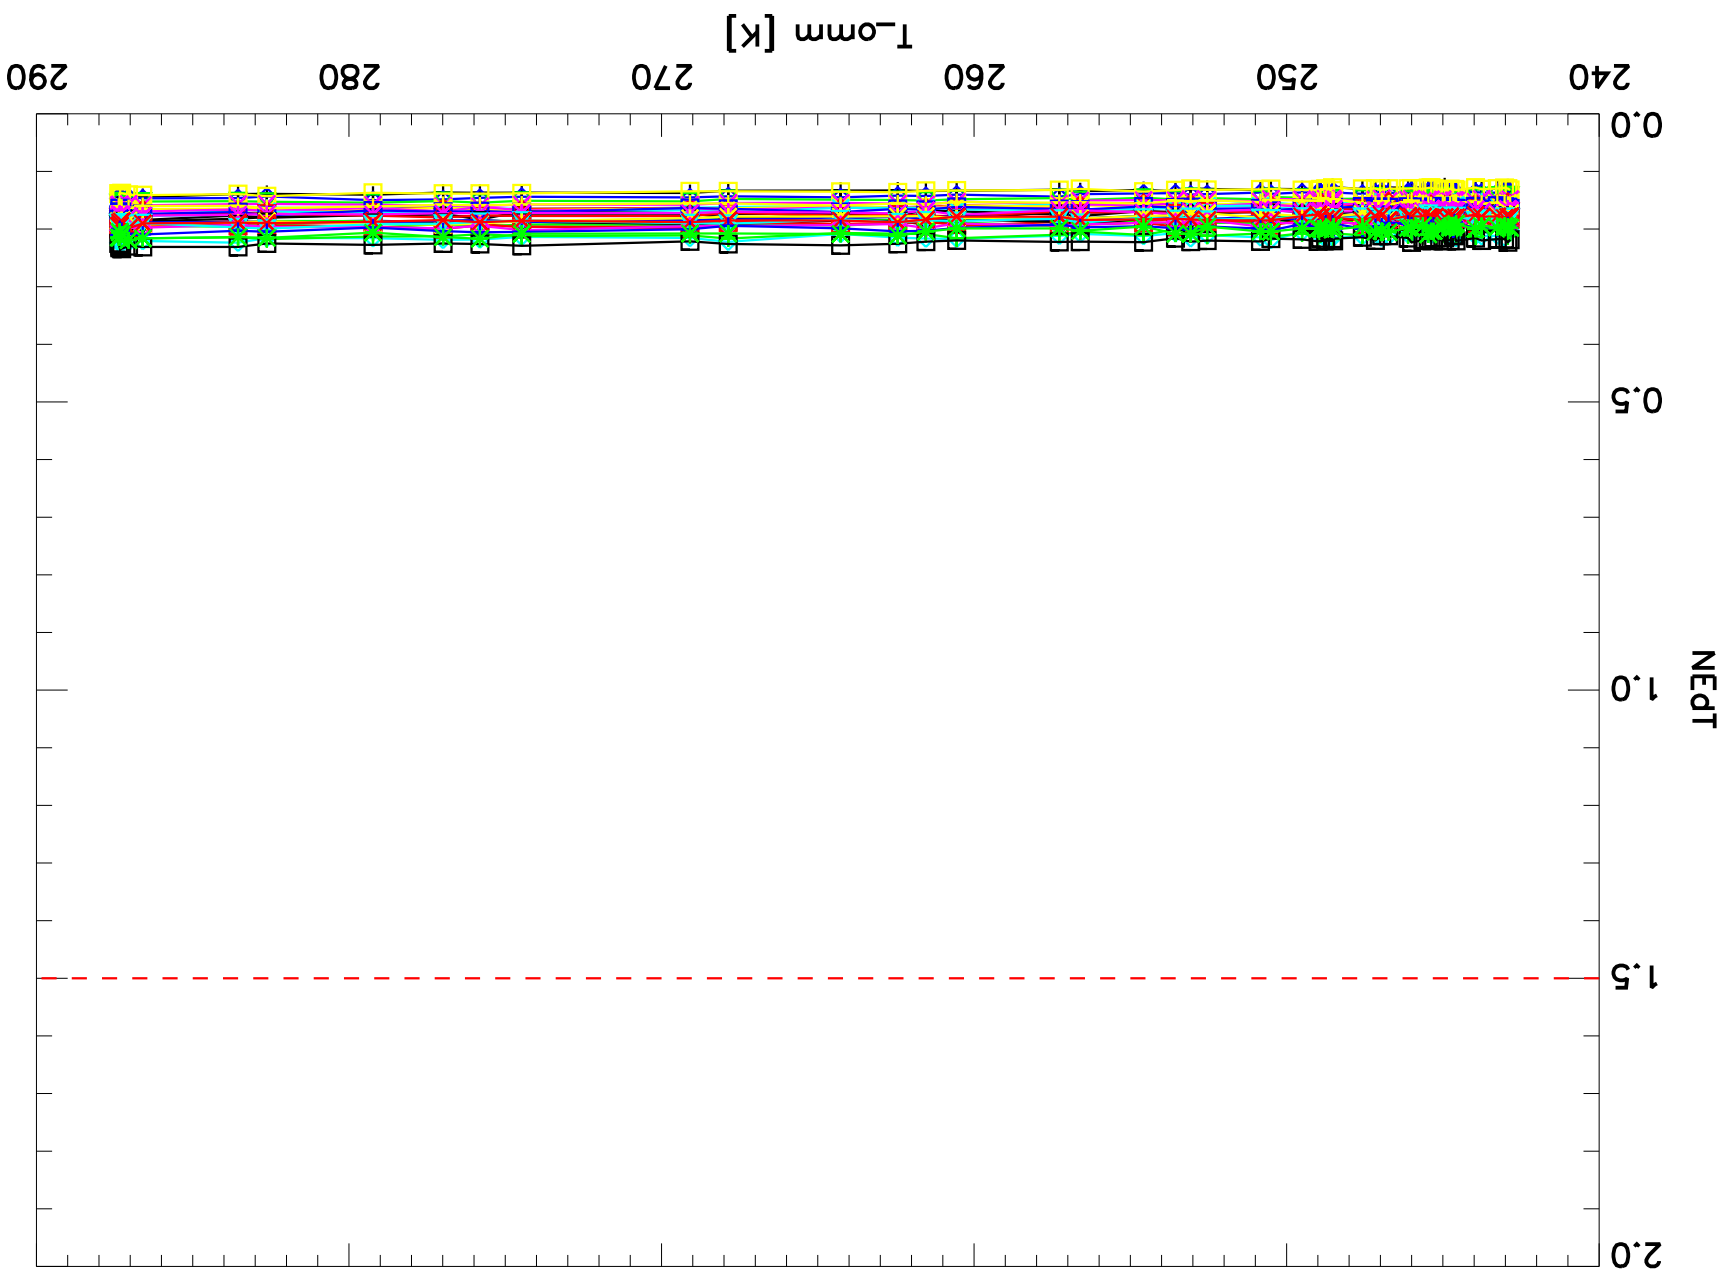



BCS NEDT vs T_{0mm}

IS HAM A SS2

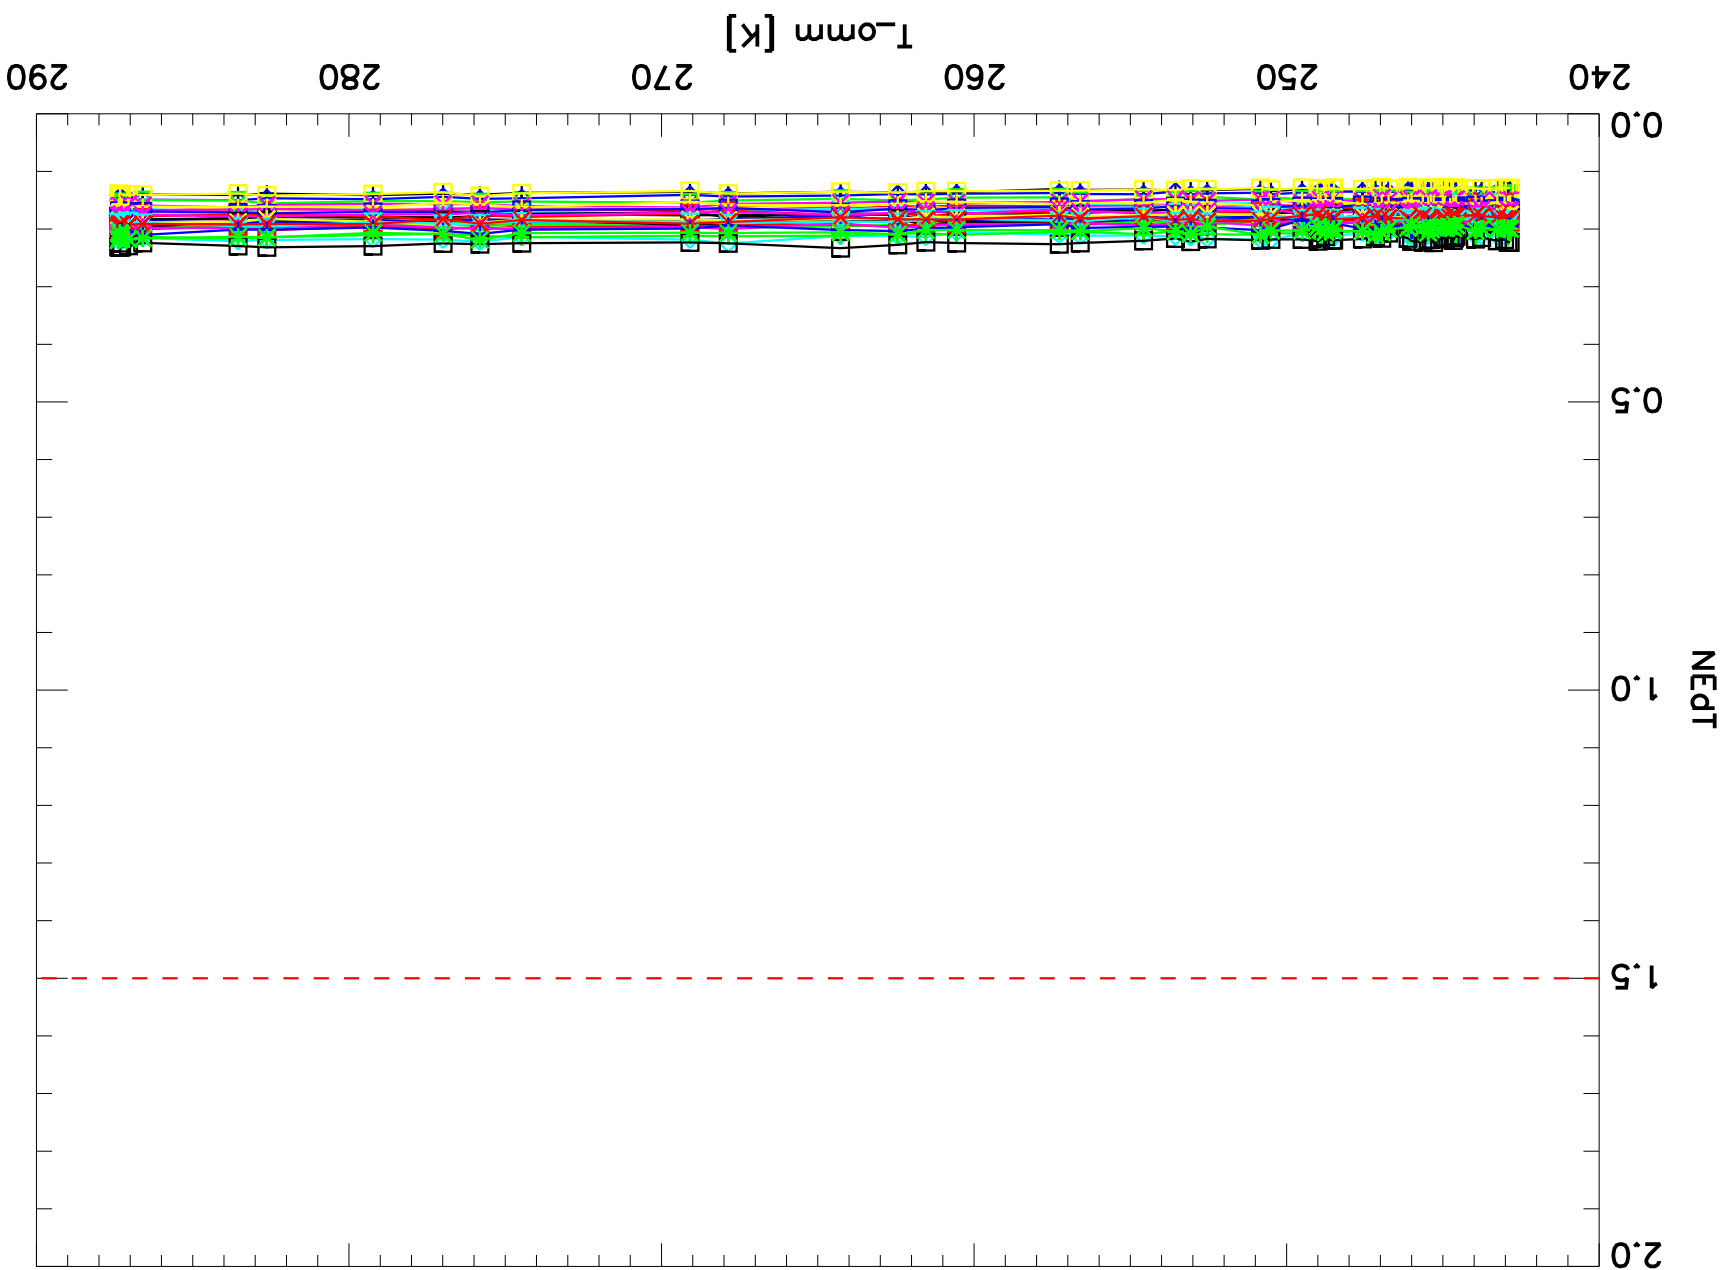



BCS NEDT vs T_{0mm}


IS HAM B SS1

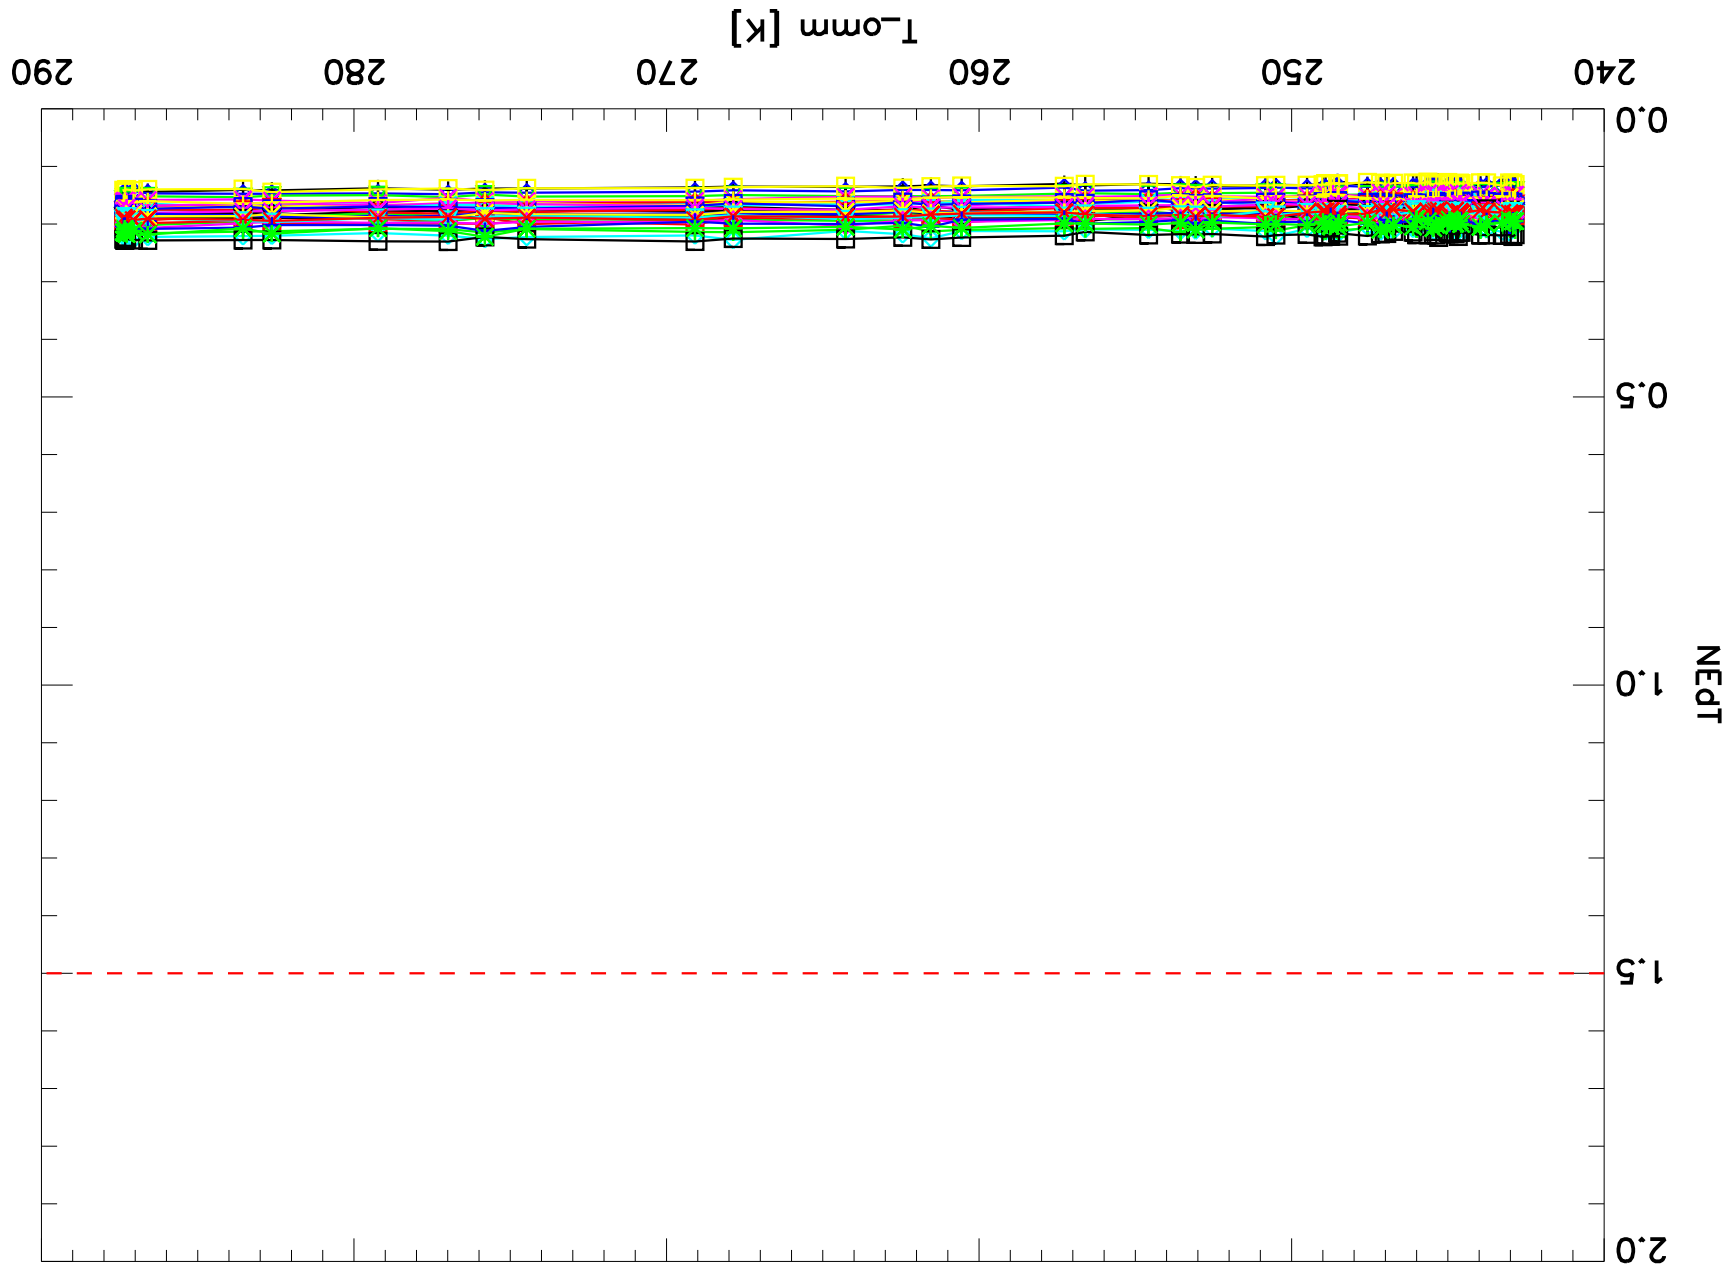

BCS NEDT vs T_{0mm}

15 HAM B SS2

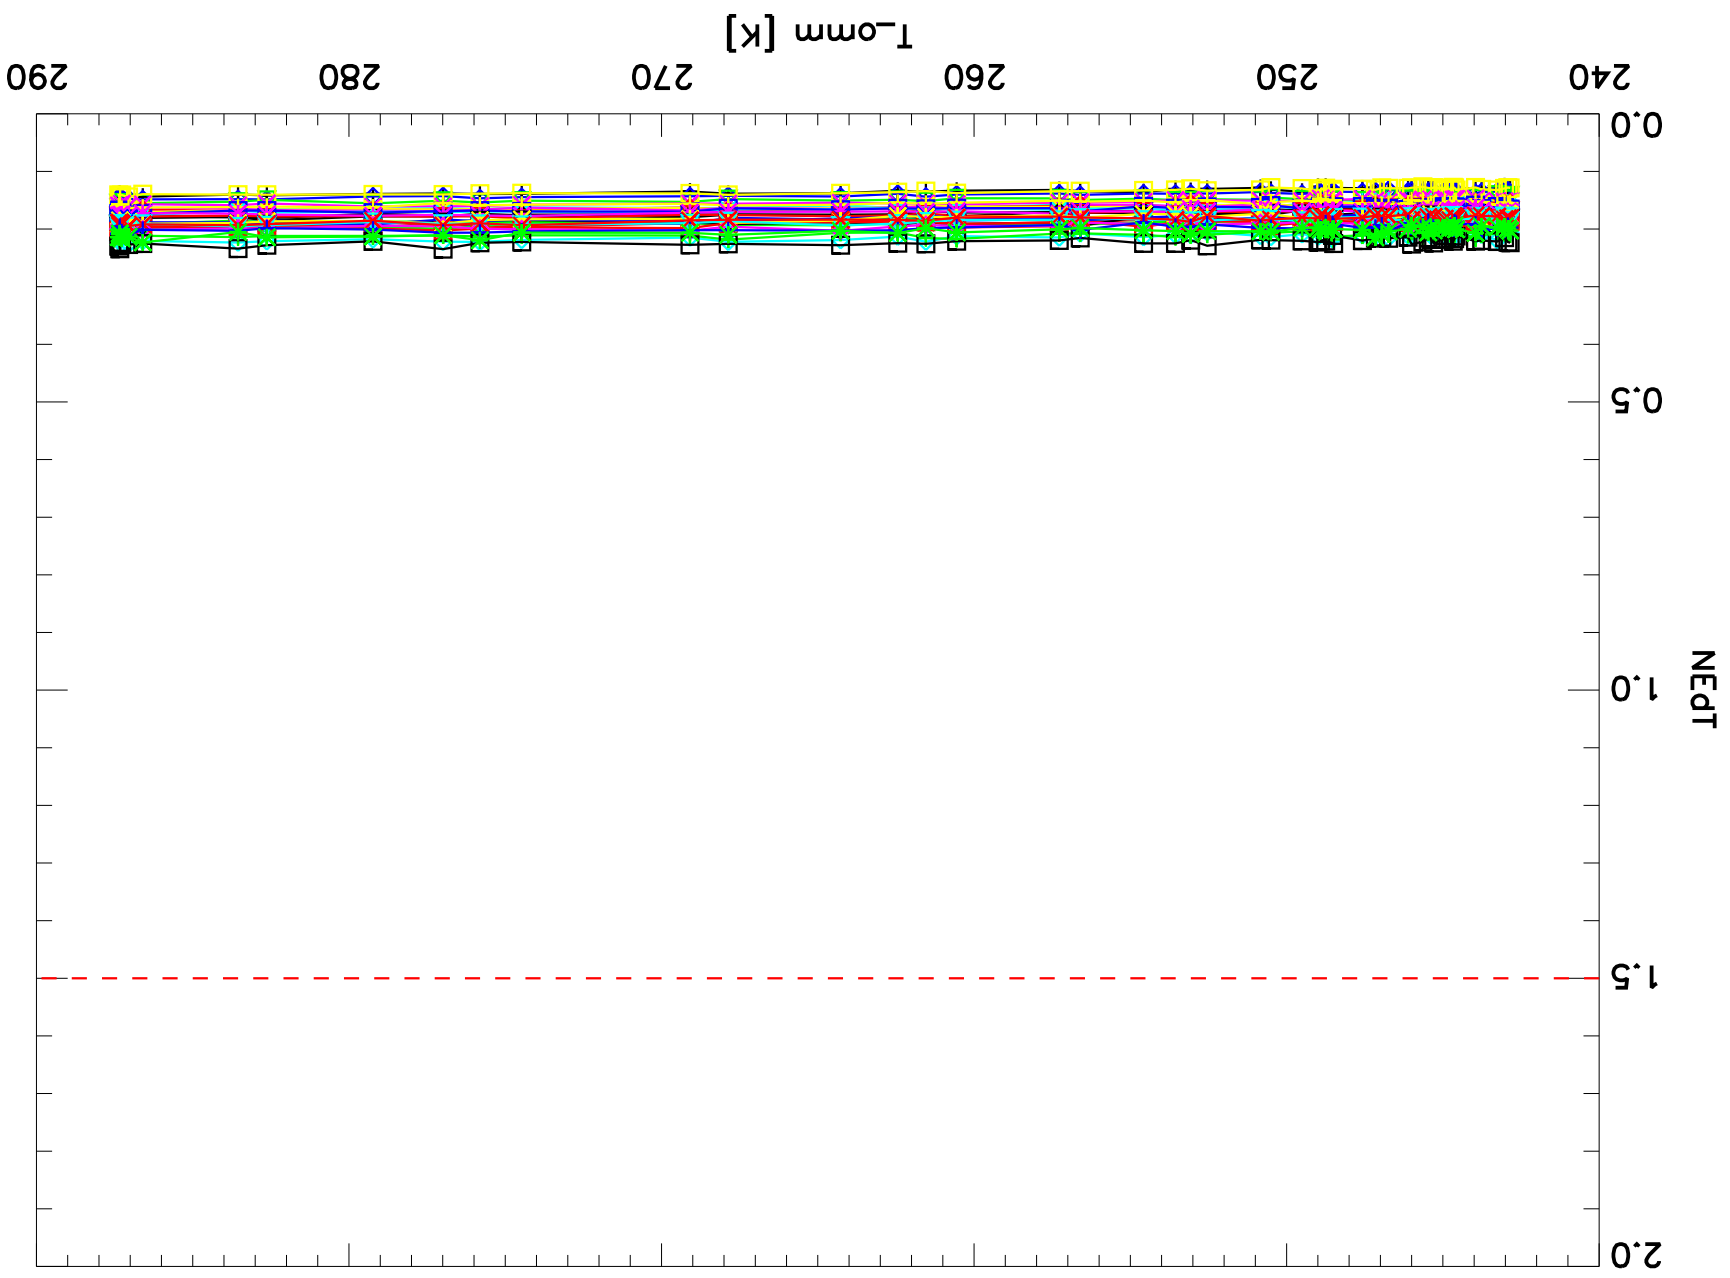

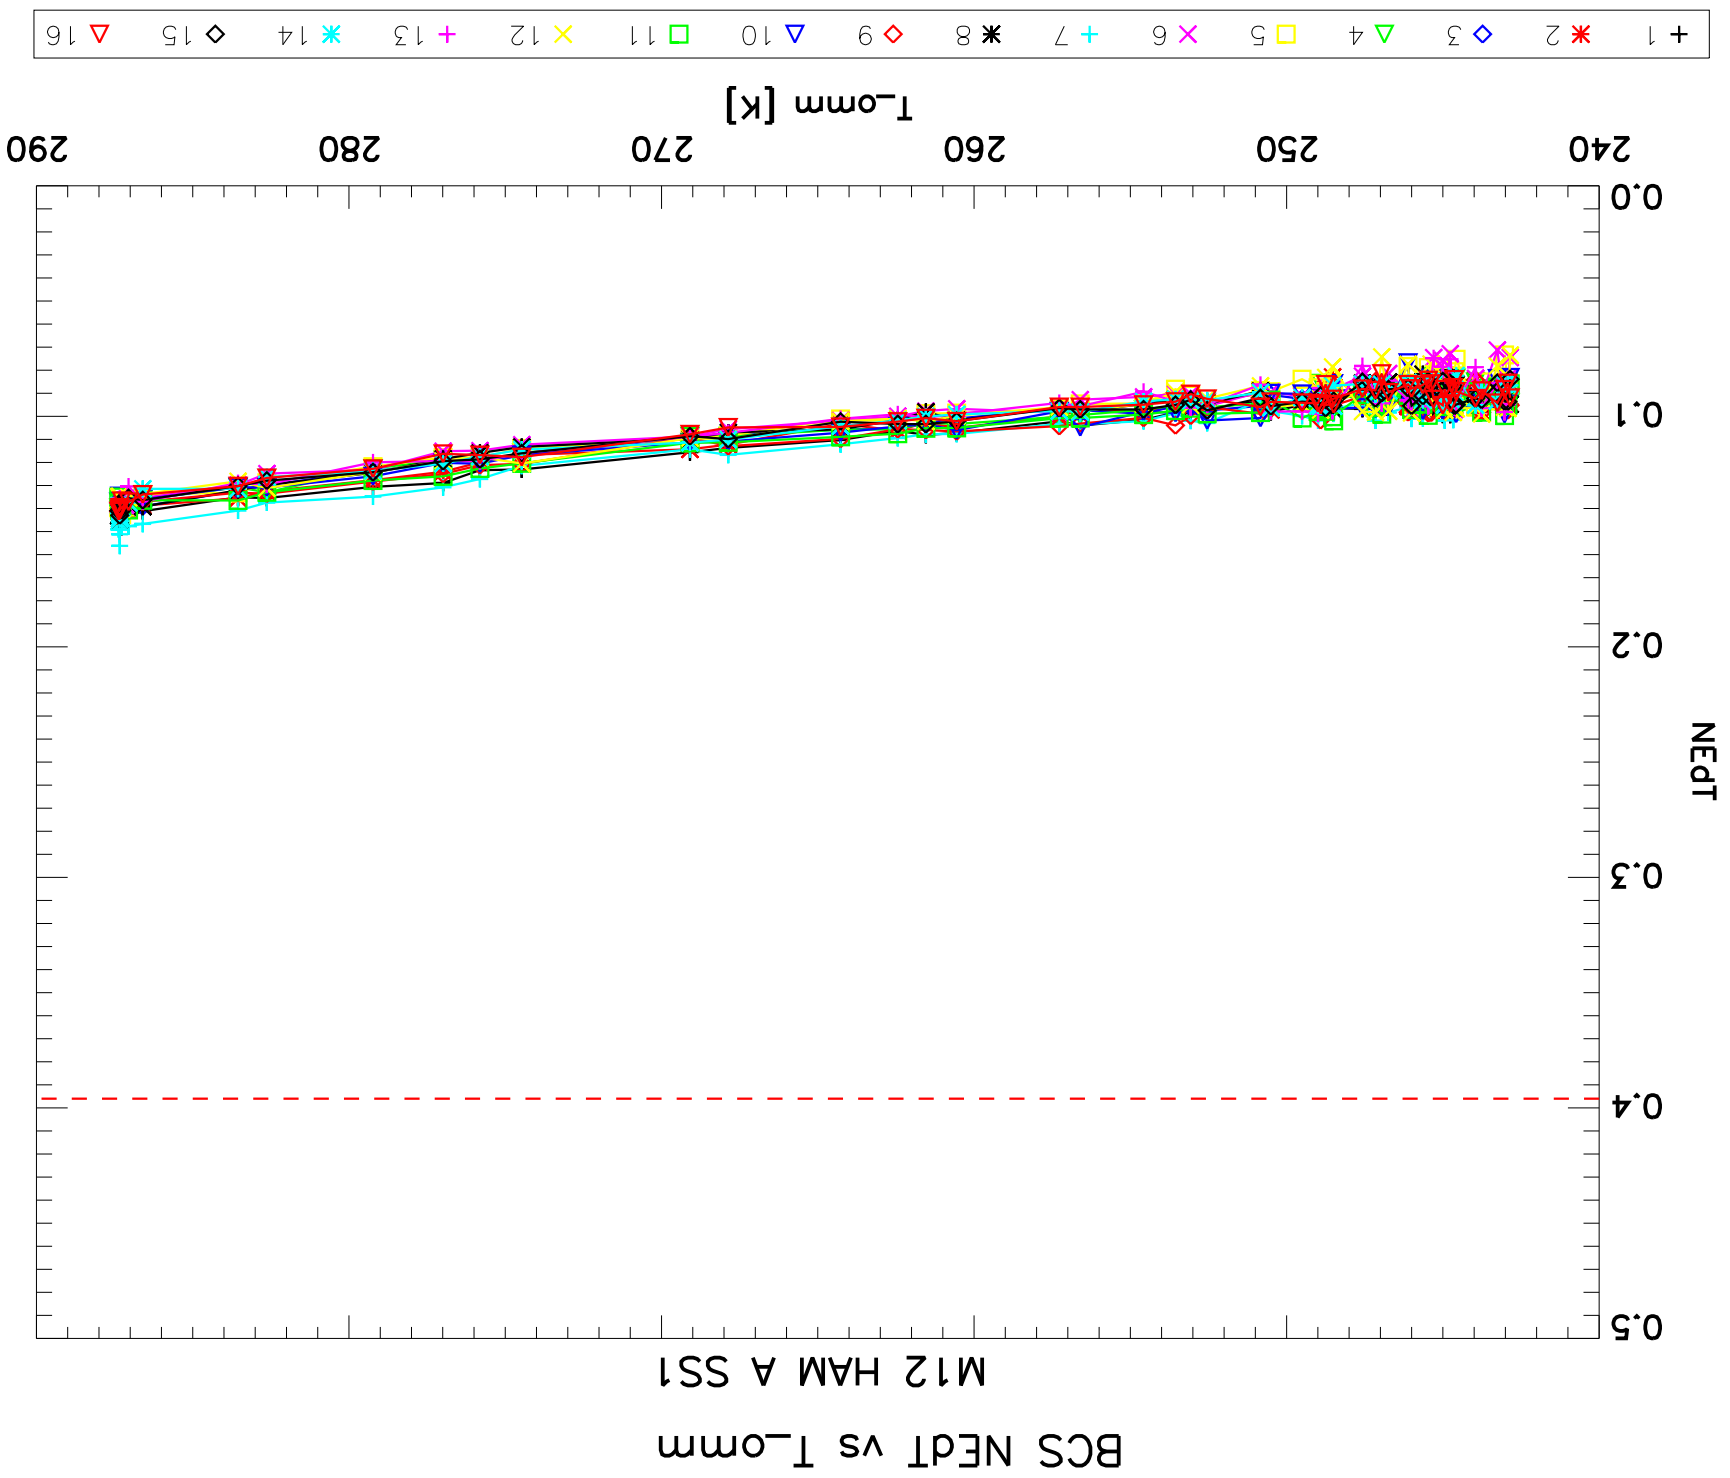

BCS NEDT vs T_{0mm}

M12 HAM B SS1

